

READ AND SAVE THESE INSTRUCTIONS

EVERDURE



**OPERATION, MAINTENANCE
AND SAFETY INSTRUCTIONS
EPPREPSTAND**



Scan for AU/NZ support

Due to ongoing product development,
images shown are subject to change without warning



Scan for USA support

CONTENTS

Important Safety Instructions3

Appliance Details3

Cleaning & Storage4

Parts List.....5

Assembly6-15

Warranty16

Note: In this instruction manual, the Everdure pizza station will be referred to as an appliance.

Read these instructions and follow steps carefully to ensure you assemble the appliance correctly and avoid damages. Check that all parts and hardware have been provided before assembling the appliance. Place all contents on a clean, soft-flat surface to avoid scratching the product.

IMPORTANT SAFETY INSTRUCTION:**WARNING:**

- **DO NOT** climb, step, or stand on the appliance or in the drawer.
- **DO NOT** use the appliance for any purpose other than that for which it is designed.
- **DO NOT** exceed the maximum weight for countertop 70kg (150lbs).
- **DO NOT** exceed the maximum weight for drawer 22.5kg (50lbs).
- Keep the appliance on a level surface. It may become unstable if stored or moved on a sloping surface and may cause personal injury, and/or damage to the appliance.
- Always apply the brakes once the appliance has been moved to the area.
- To prevent damage to threads, do not use a power tool and do not overtighten screws.
- Use two people to lift and to turn the appliance when assembling.
- Do not attempt assembly with one person.
- Keep all hardware and small parts away from children.
- When moving the appliance secure any items placed on top to prevent damage or personal injury.

APPLIANCE DETAILS:

EPPREPSTAND	LENGTH mm (in)	WIDTH (in)	HEIGHT (in)	WEIGHT kg (lb)	MAX TOP COUNTER WEIGHT kg (lb)
	1400 (55.11)	650 (25.19)	965 (37.99)	80 (176.36)	70 (155)

FIRST TIME USE:

Please wash by hand the stainless-steel top with small amount of soap and warm water before using for the first time. Don't forget to sanitise the surface area before use.

CLEANING / SANITISING

Cleaning is the process of using a detergent and water to remove residual food matter, dust, grease, dirt, stains and smelly odours from all surfaces, fixtures, utensils, and equipment.

Sanitising is the process of killing food poisoning bacteria by using heat and/or chemicals. This process must be used on food contact surfaces so that the number of bacteria is reduced to a level that is safe for food contact and does not allow infectious diseases to be passed on.

1. Remove dirt and food by sweeping, scraping, wiping, or rinsing with water.
2. Wash Use warm water and detergent.
3. Rinse off detergent and any remaining food or dirt.
4. Sanitise to eliminate/reduce microorganisms to safe levels.
5. Final Rinse off sanitiser if needed.
6. Dry Air dry or use a single use towel or clean tea towel.

! Cleaning and Sanitising are generally separate processes. A surface should be thoroughly cleaned before sanitising. Sanitising is not as effective if a surface is still dirty, or detergents are still present.







STORAGE:


When the appliance is not in use, it can be stored outdoors, but **MUST** be under cover and covered (preferably with a purpose made cover) out of the weather ensuring the cutting surfaces are clean and dry before storing away.

PACKAGING:

- Remove all external packaging and remove the appliance from the packaging before use.
- Removal all internal cartons and packaging from within the appliance assembly.
- Recycle as per local government laws

PARTS LIST:

	D Bolt M4*10 30 PCS
	B Spacer Ø12 22 PCS
	C Bolt M6*16 10 PCS
	E Spacer Ø18 10 PCS
	A Screw M8*34 18 PCS
	E Spacer Ø18 18 PCS

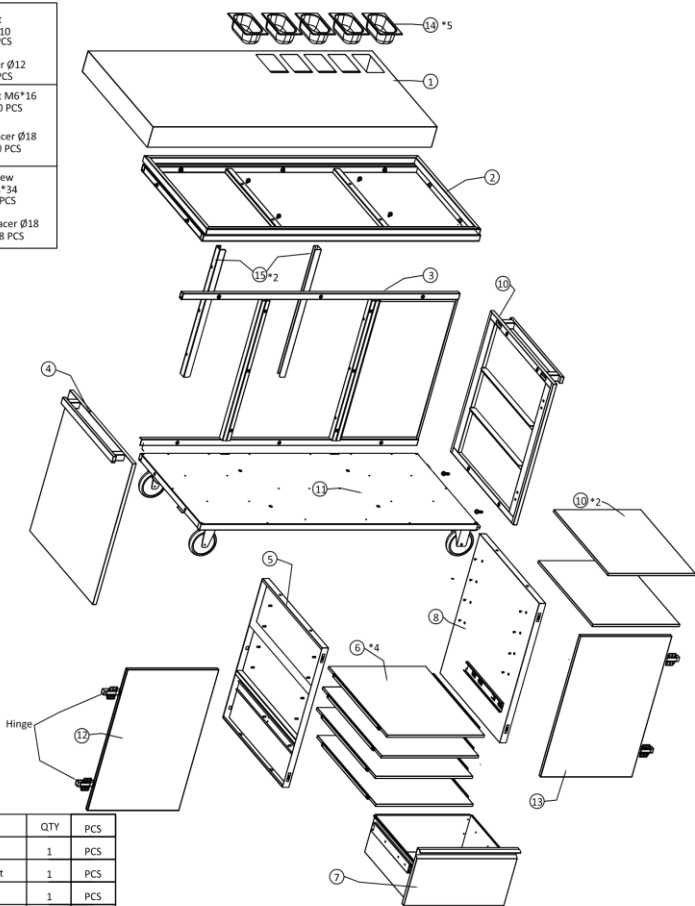





NO.	Part Name	QTY	PCS
1	Table top	1	PCS
2	Table top support	1	PCS
3	Back panel	1	PCS
4	Left panel	1	PCS
5	Middle panel from left	1	PCS
6	Center drawing plate	4	PCS
7	Drawer	1	PCS
8	Center drawing plate	1	PCS
9	Right drawing plate	1	PCS

NO.	Part Name	QTY	PCS
11	Base panel	1	PCS
12	Left side door hook	1	PCS
13	Right panel	1	PCS
14	Mini -box	5	PCS
15	Drawer plate baffle	2	PCS

Please contact Everdure for any spare part related inquires.


Step 1:

Connect part ③ to the back side of part ⑪ with (A)E*3pcs

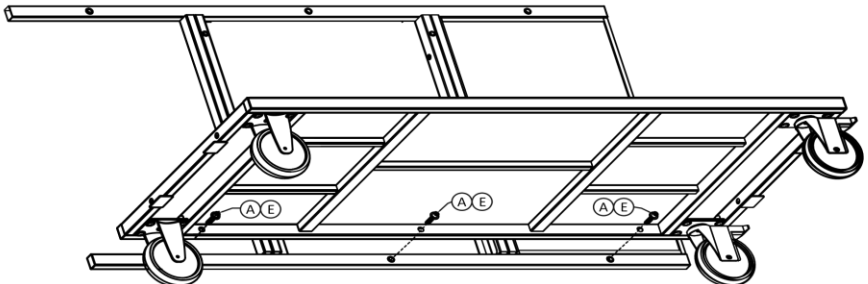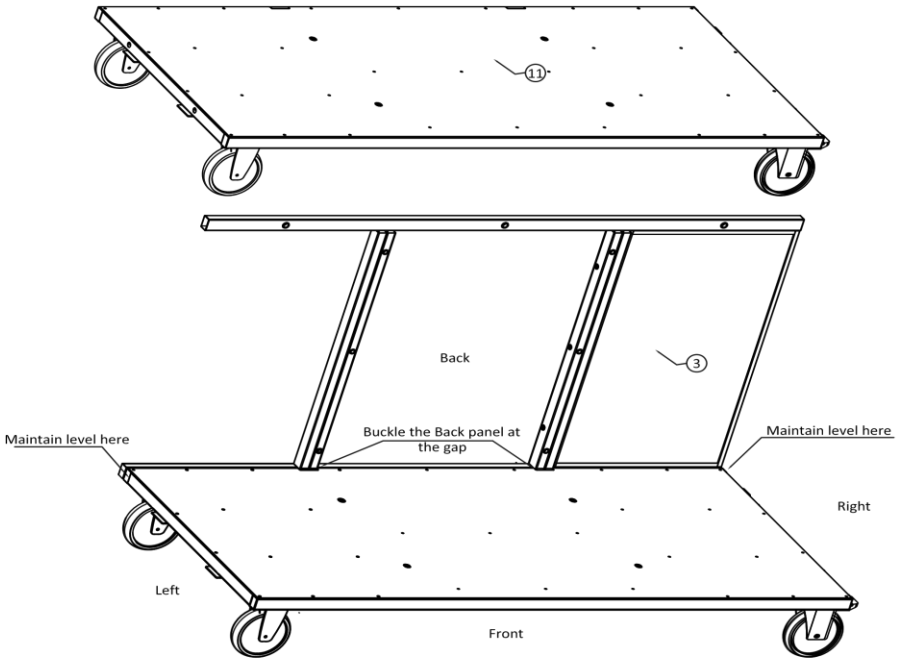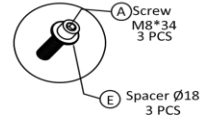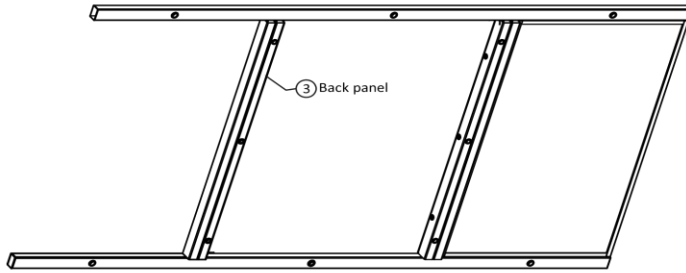


Step 2:

Connect part (10) to the right side of part (11) with (A) (E) *2pcs

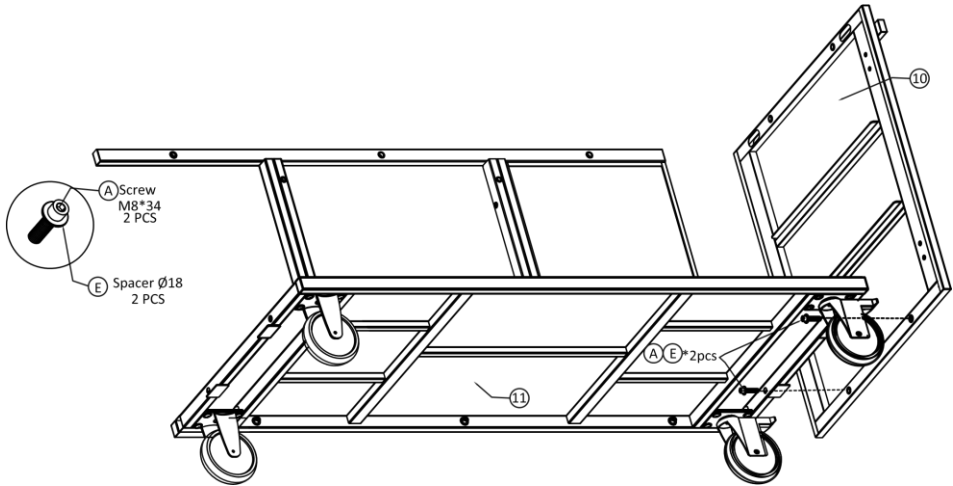



Step 3:

Connect part (4) to the left side of part (11) with (A) (E) *2pcs

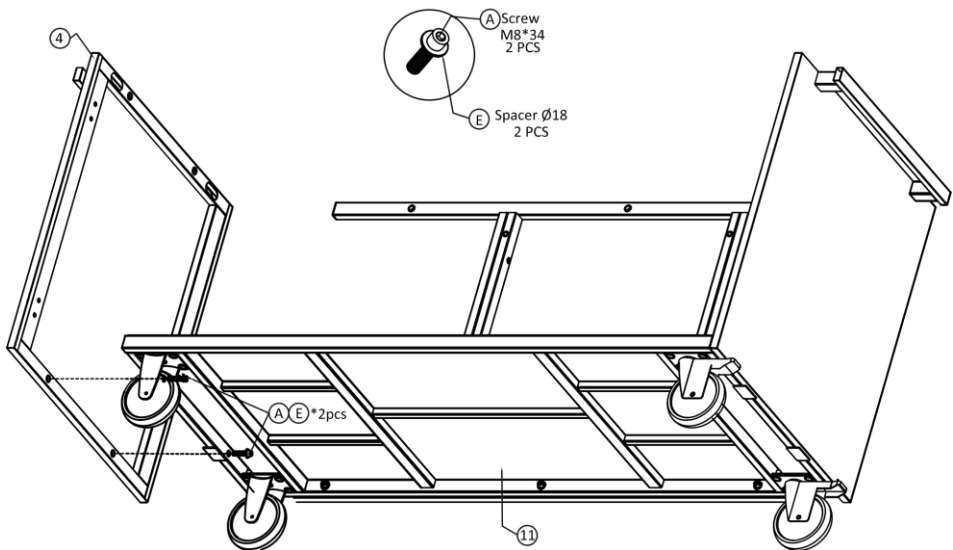



Step 4:

Connect part (8) to the right side of part (3/11) with (C/E) *5pcs

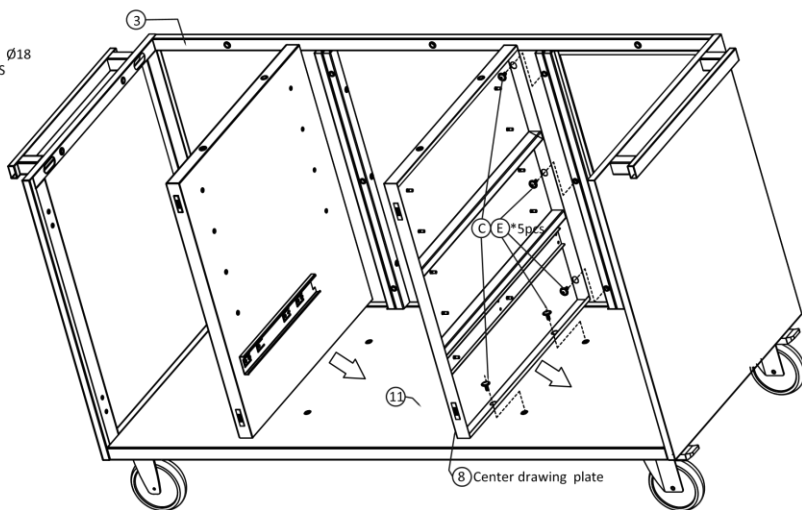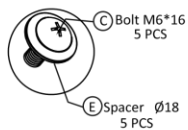


Step 5:

Connect part (5) to the right side of part (3/11) with (C/E) *5pcs

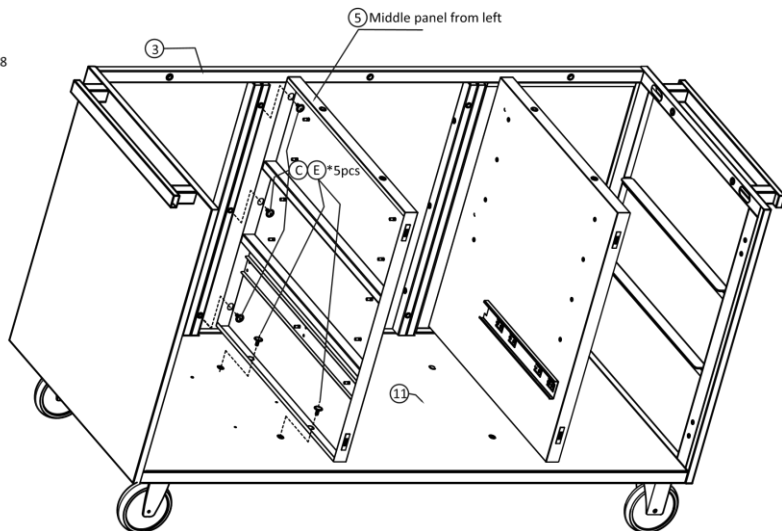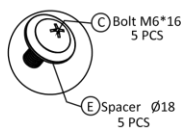


Step 6:


Connect part ② to the top side of part ③④⑤ with ①⑤*11pcs

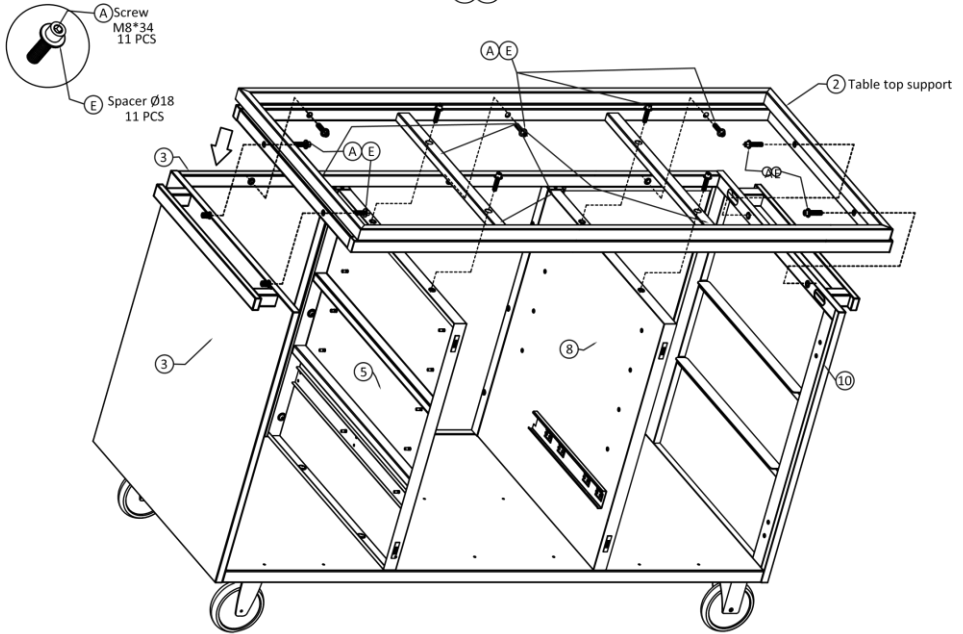


Step 7:

Connect part ⑥ *4pcs to the inner side of part ⑤⑧ with ⑦④*16pcs

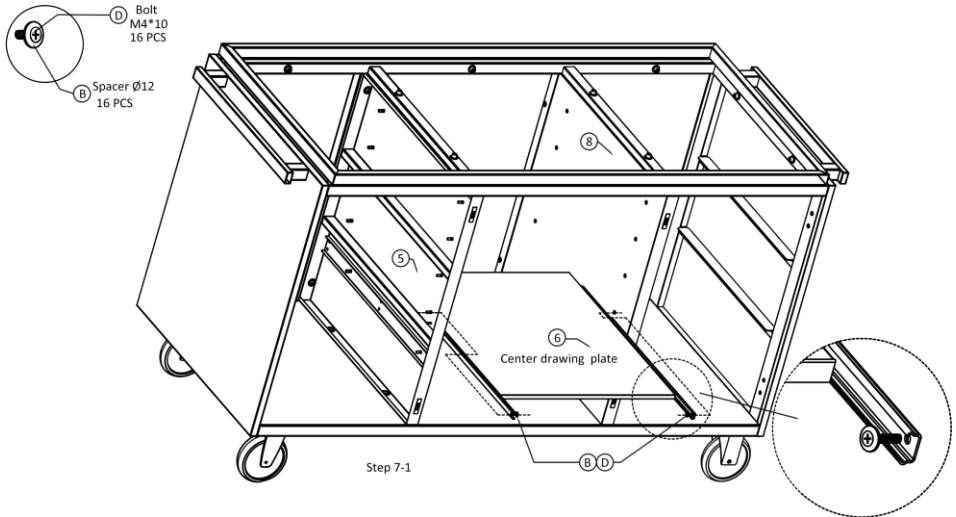

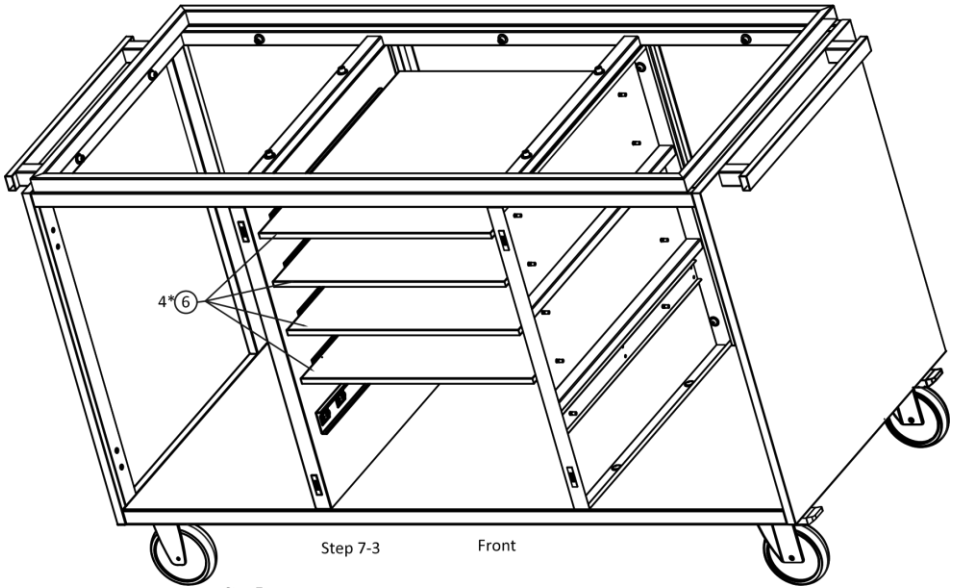


Step 7:
Connect part 6 *4pcs to the inner side of part 5/8 with B/D *16pcs

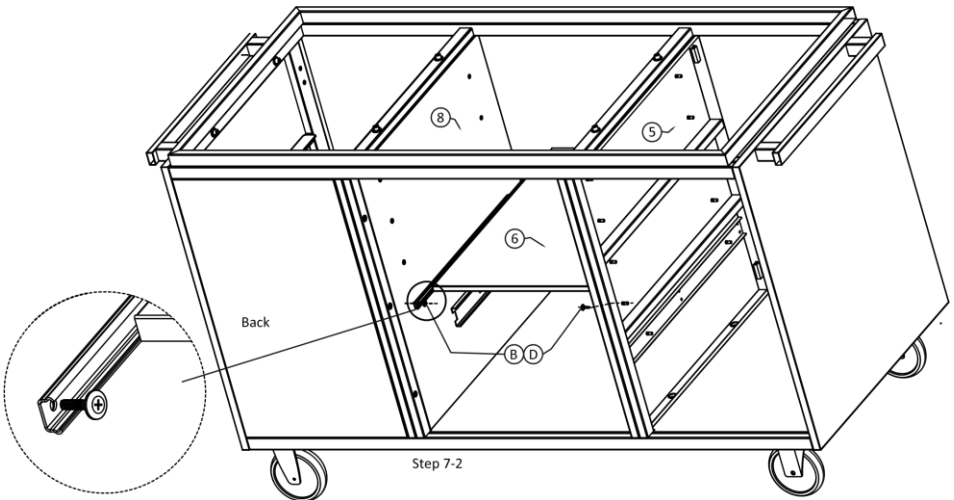

Step 8:

Insert part ⑨ *2 to the inner side of part ⑩ ⑧

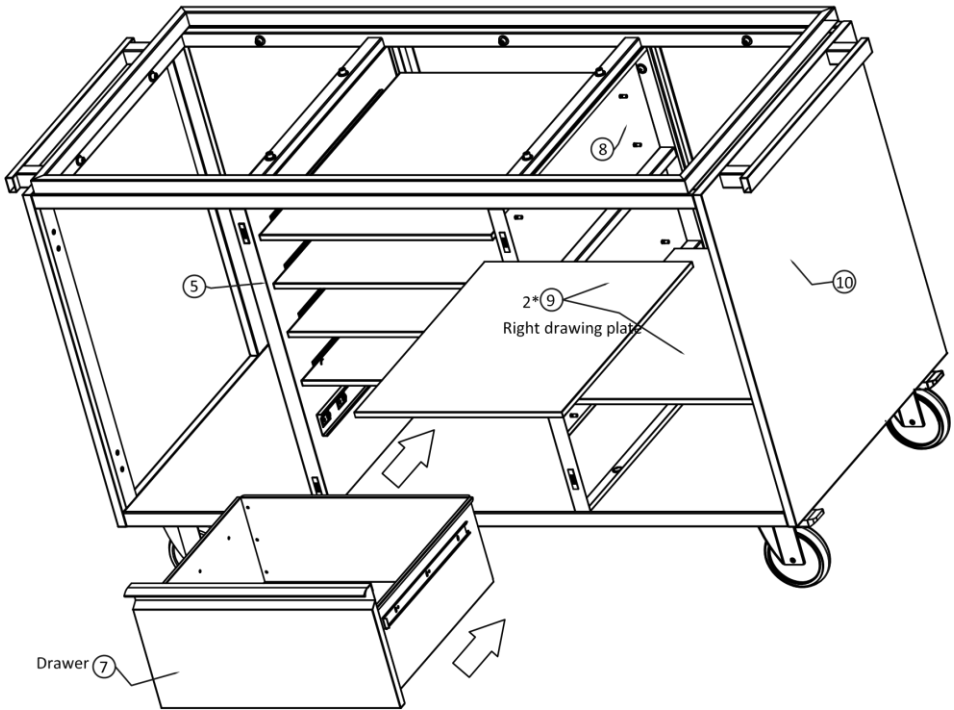
**Step 9:**

Insert part ⑦ to the inner side of part ⑤ ⑧


Step 10:


Connect part 15 *2 to the middle side of part 3 with (D) (B) *6pcs

- (D) Bolt M4*10 6PCS
- (B) Spacer Ø12 6 PCS

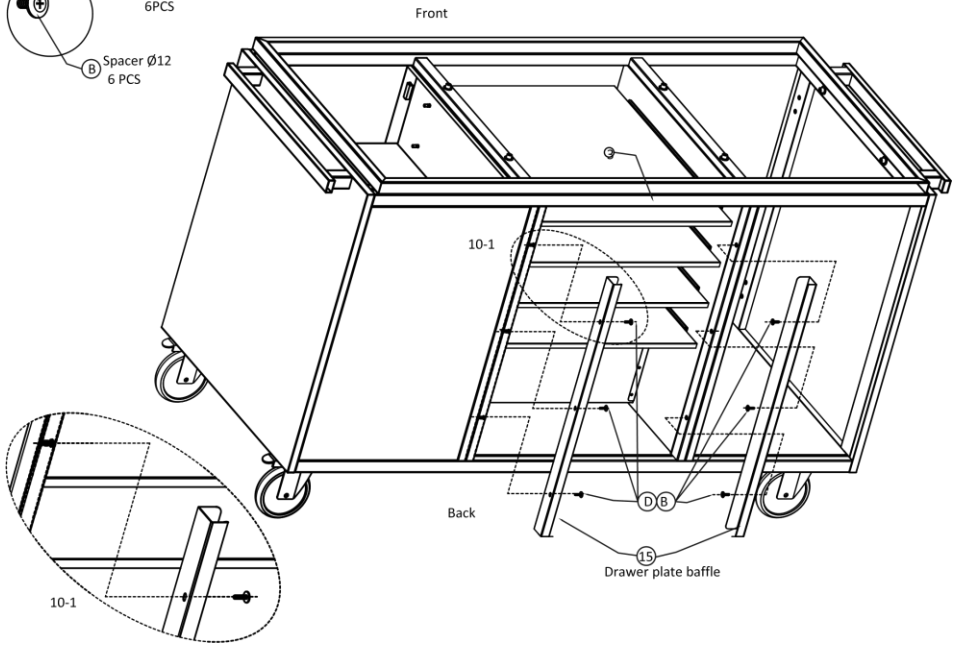


Step 11:
Connect part ⑫ to the front side of part ④ with ⑩*4 pcs

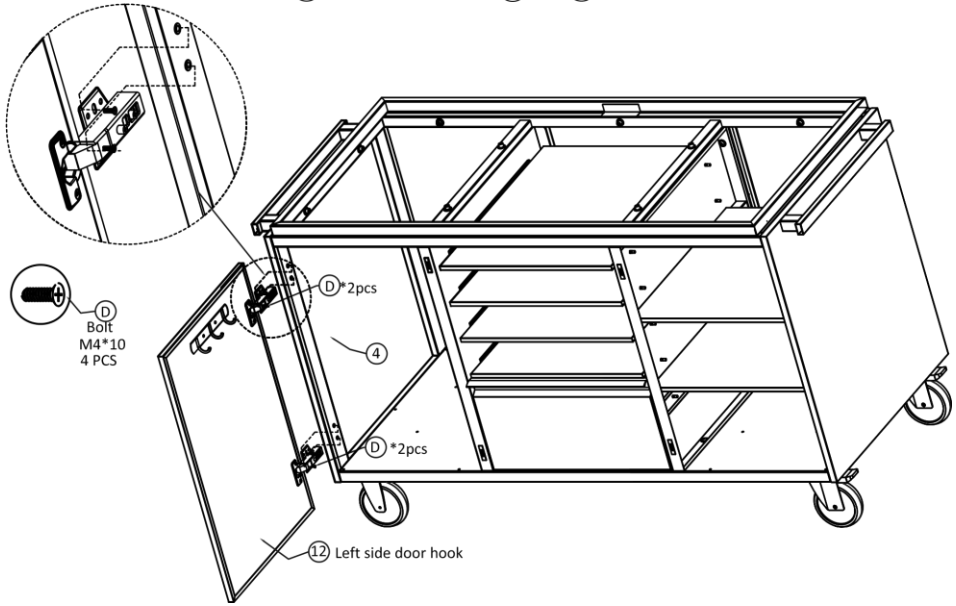


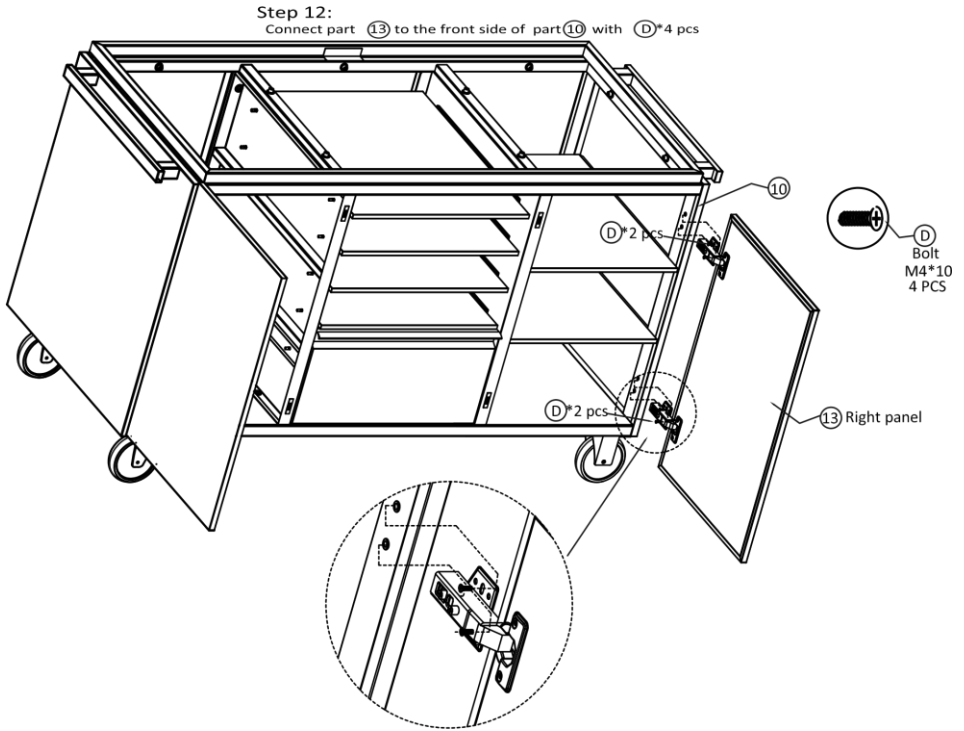

Step 13:
Insert part ⑭*5 to part ①

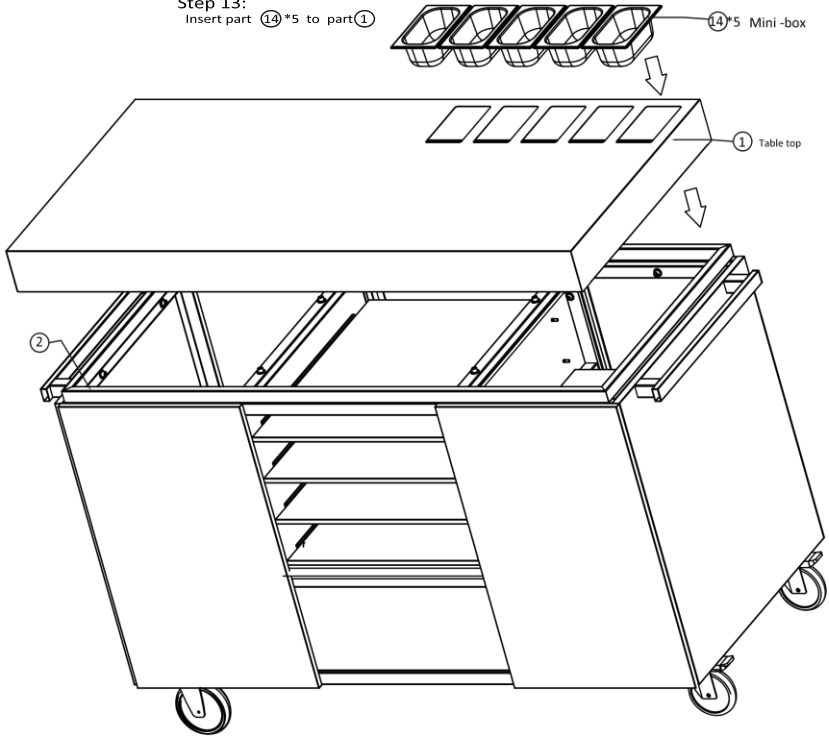

Step 14:
Insert part ① to part ②

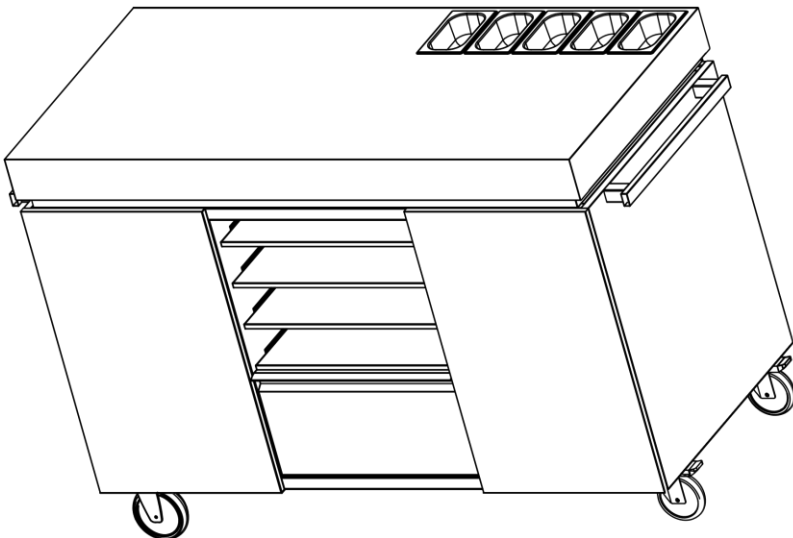

WARRANTY (USA)**EVERDURE****FIVE YEAR CONDITIONAL WARRANTY**

This warranty applies to the original purchaser of the appliance in the United States. This warranty shall commence on the date of purchase and shall terminate (both as to the original and any repair or replacement) on the anniversary date of the original purchase of the appliance at the end of the warranty period. You must retain your proof of purchase for service or repairs claims under this warranty.

WHAT IS COVERED

SHRIRO USA INC. warrants our appliance to be free from defects in material and workmanship under normal non-commercial, household use when operated and cared for as per the provided Manufacturer's written instructions.

If the appliance fails at any time within time frame below of the original purchase date due to a defect in materials or workmanship, subject to the terms and conditions of this warranty, we will repair or replace the defective part free of charge. Any replacement parts issued are covered by the time remaining on the original Five-year conditional warranty.

- Frame Five years
- Stainless steel Two years
- Paint finish Two years
- Other parts One year

WHAT IS NOT COVERED

This warranty does not apply to defects resulting from abuse of the appliance. Abuse of the appliance may include mishandling, improper appliance use, commercial use, modification, alteration, repair, or service by anyone other than SHRIRO USA INC. or its authorized service agents. Support services or appliance warranties will not cover transportation damages, failure resulting from power surges and electrical storms, insect or vermin infestation, surface rust, discolouration, heat tarnishing, stone cracking due to improper use (i.e. thermal cracking), Severe weather conditions such as hail, acid rain, hurricanes, earthquakes, wildfires, tsunamis or surges, tornadoes or severe storms and other environmental factors, exposure to water, salt air and/or chlorine sources such as swimming pools and hot tubs/spas, and other consequences. This warranty excludes liability for consequential, indirect, or incidental damage resulting from appliance use or breach of this warranty. Some states do not allow for the exclusion or limitation of consequential, indirect, or incidental damage, to the extent that this exclusion or limitation is not permitted by law it shall not apply. This means that the above exclusion may not apply to you.

THIS WARRANTY IS EXCLUSIVE AND IN PLACE OF ALL OTHER EXPRESS WARRANTIES. TO THE EXTENT PERMITTED BY LAW, SHRIRO USA INC. DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE; TO THE EXTENT SUCH DISCLAIMER IS NOT PERMITTED BY LAW, SUCH IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY AS DESCRIBED ABOVE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU, THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

CONTACT US

To obtain repairs under this warranty, call Toll Free +1 877 794 2622 or email, service@everdure.com

For prompt service, please ensure you have the following information on hand:

1. Appliance Name/Model Number
2. Serial Number
3. Purchase Date (as per invoice or proof of purchase)
4. Purchased from

SHRIRO USA INC. Incorporation Number 7164875
 25541 Arctic Ocean Drive
 Lake Forest, CA 92630 USA
 Tel (sales): +1 877 794 2622
 Email: sales@shrirousa.com
 Website: www.everdure.com

WARRANTY (AU/NZ)

APPLIANCE WARRANTY

PRIVACY POLICY

Privacy policy: Everdure is committed to protecting your personal privacy. Your personal information that you have provided in this form (e.g., name, street address, e-mail address and telephone/mobile number) is used solely by Everdure for the express purpose for which it was collected (e.g., to respond to your enquiry regarding your appliance). Your personal information will be processed by Everdure in accordance with the guidelines and requirements of the Privacy Laws of Australia (Privacy Act 1998).

For a full copy of Everdure's Privacy Policy, please e-mail customercare@shriro.com.au in Australia or customercare@monacocorp.co.nz in New Zealand or call 1300 766 066 in Australia or (09) 415 6000 in New Zealand

STATEMENT OF STANDARD WARRANTY CONDITIONS

AUSTRALIAN CUSTOMERS

Our goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss of damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NEW ZEALAND CUSTOMERS

Nothing herein contained shall be construed in any way as excluding or limiting your rights under the Consumer Guarantee Act 1993.

OUR WARRANTY

Subject to the following conditions, this appliance is also covered by the manufacturer's warranty from the date of purchase, covering all parts and labour for the period listed below (Our Warranty). Our Warranty (which is subject to the conditions below) covers rectification free of charge of any fault arising from defected materials or components, or faulty workmanship. The appliance will be repaired or replaced at the option of Everdure, but all costs of installation, removal, cartage, freight, travel expenses and insurance are to be paid by the claimant. Our Warranty is subject to appliances being used for single-family domestic household use

Our Warranty

operates in addition to (and does not exclude, restrict, or modify) any rights or remedies to which you may already be entitled to under the Australian Consumer Law or any consumer guarantee law relating to this appliance.

WHAT IS COVERED: By Our Warranty

During the warranty period your appliance will be repaired free of charge by Everdure, or its authorised service centre provided your appliance is delivered to and picked up from Everdure or its authorised service centre, subject to terms and conditions below.

It is recommended that exposure of the appliance to the elements should be minimised. After the appliance has been cleaned, store it under cover with a weatherproof cover over it.

COMPONENT	WARRANTY PERIOD
Frame (Excluding Rust)	5 years
Stainless steel & Paint finish	2 years
All other parts	1 year

WHAT IS NOT COVERED: By Our Warranty

1. Any defect or failure caused by the appliance not being assembled or used in accordance with the instruction/installation manual provided with the appliance.
2. Normal fair wear and tear (e.g., surface rust & discolouration)
3. Insect or vermin infestation.
4. Unauthorised repairs or use of non-genuine Everdure parts.
5. appliance scratches & damage as a result of delivery, installation, or assembly
6. Claims to appliance surface coatings due to accidental damage, improper or lack of maintenance, damage from cleaning appliance not recommended by Everdure.

HOW TO CLAIM OUR WARRANTY

You will need to contact Everdure in Australia or New Zealand using the enclosed contact details. Please make sure you have the following information on hand:

- Appliance Name/Model Number
- Purchase Date (as per invoice, or proof of purchase)
- Place of Purchase

IN AUSTRALIA

Everdure

is a division of Shriro Australia Pty Limited ABN 28 002 386 129

Customer care: 1300 766 066

Email: customercare@shriro.com.au

IN NEW ZEALAND

Everdure

is a division of Monaco Corporation Ltd (Member of

Shriro Australia PTY LTD) Phone (09) 415 6000

Email: customercare@monacocorp.co.nz

NOTES

EVERDURE

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Everdure reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

SHRIRO USA INC. Incorporation Number 7164875
25541 Arctic Ocean Drive
Lake Forest, CA 92630 USA
Tel (toll free): +1 (877) 794 2622
Email: sales@shrirousa.com
Website: www.everdure.com

SHRIRO AUSTRALIA
Level 7/67 Albert Ave
Chatswood, NSW 2067 Australia
Tel: +61 (02) 9415 5000
Email: sales@shriro.com.au
Website: www.everdure.au