

Healthy Choice®

30L DIGITAL MULTI-FUNCTION AIR FRYER OVEN



Model: AFO300 | Batch: PR4741

Carefully read all instructions before use and save for future reference.

CAUTION: TO AVOID DAMAGE TO YOUR BENCH TOP AND SPLASH BACK, DO NOT PLACE AIR FRYER DIRECTLY ON BENCH TOP.

TABLE OF CONTENTS


Important safeguards	2
Getting to know your Air Fryer Oven	4
• Main component	4
• Features	5
• Technical specifications	5
• LED control panel	6
Before using your Air Fryer Oven	10
Operation guide	11
Cooking functions quick reference chart	15
Dual cook functions quick reference chart	17
Replacing the light	18
Disassembling the inner glass door for cleaning	19
Care, Cleaning & Storage	20
Trouble shooting	21

IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your Air Fryer Oven.

READ ALL INSTRUCTIONS BEFORE USE

- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling, putting on or taking off parts.
- **Do not** touch hot surfaces without using heat-protective gloves. To avoid burns, use extreme caution when removing hot accessories or disposing of hot grease.
- **Do not** immerse cord, plug or any parts of Air Fryer Oven in water or other liquid to protect against electrical hazard.
- To avoid potential hazards, please do not let children play with or near the appliance.
- **Do not** operate the appliance if the cord or plug become damaged. If the appliance is dropped or damaged, please return product to original store or retailer for proper inspection and repair.
- To avoid potential injury, do not use accessories or attachments not recommended for the unit.
- **Do not** use outdoors.
- **Do not** let the cord hang over the edge of the table or counter.
- **Do not** place on or near a hot gas or electric burner.
- **Do not** use this appliance for other than intended use.
- Extreme caution should be exercised when using containers constructed or materials other than metal or glass in the Air Fryer Oven.
- **Do not** store any materials other than manufacturer's recommended accessories in this appliance when not in use.
- **Do not** place any of the following materials in this appliance: cardboard, plastic, paper, or anything similar.
- Oversized foods and utensils must not be inserted in the Air Fryer Oven as they may involve a risk of fire or electric shock.




- A fire may occur if the appliance is covered or touching flammable materials such as curtains, draperies or walls when in operation.
- **Do not** store any items on top of the appliance when in operation.
- **Do not** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
- **Warning:** To avoid possibility of fire, **Never** leave the appliance unattended during use. Use recommended temperature settings for all function.
- **Do not** rest cooking utensils or baking dishes on the glass door.
- **Do not** operate your appliance inside a cupboard or under a low-hanging wall cabinet. When storing in a cupboard, always unplug the unit from the electrical outlet.
- Check if the voltage indicated on the appliance corresponds to the local main voltage before connecting the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised not to play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **Caution!** Some parts of the appliance become hot during operation, please do not touch them. Take extreme care when handling the appliance, especially the surfaces marked with this symbol: 

FOR HOUSEHOLD USE ONLY


SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE

GETTING TO KNOW YOUR AIR FRYER OVEN

MAIN COMPONENTS

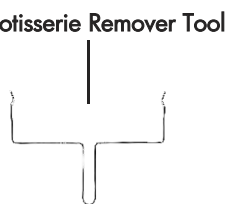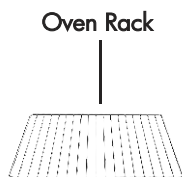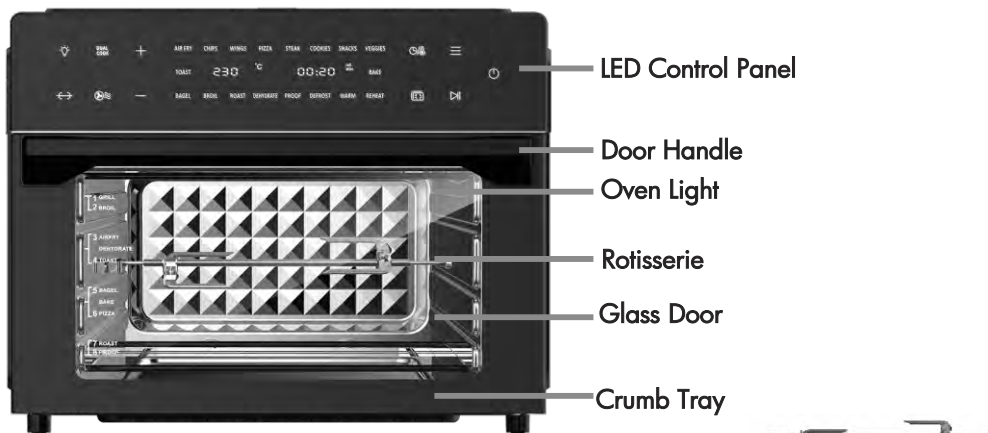

Rotisserie

 

Rotisserie Basket

Oven Rack: Use for meat, bread, pizza etc.

Air Fryer Basket: Use the Air Fryer Basket in conjunction with the Air Fry function to optimize your cooking results. Use for fries, chicken wings, onion rings etc. It can also be used as the dehydrating basket.

Baking Pan: Use for cookies, cakes, roast turkey etc. It can also hold the dripping from the food or oil when Air frying.

Rotisserie: Use for chicken, turkey, spit roast meats.

Rotisserie Basket: Use for smaller or more delicate foods, e.g. vegetables, nuts or chicken wings.

Rotisserie Remover Tool: Use to remove the rotisserie from the oven.

 
Crumb Tray: Collects crumbs of food.


FEATURES

By using all-new 360° HOT AIR CIRCULATION technology, The Air Fryer Oven can offer you more delicious and healthier cuisine.

DOOR SENSOR

If the door is opened during cooking, the cooking will pause and the light will turn on.




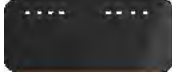The panel will show . When the door is closed, the light will turn off and cooking will resume. Please make sure to keep the oven door closed during cooking.

TECHNICAL SPECIFICATIONS

Voltage	Power	Frequency	Capacity
220~240V	1800W	50-60Hz	30L

LED Control Panel

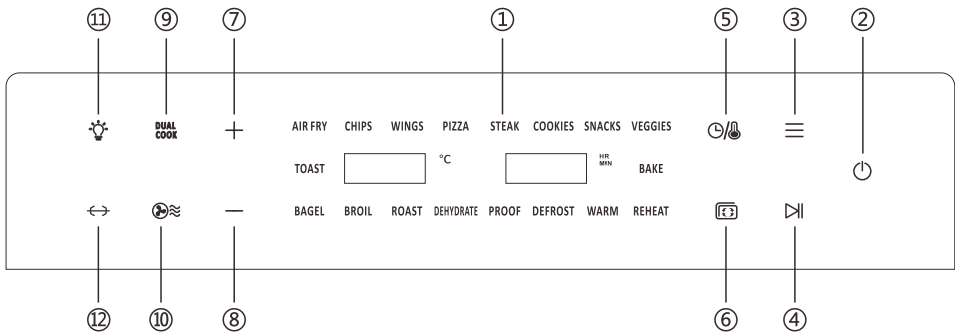

① Air Fryer Oven Functions Overview

PRESET	DEFAULT TEMPERATURE	DEFAULT TIME	TEMP RANGE	TIME RANGE
AIR FRY (Fried Food)	200°C	10MINS	90-230°C	Up to 2 HOURS
CHIPS (Frozen French Fries)	230°C	18MINS	90-230°C	Up to 2 HOURS
WINGS	230°C	18MINS	90-230°C	Up to 2 HOURS
PIZZA	230°C	11MINS	90-230°C	Up to 2 HOURS
STEAK	230°C	7MINS	90-230°C	Up to 2 HOURS
COOKIES	180°C	15MINS	90-230°C	Up to 2 HOURS
SNACKS	200°C	18MINS	90-230°C	Up to 2 HOURS
VEGGIES	230°C	15MINS	90-230°C	Up to 2 HOURS
TOAST			1~7	1~7MINS
BAKE	175°C	25MINS	90-230°C	Up to 2 HOURS
BAGEL	230°C	13MINS	90-230°C	Up to 2 HOURS
BROIL	230°C	10MINS	90-230°C	Up to 2 HOURS

LED Control Panel

PRESET	DEFAULT TEMPERATURE	DEFAULT TIME	TEMP RANGE	TIME RANGE
ROAST	200°C	30MINS	90-230°C	Up to 2 HOURS
DEHYDRATE	60°C	5HOURS	30-80°C	1-12 HOURS
PROOF	34°C	45MINS	30-40°C	Up to 8 HOURS
DEFROST	50°C	20MINS	30-80°C	Up to 2 HOURS
REHEAT	95°C	5MINS	90-230°C	Up to 2 HOURS
WARM	50°C	4HOURS	30-120°C	Up to 8 HOURS

Note: Above cooking times and temperatures are a suggestion only. Due to the variations in thickness, size and moisture content of the foods being cooked, cooking temperature and time might need to be adjusted to cook properly.

②  **POWER ON/OFF**

Touch "POWER ON/OFF" icon to turn the Air Fryer Oven On/Off.

③  **MENU**

You can select the menu by continuously touching the menu icon, or you can select the menu by touching the PLUS or MINUS icons on the left.

④  **START/PAUSE**

Touch "START/PAUSE" icon to start the program.

⑤  **TIME/TEMPERATURE SWITCH ICON**

Touch TEMP/TIME icon to enter the mode of temperature and time.

LED Control Panel

⑥ PREHEAT

After selecting a program and adjusting the temperature, touch "PREHEAT" icon to preheat the Air Fryer Oven. (No need to touch the "START/PAUSE" icon to start the preheat program. After preheating, the oven will beep 5 times and "Add food" will be showed on the display.)

⑦ PLUS

Touch this icon to select the menu or adjust the time and temperature.

⑧ MINUS

Touch this icon to select the menu or adjust the time and temperature.

⑨ DUAL COOK

Advanced dual function cooking technology allows you to program your Air Fryer Oven to start cooking with one preset, then automatically transition to a second preset for a perfect cook on any meal. For example, put a bread crumb-topped casserole in the oven, set it to bake then broil, and it will cook through with a golden crisp topping to finish. Just set it and forget it. Enjoy your favorite fried food without any extra operation.

⑩ AIR FRY

This icon is for display only. If the program with fan running is adopted, the icon will keep flashing during operation.

⑪ LIGHT SWITCH

 
Touch "LIGHT" icon to turn on the oven light. The light automatically switches off after 5 minutes of inactivity.

⑫ ROTISSERIE


It is used to cook all the food that needs to be rotated. After selecting the desired program and setting the temperature/time, touch the start icon to start cooking and then touch the rotisserie icon.

LED Control Panel


⑤+⑦ + TEMPERATURE INCREASE:

Touch the “  ” icon and the temperature display flash and then touch “ + ” icon to increase the temperature as needed. Long press “ + ” icon for rapid increase operation of setting.

 
⑤+⑧ — TEMPERATURE DECREASE:

Touch the “  ” icon and the temperature display flash and then touch “ — ” icon to decrease the temperature as needed. Long press “ — ” icon for rapid decrease operation of setting.

 ⑤+⑦ + TIME INCREASE:


Double-click the “  ” icon until the time display flash and then touch “ + ” icon to increase the time as needed. Long press “ + ” icon for rapid increase operation of setting.

 ⑤+⑧ — TIME DECREASE:


Double-click the “  ” icon until the time display flash and then touch “ — ” icon to decrease the time as needed. Long press “ — ” icon for rapid decrease operation of setting.

BEFORE USING YOUR AIR FRYER OVEN


1 Remove all packaging around and inside the oven.

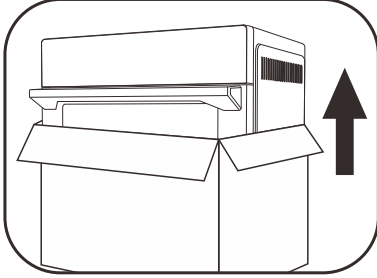


2 Place on a stable, level, heat-resistant surface, away from anything that can be damaged by heat. Keep at least 110 mm distance between the electrical outlet and the wall, furniture, etc.

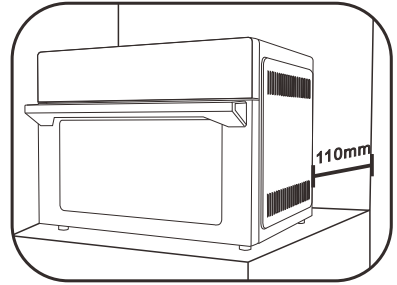


3 Remove the protective film from the control panel. (This film is to protect the panel, you can tear it off or keep it.)

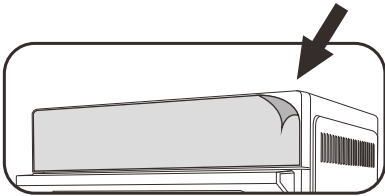

4 Wash all accessories and clean the interior of the Air Fryer Oven. Dry and place accessories back in oven.

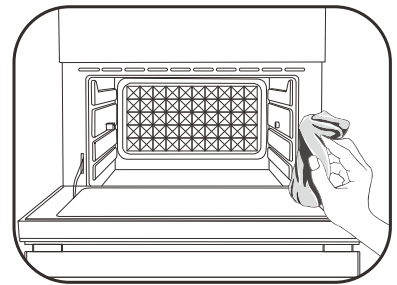

5 Before use, ensure that the power and outlet meet the requirements to operate this product (input power requirements).

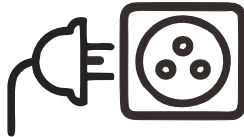


6 Upon first use, it is necessary to run the oven for 18 minutes at the highest temperature (230°C) in order to sterilize and remove any manufacturing odor. The Air Fryer Oven may emit an odor or smoke due to the heater's protective film.

OPERATION GUIDE




Plug in, touch the POWER ON/OFF icon to turn on the Air Fryer Oven, screen will illuminate and "AIR FRY" icon will blink.

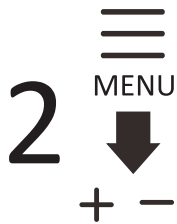

Touch the menu icon, and then select the program you want by touching plus or minus icon. (Or continuously touch the menu icon until the desired menu is selected) Screen will display the default temperature and default time for this menu, you can also adjust the temperature and time as desired with the icon.


Note: The temperature on the "Toast" function cannot be adjusted. Touch the " " icon and adjust the time duration for **level 1~level 7** of the toast by plus or minus icon.

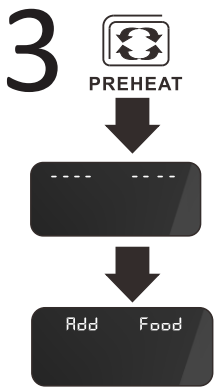

Touch the "PREHEAT" icon in order to preheat the Air Fryer Oven. When the internal temperature reaches 150 °C, the "Add Food" signal will appear. (After preheating, put the food in oven and close the door, the program will start cooking automatically.)

Note: The Toast, Dehydrate, Proof, Defrost, Reheat and Warm programs do not require preheating.


OPERATION GUIDE

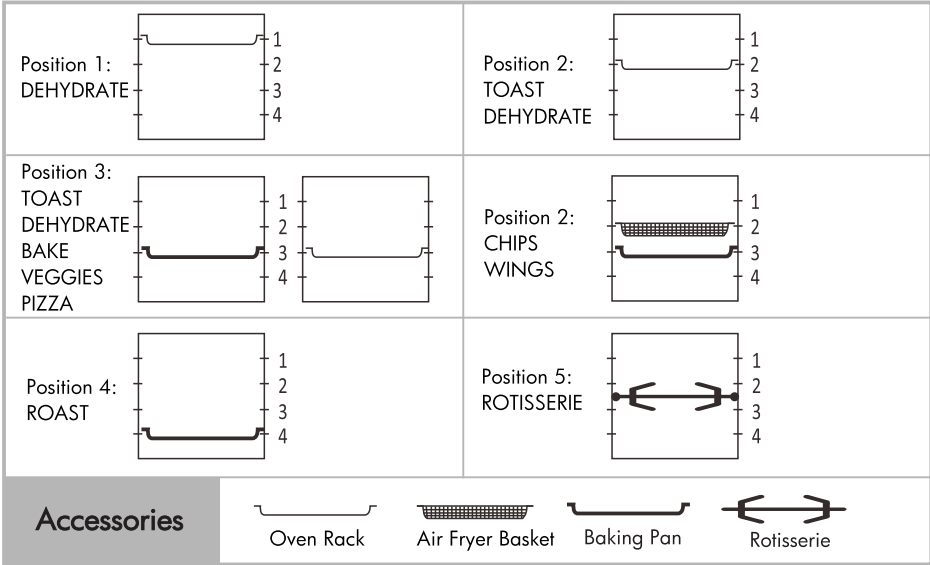

Note: When cooking fatty foods (e.g. chicken wings) with the oven rack, air fryer basket or rotisserie, place the baking pan in the slot underneath in order to prevent oil from dripping on to the stainless-steel heater.

4 Accessories position

 5 START/PAUSE



Insert the accessories with food into the desired position then close the door. There are four groove positions, please refer to the above rack position diagrams to place the accessories.

Note: If you need to use the rotisserie, fix the food and place it in the air fryer oven.

If you skip the preheat function of step 3, please touch the START/PAUSE icon to begin cooking, and the display will show the timer counting down. When cooking is done, the oven will beep 5 times, the display will show "END", and all menu icons will light up.

Note: To use the rotisserie, touch the rotisserie icon after touching START/PAUSE icon.

Note: The display will continue to show "END" until the menu icon is pressed. After cooking is complete, the fan will continue to run for 4 minutes in order to properly cool the appliance.

DUAL COOK



1

Plug in, touch the POWER ON/OFF to turn on the Air Fryer Oven, screen will illuminate and "AIR FRY" icon will blink.

Example:

 
First step



Second step




2 Dual Cook

Touch the DUAL COOK icon, five programs AIRFRY/BAKE/BROIL/ROAST/WARM will illuminate, touch the plus icon to select the first program AIR FRY, and the selected program AIRFRY will flash (but the other four will still be illuminated), then touch the icon  and adjust the desired time and temperature by touching plus or minus icons, finally touch the menu icon to confirm the first program AIRFRY; The remaining four icons will still be illuminated, repeat the above operation to adjust the second program.

Note: If you want to cancel the DUALCOOK function, you can touch the START/PAUSE icon, and then touch the DUALCOOK icon to return to the general menu.

DUAL COOK

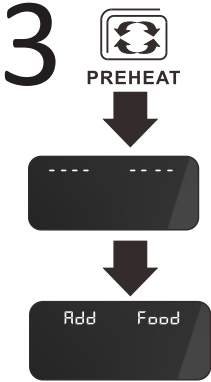

Touch the "PREHEAT" icon in order to preheat the Air Fryer Oven. When the internal temperature reaches 150°C, the "Add Food" signal will appear. After preheating, put the food in oven and close the door, the program will start cooking automatically.

4 Accessories position

 
Insert the accessories with food into the desired position then close the door. There are four groove positions, please refer to the above rack position diagrams to place the accessories.

Note: If you need to use the rotisserie, fork the food and place it in the air fryer oven.

5 START/PAUSE

If you skip the preheat function of step 3, please touch the START/PAUSE icon to begin cooking, and the display will show the timer counting down, the selected first program will be on, and the selected second program will not be displayed until the first program is completed. When cooking is done, the oven will beep 5 times, the display will show "END", and all menu icons will light up.

Note: To use the rotisserie, touch the rotisserie icon after touching START/PAUSE icon.



Note: The display will continue to show "END" until the menu icon is pressed. After cooking, the fan will continue to run for 4 minutes in order to properly cool the appliance.

COOKING FUNCTIONS

QUICK REFERENCE CHART

FUNCTION	PREHEAT	Suggested Amount of Food	Suggested Accessory	Suggested Rack Position
AIR FRY	Yes	Base on the food you select	Air Fryer Basket	2
CHIPS	Yes	550g	Air Fryer Basket	2
WINGS	Yes	1038g(28pcs)	Air Fryer Basket	2
PIZZA	Yes	13inches	Baking Pan or Oven Rack	3
STEAK	Yes	190g	Baking Pan or Oven Rack	2
COOKIES	Yes	Base on the food you select	Baking Pan	2
SNACKS	Yes		Baking Pan or Oven Rack	3
VEGGIES	Yes		Baking Pan or Air Fryer Basket	3
TOAST	No		6pcs	Oven Rack
BAKE	Yes	Base on the food you select	Baking Pan or Oven Rack	3
BAGEL	Yes		Baking Pan or Air Fryer Basket	2
BROIL	Yes		Baking Pan or Oven Rack	2
ROAST	Yes		Baking Pan or Rotisserie	4 or Rotisserie position

COOKING FUNCTIONS

QUICK REFERENCE CHART

FUNCTION	PREHEAT	Suggested Amount of Food	Suggested Accessory	Suggested Rack Position
DEHYDRATE	No	Base on the food you select	Air Fryer Basket	1 or 2 or 3
PROOF	No		Baking Pan	3
DEFROST	No		Baking Pan	2
REHEAT	No		Oven Rack	3
WARM	No		Baking Pan	2

It is a normal occurrence that some moisture may occur on the oven door during the cooking process. We would like to recommend you to preheat the Air Fryer Oven before cooking for the best results.

DUAL COOK FUNCTIONS

QUICK REFERENCE CHART


FUNCTION 1	FUNCTION 2	PREHEAT	Suggested Amount of Food	Suggested Accessory	Suggested Rack Position
AIR FRY	WARM	Yes	Base on the food you select	Air Fryer Basket	2
BAKE	BROIL	Yes	Base on the food you select	Baking Pan or Oven Rack	3
ROAST	WARM	Yes	Base on the food you select	Baking Pan or Rotisserie	4 or Rotisserie position
ROAST	AIR FRY	Yes	Base on the food you select	Baking Pan or Rotisserie	4 or Rotisserie position
AIR FRY	BROIL	Yes	Base on the food you select	Air Fryer Basket or Oven Rack	2 or 3

REPLACING THE LIGHT


ATTENTION: Be sure to unplug the Air Fryer Oven and allow it to cool completely before replacing the oven light.

SPECIFICATION: 25W halogen bulb


1. Rotate the light cover clockwise to remove it.

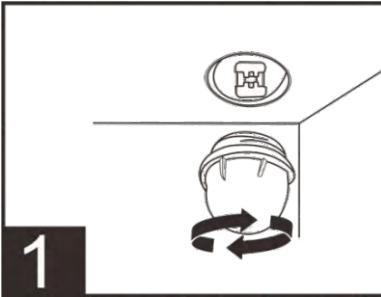


2. Remove the used bulb by pulling it directly.

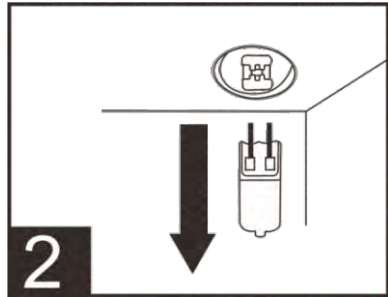

3. Insert the new bulb.

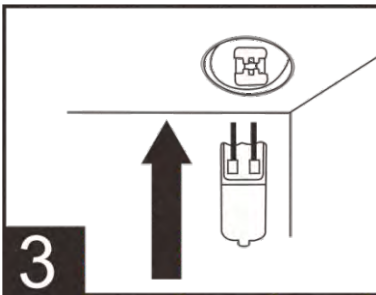

4. Rotate the light cover clockwise to tighten it.

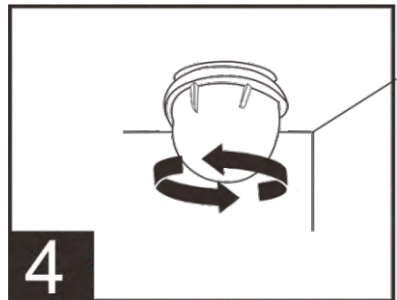


DISASSEMBLING THE INNER GLASS DOOR FOR CLEANING


ATTENTION: Be sure to cool down the glass door completely before disassembling it.

1. Unscrew the glass using a screwdriver.
2. Using the silicone suction cup, lift the glass and then remove it with your hands.
3. After cleaning and drying the glass, place the glass back and secure it with screws.

1

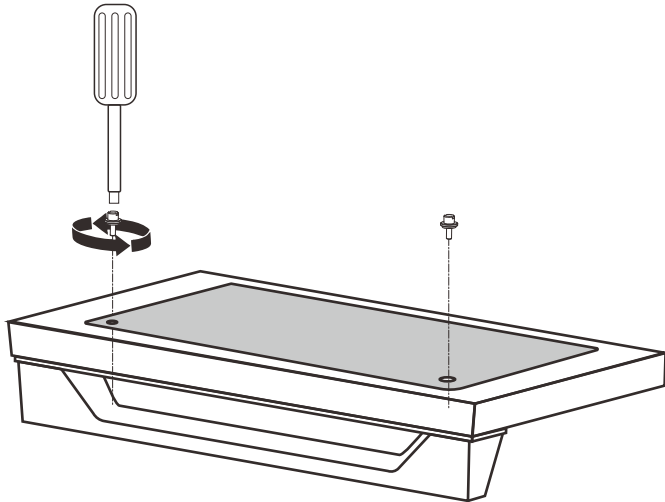

2

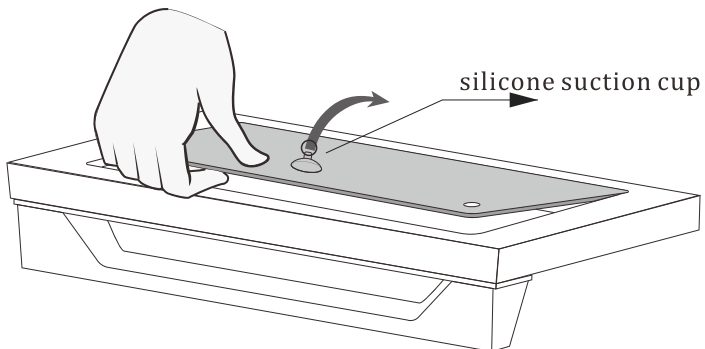

CARE, CLEANING & STORAGE

Before cleaning, remove the power plug from the power outlet. Allow the oven and all accessories to cool completely before disassembling and cleaning.

Cleaning the outer body and door

- Wipe the outer body with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the oven's surface, before cleaning.
- To clean the glass door, use a glass cleaner or mild detergent and a soft, damp sponge or soft plastic scouring pad. Do not use an abrasive cleanser or metal scouring pad as these will scratch the oven's surface.
- Wipe the LED screen with a soft, damp cloth. Apply cleanser to the cloth, do not apply cleanser directly on to the LED. Cleaning the LED screen surface with a dry cloth and/or abrasive cleaners may produce scratches.



WARNING: To prevent electrocution, do not immerse the appliance or power cord into water or any other liquid.

Cleaning the interior

- To clean any spattering that may occur while cooking, wipe the walls with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the interior, before cleaning.



WARNING: Use extreme caution when cleaning the heating elements. Allow the oven to cool completely, and then gently rub a soft, damp sponge or cloth along the length of the heating element. Do not use any type of cleanser or cleaning agent. Let all surfaces dry thoroughly prior to inserting the power plug into a power outlet and turning the oven on.

Cleaning the crumb tray

- After each use, slide out the crumb tray and discard crumbs. Wipe the tray with a soft, damp sponge. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the tray, before cleaning. Dry thoroughly.
- To remove the baked-on grease, soak the tray in warm soapy water then wash with a soft sponge or soft plastic scouring pad. Rinse and dry thoroughly.
- Always ensure to re-insert the crumb tray into the oven after cleaning and prior to inserting the power plug into a power outlet and turning the oven on.

Cleaning the Oven rack, baking pan, fry basket, rotisserie and remove handle.

- Wash all accessories in warm soapy water with a soft sponge or soft plastic scouring pad. Rinse and dry thoroughly. Do not use abrasive cleansers, metal scouring pads or metal utensils to clean any of the accessories as they may damage the surfaces.
- To extend the life of your accessories, cleaning them in the dishwasher is not recommended.

Storage

- Ensure the oven and all accessories are clean and dry.
- Ensure the door is closed.
- Store the appliance in an upright position, standing level and on its supporting legs. Do not store appliance when wet or hot. Do not store in a wet or hot environment.

Trouble shooting

Possible Problem	Possible Cause	Solution
The oven does NOT work	The appliance is not plugged in	Make sure the oven is plugged in.
	You have not turned on the oven	Touch the POWER ON/OFF icon to power on.
	The door is not closed properly	Make sure the door is closed well.
Steam is coming out from the top of the oven door	You are cooking high moisture content foods	This is normal. The door is vented to release steam created from high-moisture content foods such as frozen breads.
White smoke is coming out of the oven	This is the first time using the oven	This is normal upon first use. We suggest setting the oven to the highest temperature and letting it run empty for 18-20 minutes.
	You're cooking greasy food	This is normal when cooking greasy foods. This will not affect the cooking process.
	The baking pan, crumb tray, or heaters still contain grease or oil residue from previous use	Ensure each component is properly cleaned after each use.
Dark smoke is coming out of the oven	Food is burning	Immediately turn off the oven, be careful when you take out the food.

Possible Problem	Possible Cause	Solution
Food isn't cooked completely	Too much food in the oven at once	Reduce the amount of food in the oven when cooking.
	Set temperature is too low or time too short	Set the temperature higher or time longer.
	Incorrect cooking function was chosen	Make sure you cook with the proper function.
Food isn't cooked evenly	Ingredients are stacked or close to each other during cooking	Make sure food and ingredients are spread out evenly.
	Baking pan, Air Fry basket or oven rack position isn't correct	Adjust oven inserts into the proper position. Take caution as these components may be hot.
Foods are not crispy after Air Frying	Ingredients with high moisture content	Spraying or brushing a small amount of oil on food evenly can increase crispiness.
Display shows Error Code "E1"	There is a short circuit in the temperature monitor	Remove the power cord from the power outlet. Contact Customer Support.
Display shows Error Code "E2"	The temperature monitor or heater is inoperative	Remove the power cord from the power outlet, reconnect and operate again. If it cannot be solved, then Contact Customer Support.

LENOXX

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia