

LENOXX
AHC009

CORDLESS AUTOMATIC HAIR CURLER



Model: AHC009

Batch: PR4457

This device is intended for household use only.

Please read and retain these instructions for future reference.

The illustrations used in the manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

DESCRIPTION:

Curling a full head of hair can take a lot of skill, practise and time with a traditional curling iron. This Cordless Automatic Hair Curler set eliminates all those factors for quick and easy curls for all hair types including fragile, soft, fine, coarse and strong.

Enjoy full-range movement and cordless convenience with this rechargeable and portable curler. With easy button controls, all that needs to be done is insert a 2cm hair weft into the 19mm ceramic coated curling chamber, then choose from the six temperature and time selection increments and finally select the curl direction – then press start and let the curler do all the work for you.

The large LCD display will show personalised selection options including the 150°C-200°C temperature adjustment range and the 8-18 seconds time adjustment range as well as spinning left or right for the choice of inward or outward curls. This curler uses PTC self-regulating heating and can produce slight curls, soft curls and strong curls.

At a total charging time of four hours and continuous run time of 50 minutes, the dual 3.7V 2000mAh lithium-ion rechargeable batteries power the curler and create fast and easy, yet beautiful and luxurious curls. Charging can be done through various USB ports including but not limited to car chargers, power banks, laptops and USB wall adapters.

Complete with a carry bag, comb, two hair clips and a USB charging cable included in the package, this trendy-coloured grey with pink trim Cordless Automatic Hair Curler is ready to revitalise your look.

FEATURES:

- Material: ABS
- Size: 19 × 6 × 5cm
- Battery capacity: 2000mah x 2
- Battery voltage: 3.7V
- Battery watt hour: 9.25Wh
- Battery type: Lithium-ion rechargeable battery
- Charging time: 4 hours
- Using time: continuous using time of about 50 minutes
- Ceramic coating

- Temperature range: 150 – 200 degrees Celsius
- 6 timer settings: between 8 – 18 seconds
- New vogue design: The world's first professional wireless travel automatic rotating hair curler creates beautiful curls or waves at any time anywhere. Auto rotating and curling function, no skill required. Learn how to use within 1 minute. Everyone can be a hair curling expert!
- Easy to use, no skill required: Replacement for your traditional curling iron or curling wand. Perfect curls or waves every time for beauty in motion.
- Up to 50-minute cord-free run time, run time will vary based on heat and timer settings selected as well as hair type. Rechargeable auto curler, charge fully overnight before first use. Charge time will vary depending on adapter and power source.
- Multi-directional curl action (left, right, or mixed) with anti-tangle protection.
- LCD digital display shows all settings: heat, timer, battery level, and curl direction.
- Efficient and safe: Our hair curlers can be heated quickly, and its cordless design can maximize your curling efficiency. It is equipped with a safe and non-toxic insulating material inside the curling chamber which can protect you from burns when you use it.
- Easy use and portable: The barrel will auto spin around and wrap section of hair into curling chamber. Easy to carry when traveling, can curl your hair anytime and anywhere.
- USB charging and mobile power supply: Built-in 2000mah x 2 lithium-ion batteries, can achieve super convenient wireless use. It can also be used as a power bank.
- Includes: USB charge lead, pouch, comb, two clips

SAFETY INSTRUCTIONS:

WARNING! Do not use this appliance near water contained in basins, bathtubs, or other vessels.

- Do not immerse the appliance in water or any other liquids.
- Always inspect the appliance before use for noticeable signs of damage.
- Do not use if damaged or if the appliance has been dropped.
- Do not leave the appliance attended when on.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- In the event of the appliance being left switched on, the appliance will automatically shut off after 10 minutes. If you wish to continue using the appliance after this time, simply turn the power on.
- Take care to avoid the hot surface of the appliance coming into direct contact with skin, eyes, ears, face, and neck.
- This appliance should not be used by adults who have reduced physical, sensory, or mental capabilities, or whose lack of experience and knowledge might cause a hazard, unless they have been correctly instructed to and understand the safe use and hazards involved and are adequately supervised.

- Adult supervision is required when this appliance is used on or near children. Do not allow use by very young children. This appliance is not a toy.
- This appliance should not be used, cleaned, or maintained by children.
- Always ensure that this appliance is always kept out of reach of children, particularly during use and whilst cooling.
- Allow the appliance to cool completely before storing it away.
- If the USB cable is damaged, it must be replaced by the manufacturer, it's service agent or other qualified persons to avoid a hazard.
- This appliance is not intended for commercial use.

NOTE:

Should you fail to turn the appliance off, it will shut itself off automatically after 10 minutes.

BEFORE FIRST USE:

Carefully unpack the appliance and remove all packaging materials, check the contents to ensure that all the parts and accessories are present and are in good condition.

CHARGING THE BATTERY:

There is a USB charging cord with this product.

Connect the USB end of the charging cord into a USB power adaptor (not included) and the other end into the charging port on the cordless hair curler (micro-USB input).

Ensure the USB power adaptor is plugged into a wall socket with the power point turned on.

1. The battery indicator shows the charge level and the cells on the battery level will be full when charge is complete.
2. The product cannot work while charging.
3. Please use a 5V2A adapter (not included).

When there is no power, it will take about 4 hours to fully charge.

Under full power, it can operate for up to 50 minutes. run time will vary based on heat and timer settings selected as well as hair type.

Battery information:

Battery Voltage: 3.7 V Lithium-Ion (Li-ion) / 2000 mah x 2

Charger Input: 5V / 1A~2A, USB power adaptor (not included)


Re-charge the cordless hair curler once every three months even if you do not use the product for a long time, this can protect the battery from damage.

Disposal:

Always dispose of a product with a battery pack according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

Even discharged battery packs contain some energy.

PRODUCT OVERVIEW:

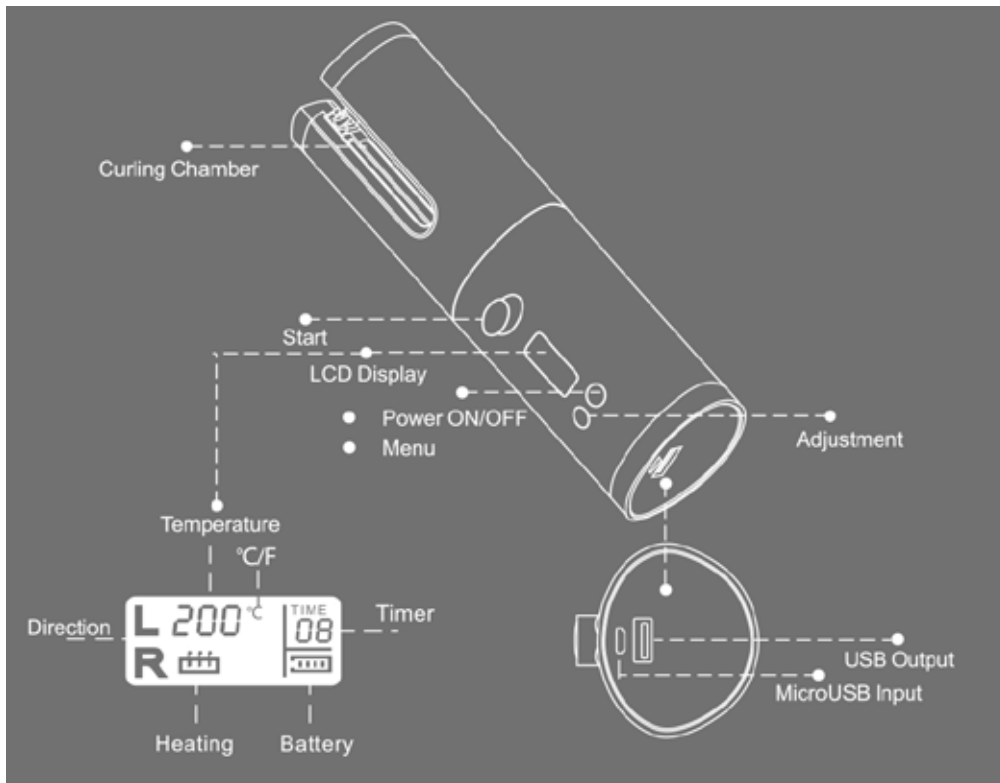

USE INSTRUCTIONS:

1. Press and hold the 'POWER ON/OFF' button for 2 seconds to turn the appliance on, a beep will sound, and the LCD display will be on.

NOTE: Press and hold the 'POWER ON/OFF' button for 2 seconds to turn the appliance off. If you forget to turn the appliance off, it will shut itself off automatically after 10 minutes.

2. Press the 'MENU' button repeatedly to set the temperature, direction, temperature in Celsius or Fahrenheit and timer. Use the 'ADJUSTMENT' buttons to set the value.

- Temperature: 150, 160, 170, 180, 190 or 200 Degrees Celsius.

- Direction: Left or Right

- °C/ F: °C or F

- Timer: 8, 10, 12, 14, 16 or 18 seconds

3. The cordless hair curler will start to heat once the temperature has been set.

NOTE: The heating symbol will blink whilst it is heating. Once it reaches the set temperature, the heating symbol will stop blinking and two beeps will sound.

4. Comb hair to remove any tangles and divide the hair into sections no more than 2cm wide.

5. Lay the sections of hair through the curling chamber and hold down the 'START' button to activate the motor to draw the hair into the curling chamber.


6. Release the 'START' button once the first beep sounds.

7. Automatic curling is finished when the final beep has sounded. The number of times the cordless hair curler will beep is dependent on the timer which was set. E.g.: Timer set to 8 seconds equals 8 beeps.



USE AS A POWER BANK:

Use a USB lead (not included) to connect between the USB Output on the cordless hair curler and your device.

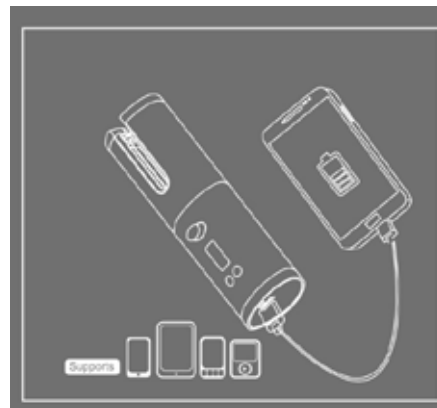

LENOXX

www.lenoxx.com.au

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia

LENOXX

Dear Valued Customer,

Thank you for purchasing the AHC009, Cordless Automatic Hair Curler.

Your comments are important to us because they help us provide high quality, competitive and innovative products, just for you. If you are satisfied with your product, we kindly ask you to please take a moment to write a review on www.productreview.com.au and/or through the website where you have purchased your item.

If you have any questions concerning our products, please call our customer service department on **1300 666 848**. *Your feedback makes us better.*

Thank you for choosing Lenoxx.

LENOXX

LENOXX ELECTRONICS AUSTRALIA PTY LTD

Importers & Wholesalers of Electronics & Toys

6 Oban Court Laverton North Vic 3026

ABN: 97 844 321 851

Customer Service: 1300-666-848

Email Address: Lenoxx@lenoxx.com.au

Web Site: www.lenoxx.com.au

ELECTRONICS GOODS WARRANTY

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES, ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

IMPORTANT MESSAGE: BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR YOU MUST SUPPLY PROOF OF PURCHASE (Original Sales Receipt) TO VALIDATE YOUR WARRANTY.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.

"Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".

**For warranty registration please visit our website
www.lenoxx.com.au**

Service Direct Line (Australia only): 1300 - 666 - 848

MODEL NO:

BATCH NO: