

# LENOXX®

## 12 Bottle Wine Cellar Fridge



Model: BF100 | Batch: PR4714

Carefully read all instructions before use and save for future reference.  
HOUSEHOLD USE ONLY

# IMPORTANT SAFEGUARDS

## PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
5. To avoid a hazard due to the instability of the appliance, it must be fixed in accordance with the instructions.
6. When positioning the appliance, ensure the supply cord is not trapped or damaged.
7. Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.
8. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
9. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

10. Do not use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

11. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

12. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

13. This appliance is intended to be used in households and similar applications such as


- staff kitchen areas in shops, offices, and other working environments;
- farmhouses and clients in hotels, motels, and other residential-type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

14. To avoid contamination of the stored drinks, please respect the following instructions.

- Opening the door for long periods can cause a significant increase in the temperature in the compartments of the appliance;
- Clean all surfaces regularly;
- If the appliance is left empty for long periods, switch it off, defrost, clean, dry, and leave the door open to prevent mould from developing within the appliance.

Note: This appliance contains the flammable blowing agent cyclopentane. Please avoid contact with fire when you transport and use it. In case of an appliance breakdown, use a professional service for repairs. Please send it to your local appointed disposal station when you discard it.

# COMPONENTS DESCRIPTION

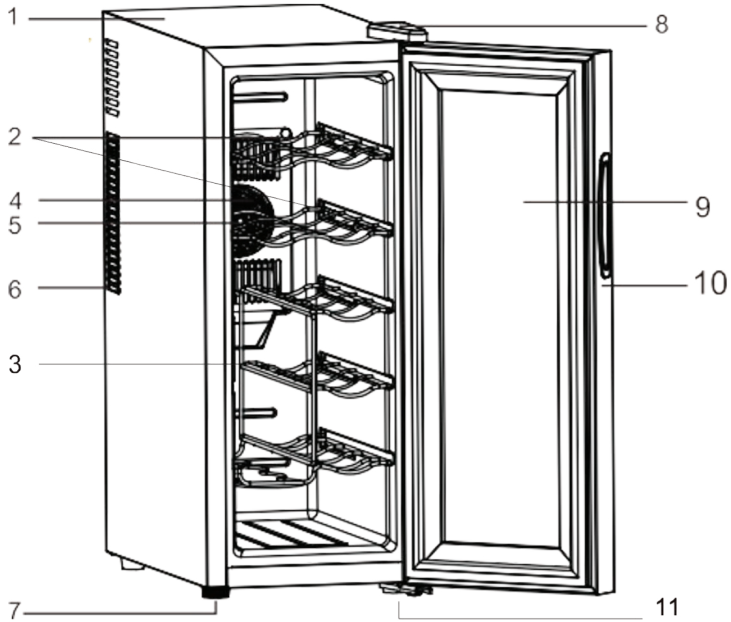

1. Housing

2. Wavy Shelf (x2)

3. Vertical Shelf (x1)

4. Fan

5. Fan Cover

6. Ventilation Holes

7. Levelling Legs

8. Upper Door Hinge / Cover

9. Glass Door

10. Door Seal

11. Bottom Hinge

# TEMPERATURE CONTROL

It is recommended you place the 12 Bottle Wine Cellar Fridge in a place where the ambient temperature is between 23°-26°C/ 72°-78°F.

If the ambient temperature is above or below recommended temperature range, the performance of the unit may be affected. Placing your unit in extremely cold or hot conditions may cause interior temperatures to fluctuate. The temperature range of 10-18°C/50-64°F may not be reached.

Temperature Range of your Wine Cellar Fridge    10-18°C    50-64°F

PLEASE NOTE THAT THIS IS A WINE FRIDGE ONLY AND MUST NOT BE USED TO STORE FOOD.


## CONTROL PANEL







### HOW TO CONTROL THE TEMPERATURE

You can change the temperature display setting from Celsius to Fahrenheit by pressing the  button for 2 seconds.

Your 12 Bottle Wine Cellar Fridge has been equipped with an automatic control panel lock, that will activate 20 seconds after the last time a button has been touched.

Push the  button for 2 seconds to unlock the control panel. You will hear a "BEEP" sound to alert you that the control panel settings option is now active.

You can set the temperature as you desire by pushing the  or  on the control panel. The temperature that you desire to set will increase by 1 °C if you push the  button once. The temperature will decrease by 1 °C if you push the  once.

NOTE: When you use the Wine Cellar Fridge for the first time or restart the Wine Cellar Fridge after not using it for a long time, there could be a few degrees of variance between the temperature you select and the one indicated on the control panel. This is normal and it is due to the length of the activation time. Once the Wine Cellar Fridge is running for a few hours everything will be back to normal.



## STORAGE CAPACITY

You can place 12 standard bottles in BF100.


Many bottles may differ in size and dimensions. As such, the actual number of bottles you may be able to store may vary. Bottle capacities are approximate maximums when storing traditional Bordeaux 750ml bottles and include bulk storage.

## INTERIOR LIGHT



You can turn the interior light ON or OFF by pushing the  button once. The light will be turned off automatically if it remains ON for 10 minutes. Press the  button again and the light will turn back on.

# ELECTRIC DIAGRAM

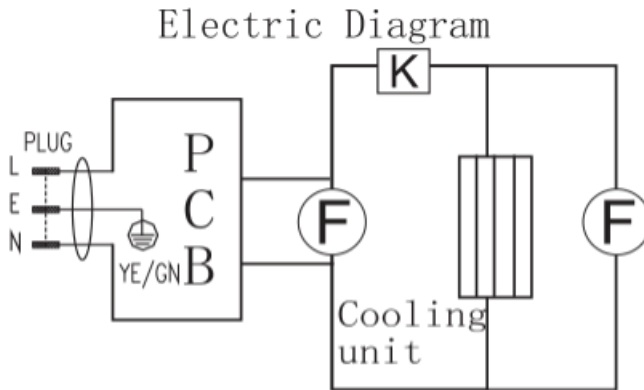

## USING YOUR WINE CELLAR FRIDGE

NOTE: Position your Wine Cellar Fridge so that the plug is accessible. Keep your Wine Cellar Fridge out of direct sunlight. Do not place it next to a heat-generating appliance. Do not place directly on the ground. Provide a suitable, clean & level surface.

### VERY IMPORTANT

The Wine Cellar Fridge will perform better in an ambient temperature of 20-25°C; We suggest the Wine Cellar Fridge be powered off if the ambient temperature is lower than 10°C.

After plugging in the appliance, allow the unit to cool down for 2-3 hours before placing any bottles inside.

Ventilation is very important for this kind of thermoelectric Wine Cellar Fridge; The inside electronics controlling the fridge will damage easily if the ventilation is bad. It will also reduce the life of the Wine Cellar Fridge.

If leakage occurs (which can be easily detected due to the unpleasant smell):

- 1: Switch off the Wine Cellar Fridge immediately
- 2: Ventilate the room thoroughly
- 3: Call the after-sales service department

The Wine Cellar Fridge uses a thermoelectric cooling system with an automatic defrosting system, so there is no need to defrost it manually.

## POWER SUPPLY

The Wine Cellar Fridge must be connected to a properly earthed socket in line with relevant valid country regulations before operating.

Check the rating label (which is on the side of the Wine Cellar Fridge) for voltage and frequency that corresponds to your local one.

## VENTILATION

Ventilation is very important for this kind of thermoelectric Wine Cellar Fridge, please refer to the following:

The appliance must be positioned where it maintains proper ventilation to the sides, top and rear of the appliance.

When positioning the wine fridge, ensure that there is at least a 2cm clearance at the sides and top, and at least a 5cm clearance at the back of the wine fridge. This will allow for adequate ventilation.



# CLEANING & MAINTENANCE

Turn off and unplug the unit prior to cleaning.

**CAUTION:** Failure to unplug the Wine Cellar Fridge could result in electrical shock or personal injury. Never get electrical components wet.

Wipe the inside surfaces and shelves with a soft damp cloth. Be careful when cleaning the control panel, or around any electrical parts. Never spray with liquids or submerge the unit in water or any other liquid. Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

## TROUBLESHOOTING

Symptom: No Cooling

Possible Reason	Action
No Power	Make sure the appliance is correctly connected to power.
PCB is broken	Contact the after-sales service.
Fan is broken	Contact the after-sales service.
Leakage	Contact the after-sales service.
Cooling module broken	Contact the after-sales service.

Symptom: The Wine Cellar Fridge is not reaching the set temperature

Possible Reason	Action
High ambient temperature	The room temperature is hotter than normal. Keep the appliance away from heat sources.
The door is opened too often	Leave the door closed for a longer time.
Poor ventilation	Install the Wine Cellar Fridge according to our ventilation instructions.
The door seal is worn out	Replace the door seal - contact the after-sales service.

Symptom: The appliance makes a lot of noise

Possible Reason	Action
Dust	Clean the dust from the fan.
Fan is broken	Contact the after-sales service.
Problem with the heat pump	Contact the after-sales service.

Symptom: Frost or Ice inside the wine fridge

Possible Reason	Action
The appliance is not defrosting properly	Turn off the fridge for at least one hour, then restart it.
Low ambient temperature	Adjust the ambient temperature to around 25°C.

# TECHNICAL DATA

Model No.	BF100
Net Volume Liters	35L
Voltage (V)	220 ~ 240
Frequency (Hz)	50/60
Rated Power (W)	58
Dimension (mm)	252x500x650
Packing (mm)	290x540x670
Net Weight (kg)	12kg
Gross Weight (kg)	13.2kg

## CORRECT DISPOSAL OF THIS PRODUCT



This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

# LENOXX®

[www.lenoxx.com.au](http://www.lenoxx.com.au)



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia