

Barista Mate®

Iced Coffee Maker



Model: CM300 | Batch: PR4744

HOUSEHOLD USE ONLY

Carefully read all instructions before use and save for future reference.

IMPORTANT SAFEGUARDS

Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock and injury when correctly followed. Keep this manual in a safe place for future reference, along with the warranty card, purchase receipt and packaging. If applicable, pass these instructions on to the next owner of this appliance.

When using electrical appliances, to reduce the risk of personal injury or damage to property, basic safety precautions must be observed, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not place or immerse the cord, plugs or appliance in water or any other liquid.
- This appliance is not intended for use by children or by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when the appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children.
- Unplug from the outlet when the appliance is not in use and before cleaning.
- Allow the appliance to cool before putting on or taking off parts and before cleaning the appliance.
- Do not operate the appliance if the power cord is damaged or after the appliance has been dropped or damaged in any way. If damage is suspected, contact after-sales support for further advice.
- The use of an accessory not included with this appliance may result in fire, electric shock or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.

- Do not use the appliance for anything other than its intended use, misuse can cause injuries.
- Always use the appliance on a flat, dry, heat-resistant surface.

WARNING

Scalding may occur if the lid is removed or opened during or immediately after the brewing cycles.

Contents may be hot. Allow to cool before opening the lid.

This appliance may emit steam while brewing or while contents are hot. To avoid steam burns, keep away from steam. Open the lid away from hands and face.

- Do not place a hot container on a wet or cold surface.
- Avoid sudden temperature changes, such as rinsing, washing, filling, or immersing a hot container with cold liquids.
- Do not use chemical, steel wool or abrasive cleaners to clean the appliance.
- Do not allow children or persons with reduced physical, sensory, or mental capabilities or prone to falls for any reason to hand, use or play with the included straw. Keep away from children.
- Do not use the included straw while on wet or slippery surfaces, running or jogging.
- Do not use the included straw if it has been placed in the freezer. Allow it to warm to room temperature before using.
- Always turn the power off at the power outlet before you insert or remove the plug. Remove by grasping the plug - do not pull on the cord.
- Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Always disconnect the appliance from power if it is left unattended and before assembling, disassembling, or cleaning.
- This appliance should not be used by children. Keep the appliance and its cord out of reach of children.

- Only connect the appliance to a power outlet of the same voltage (AC only) as that marked on the Rating Plate of the appliance.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Never leave the appliance unattended while in use.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use the appliance for any purpose other than its intended use.
- Do not place the appliance on or near flammable or hot objects.
- Do not operate the appliance with wet hands.
- Some appliances are 'sealed' using tamper-proof screws to avoid tampering/maintenance by unskilled or unqualified persons and also for safety reasons.
- Do not attempt to repair, disassemble, or modify the appliance.
- Never cover the appliance when it is in operation.
- This appliance is for household, indoor use only.
- Only use the appliance for domestic purposes.
- A short power supply cord is provided to reduce the risk of becoming entangled or tripped over; which may occur with a longer cord.
- Do not operate the appliance with an empty water tank.
- Keep the area above the appliance clear during use, as hot steam will escape the appliance.

WARNING

To reduce the risk of electric shock, do not immerse or expose the product, cord or plug to rain, moisture or any liquid.

Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces.

In the event where the appliance is dropped into water; turn off the power at the power outlet and remove plug immediately.

DO NOT REACH INTO THE WATER TO RETRIEVE IT UNTIL IT HAS BEEN DISCONNECTED FROM THE POWER OUTLET.

It is important to note that the appliance will have to be inspected by a qualified technician before using it again.

PARTS LIST



1. Start button
2. Base & water reservoir
3. Brew spout
4. Lid
5. Reusable coffee filter
6. Brew basket

7. Drip-stop switch
8. Scoop
9. Tumbler
10. Tumbler straw
11. Tumbler lid
12. On/Off button

GETTING STARTED

Before first use

Unpack the box with care and keep the original packaging carton in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible.

WARNING

Remove any promotional materials. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.

Unwind the cord to its full length and inspect it for damage. Do not use the appliance if any part is damaged. In case of damage, contact our after-sales support for advice on the examination, repair or return of the damaged product.

Place the appliance on a flat, level and dry surface, close to an electrical outlet, but do not yet plug it in.

WARNING

Electric shock hazard! Never immerse the appliance or cord in water or any other liquid.

CAUTION!

To avoid potential damage to the appliance, do not plug in the appliance without water in the appliance.

1. Wash the tumbler (9), tumbler lid (11), tumbler straw (10), coffee filter (5) and brew basket (6) in a mixture of mild detergent and water. Rinse each thoroughly. Place the appliance on a flat, level and dry surface, close to an electrical outlet, but do not yet plug it in.

2. Start with the appliance unplugged. Fill the tumbler (9) with water to the WATER marking and pour into the reservoir (2). Place the brew basket (6) in position and the coffee filter (5) into the brew basket (6). Turn the drip-stop switch (7) to the open position.

3. Position the tumbler (9) under the brew spout (3). Connect the appliance to the power outlet.

4. Press the On/Off button (12) to ON (-) position and press START button (1).

Note: When the appliance is turned on the LED light will illuminate.

5. When brewing is complete, discard water from the tumbler (9) and rinse the tumbler (9) thoroughly with clean water.

6. Your Iced Coffee Maker is now ready for use.

Instructions

1. Start with the appliance unplugged.

WARNING

To prevent injury from hot steam or potential damage to the appliance, do not plug the appliance in until the water is in the reservoir and the tumbler is put in place under the brew spout.

2. Fill the tumbler (9) to the WATER marking with clean cold water.

3. Lift the lid (4) of the unit and remove the brew basket (6), exposing the water reservoir (2).

4. Pour the water into the reservoir (2).

NOTE: Never fill the water reservoir (2) above the MAX fill line.

5. Place the brew basket (6) back on top of the reservoir (2). Place the reusable coffee filter (5) into the brew basket (6).
6. Turn the drip-stop switch (7) to open.
7. Using the coffee scoop (8), add a level scoop of grounds into the provided coffee filter (5). Close the lid (4).
8. Fill the tumbler (9) with large ice cubes to the ICE marking.
9. Place the tumbler (9) full of ice under the brew spout and connect the appliance to the power. Press the START button (1) and ensure the LED light is illuminated.
10. Wait 3-4 minutes for brewing to complete. Once dripping slows and stops, turn the drip-stop (7) to closed to stop the flow of coffee.
11. Add in your favourite coffee mix-ins for coffee just how you like it.
12. Insert the straw (10) into the lid (11), place the lid (11) on the tumbler (9) and enjoy.

CLEANING AND CARE

Minerals (like calcium and limestone) found in water can leave deposits in your Iced Coffee Maker and affect its performance. De-calcifying your Iced Coffee Maker is an important part of ensuring your coffee always tastes great. We recommend de-calcifying your Iced Coffee Maker once per month to keep it at peak performance.

1. Prepare 1 cup (250ml) of undiluted white household vinegar. Pour the vinegar into the water reservoir (2).
2. Place the reusable coffee filter (5) into the brew basket (6) and close the lid (4).
3. Place the tumbler (9) under the spout and press the START button (1) to run a brew cycle.
4. Once the brew cycle is complete, discard the contents of the tumbler (9). Remove the coffee filter (5) from the brew basket (6).
5. Rinse the tumbler (9), coffee filter (5) and brew basket (6) with clean water.
6. Fill the tumbler (9) to the WATER marking with clean water and pour water into the water reservoir (2).
7. Place the tumbler (9) under the spout (3) and press START button (1) to run a brew cycle.
8. Discard water and rinse tumbler (9) thoroughly with clean water.
9. Repeat steps 6-8 one more time, to ensure the Iced Coffee Maker is thoroughly rinsed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iced Coffee Maker is not working	The Iced Coffee Maker is not connected to the power outlet	Check whether the plug is insert in the power outlet and whether the power outlet has electricity.
There isn't a strong coffee taste	Not enough coffee powder	Add an extra ½ scoop or Full scoop of coffee to suit your personal preference.
No ice in my coffee after the coffee has been brewed	Small ice cubes or not enough ice cubes	Use large ice cubes as these will melt slowly keeping your iced coffee colder for longer. Also ensure that the tumbler is filled with ice to the "ICE" marking.
Coffee not dispensing into the tumbler	The drip-stop lever may be set to closed	Slide the drip stop lever to open and your coffee should flow through.
There are coffee grounds in my iced coffee	Overfilled coffee filter	Use less coffee grounds on the next cycle

Technical Parameters

Voltage 220-240V~ 50/60Hz

Power 590-700W

Model CM300

RECIPES

The below recipes can be used to add flavouring to your Iced Coffee.

Vanilla Sugar Syrup

Ingredients

- 125g white sugar
- 250ml water
- 2.5ml vanilla extract

Method

Combine sugar and water in a medium saucepan over medium heat, stirring until the sugar has dissolved. Let cool completely and stir in vanilla extract; set aside in the refrigerator until ready to serve.

Cinnamon Brown Sugar Syrup

Ingredients

- 125g brown sugar
- 2.5g cinnamon
- 80ml water

Method

Combine the sugar, cinnamon and water in a small saucepan over medium heat. Whisk until the sugar dissolves and the mixture is bubbling. Reduce the heat to low and cook for 1 to 2 minutes. Let cool completely before storing in a jar.

Almond Syrup

Ingredients

- 125g sugar
- 80ml water
- 5ml almond extract

Method

Combine the sugar, water and extract in a small saucepan over medium heat. Whisk until the sugar dissolves and the mixture is bubbling. Reduce the heat to low and cook for 1 to 2 minutes. Let cool completely before storing in a jar.

LENOXX®

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia