

# LENOXX®

## Cordless Steam Iron



Model: CSI232 | Batch: PR4729

Carefully read all instructions before use and save for future reference.  
HOUSEHOLD USE ONLY

# IMPORTANT SAFEGUARDS

## PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

1. Before connecting the iron make sure that the voltage indicated on the iron is suitable for your home.
2. Do not use the iron for anything other than its intended use.
3. To protect against a burn or injury, do not iron or steam any clothes that are being worn.
4. The iron should always be switched off before plugging or unplugging from the outlet. Never pull the cord to disconnect from the outlet.
5. Do not allow the cord to touch a hot surface. Allow the iron to cool completely before storing.
6. The iron must only be used with the provided power base.
7. Always disconnect the iron from the electrical outlet for filling or emptying water or when not in use.
8. To avoid the risk of electric shock, do not operate the iron with a damaged cord or if the iron has been dropped or damaged. For repair, contact customer service.
9. Close supervision is necessary if this appliance is used near children. Do not leave the iron unattended while connected or on an ironing board.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
11. Burns can occur from touching hot metal parts, hot water, or steam. Hot water may leak from the iron. Use caution when filling or turning the steam iron upside down.

12. To protect against burns or injury, do not direct steam toward the body when ironing.
13. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
14. Store the iron in a clean, dry place away from direct sunlight or heat sources.
15. Do not immerse the iron or the base in water or any other liquid.
16. To prevent damage to fabric and textiles always follow the temperature guide carefully.

### Technical Parameters

Voltage	220-240V~ 50Hz
Power	2200W
Model Number	CSI232
Water Tank Capacity	320ml



A: Steam regulator

G: Water tank

B: Steam burst button

H: Ceramic Coating Soleplate

C: Spray button

I: Water Spray Nozzle

D: Charging indicator light

J: Water inlet and cover

E: 360° charging base with cable

K: Self-cleaning button

F: Temperature control

## Filling the water tank

Make sure the iron is turned off and the power cord is unplugged from the electrical outlet.

1. Set the steam regulator to the 0 position before filling the iron with water.
2. Open the water inlet cover and fill the tank.
3. The water level can be observed through the transparent part of the tank when the iron is placed vertically. In case the water level becomes low, refill the tank, following the procedure described in steps 1 to 3 above.
4. Pour out the remaining water after use.

Note: Use regular tap water. Do not use any water additives or substitute water with any other liquid as that can stain fabrics or damage the iron. Do not overfill the water tank.

## Steam iron

1. Fill the iron as described above.
2. Plug the cord into an electrical outlet.
3. Position the iron on the base and turn the temperature control dial to the steam position.
4. Preheat the iron until the indicator light goes out. The light will turn off when the selected temperature is reached.
5. The iron is ready to use.

## Steam burst

The burst of steam feature provides additional steam for removing stubborn wrinkles. It may be used with steam or dry ironing.

Press the steam burst button. Wait a few seconds for the steam to penetrate the fabric before pressing the button again for more steam.

## Spray function

Note: Before using the spray feature, check the fabric label for ironing instructions to make confirm it can be sprayed.

The spray feature is particularly helpful for removing stubborn wrinkles. The spray may be used with steam or dry ironing. Simply press the spray button whenever spray is desired.

## Dry ironing

The iron can be used for dry ironing. Set the steam regulator to the off position and set the temperature as needed. The water tank can be left empty unless using the spray function.

## Anti-calc function

The anti-calc function eliminates impurities from the water and reduces the problems connected with limescale build-up. To prolong the efficiency of this system, follow these steps occasionally:

1. Unplug the iron and allow it to cool down.
2. Fill the included measuring cup  $\frac{3}{4}$  full of water. Add 1 teaspoon of salt to the water and fill the water tank with this solution.
3. Leave the solution in the water tank for 15 minutes, shaking occasionally, and then empty it.
4. Fill the water tank a second time with a salt water solution, shaking occasionally and empty it again after 15 minutes.
5. Fill the tank with fresh water to rinse and then discard the rinsing water.

## Anti-drip function

This system controls the water flow to the soleplate at all times. Below a certain temperature, the anti-drip function cuts off the flow of water and stops the iron from dripping onto the fabric.

## After each use – cleaning & storing

1. Turn the iron off and unplug it.
2. Empty the water tank immediately after use. Do not store the iron with water in it.
3. Wait until the iron has cooled before storing it. If needed, the outside surface of the iron can be wiped with a damp cloth. Note: never use harsh chemicals to clean the iron.
4. Always place the iron vertically on the base to protect the soleplate from scratches, corrosion or stains.

## Soleplate care

Starch and other residues may be easily removed from the soleplate with a damp cloth. To avoid scratching the surface, never use scourers to clean the soleplate, and never place the iron on a rough surface.

## Self-cleaning

1. Fill the water tank  $\frac{1}{2}$  full with water and position the iron on the base.
2. Select the temperature control dial to MAX and plug in the iron.
3. Allow the iron to heat up until the indicator light goes out.
4. Unplug the iron from the electrical outlet.
5. Keep the iron horizontally over a sink.
6. Set the steam control to the maximum position. Press the self-cleaning button, the steam will now emit from the holes in the soleplate.
7. Move the iron forwards and backwards while this happens; keep going until the water tank is empty.
8. Turn the steam knob to the off position. Place the iron on the base and plug it in.
9. Set the temperature dial to the 'MAX' position, and let the iron heat up again, the remainder of the water inside the steam chamber will now vaporize and leave the iron through the soleplate. During this process of dry steaming, it is advised to use the iron over an old piece of cloth.

# LENOXX®

[www.lenoxx.com.au](http://www.lenoxx.com.au)



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia