

---

**LENOXX***Portable***EVAPORATIVE COOLER****Model Number: EC06 / Batch number: PR4423****User Manual**

Please read and keep manual to ensure safe and effective use.

**HOUSEHOLD USE ONLY**

# Table of Contents

**Important Safety and General Instructions .....3-4**

**Parts List Diagram .....5**

**Operating Instructions .....6-8**

**Cleaning, Care and Maintenance .....9**

**Warranty Details and Customer Support Hotline ..... 10**

---

# Important Safety and General Instructions


The illustrations used in the manual are to illustrate the operation method and product structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. The safety precautions enclosed here in reduce the risk of fire, electric shock and injury when correctly adhered to.

1. Read all instructions before using the Lenoxx EC06 Evaporative Cooler.
2. Remove and safely disregard any packaging material and labels before using this product for the first time. Ensure children and babies do not play with plastic bags or any packaging materials.
3. Close supervision is necessary when any appliance is used by or near children.
4. Do NOT use the Evaporative Cooler for other than its intended use.
5. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the appliance.
6. To protect against the risk of electric shock, do not immerse the motor unit, cord set or plug in water or any other liquid, or rinse under a tap.
7. The Evaporative Cooler is not intended to be operated by means of an external timer or any type of separate remote-control system.
8. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
9. This Evaporative Cooler is intended to be used **indoors for household use only**.
10. Before use, always ensure the Evaporative Cooler contains water. After cleaning, the water tank should be emptied.
11. When humidity is high, the Evaporative Cooler should be operated at normal fan type.
12. Do NOT use an extension cord unless completely necessary with this product. If an extension cord is used please ensure that it has a rating equal or exceeding the rating of this appliance.
13. Do NOT pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
14. Do NOT bend or damage the power cord.
15. Always unplug the appliance when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord. The power plug must be removed from the power socket before cleaning, servicing, maintenance or moving the Evaporative Cooler.
16. Do NOT move or lift the Evaporative Cooler while the power cord is still connected to the wall outlet or still on. Always ensure it is switched off.
17. Never force the plug into an outlet.
18. To reduce the risk of electrocution, never operate this product with wet hands, submerge under water or spill liquids into the product.
19. Do NOT leave the Evaporative Cooler unattended when in use.

- 
20. Do NOT place the appliance near a hot gas or electric burner.
  21. Do NOT cover the appliance whilst in use. If it is covered there is a risk of fire.
  22. Improper installation may result in the risk of fire, electric shock and/or injury to persons
  23. If the power cord is damaged; it must be replaced by the manufacturer, its service agent or a similarly qualified person to avoid a hazard.
  24. Do not let the cord hang off the edge of a bench, table or touch a hot surface.
  25. The manufacturer is not responsible for any eventual damages caused by improper or faulty use.
  26. The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
  27. Do not use the device at room temperatures above 40 °C.
  28. Do not leave the appliance exposed to harsh weather conditions (direct sunlight, rain, etc.).
  29. Do NOT place the product in or near an open window as rain may enter the product and cause electrical short-circuiting.
  30. Do NOT insert fingers or any other object through the grilles or into any opening of the product.
  31. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
  32. This appliance is intended to be used in household and similar applications such as:
    - staff kitchen areas in shops, offices and other working environments;
    - farm houses;
    - by clients in hotels, motels and other residential type environments;
    - bed and breakfast type environments.
  33. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner, take it to the store where the unit was purchased or call Lenoxx customer service for further assistance on 1300 666 848

 **Parts List**

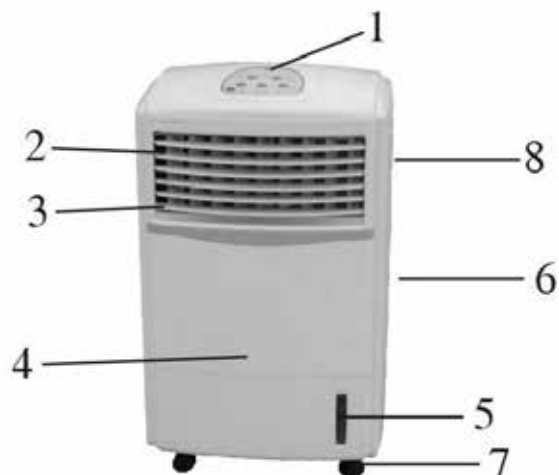

- 1. Control Panel
- 2. Vertical Grill
- 3. Horizontal Grill
- 4. Main Body
- 5. Water Level Indicator
- 6. Water Tank Opening
- 7. Castor Wheels
- 8. Handle
- 9. Cold PAK
- 10. Remote Control (not pictured, requires 2 x AAA batteries. Batteries not included.)
- 11. Ice tray opening

9




Fill the bottles with water and place in freezer.  
 Do not fill completely to the top, leave some space in the bottle for ice to expand.  
 Once frozen place inside the cooler through the water tank opening (6).  
 Inside the water tank opening, there is a piece of string which can be used to hook/secure the bottle.



11

**Operating Instructions**

 **Control Panel (on Unit)**

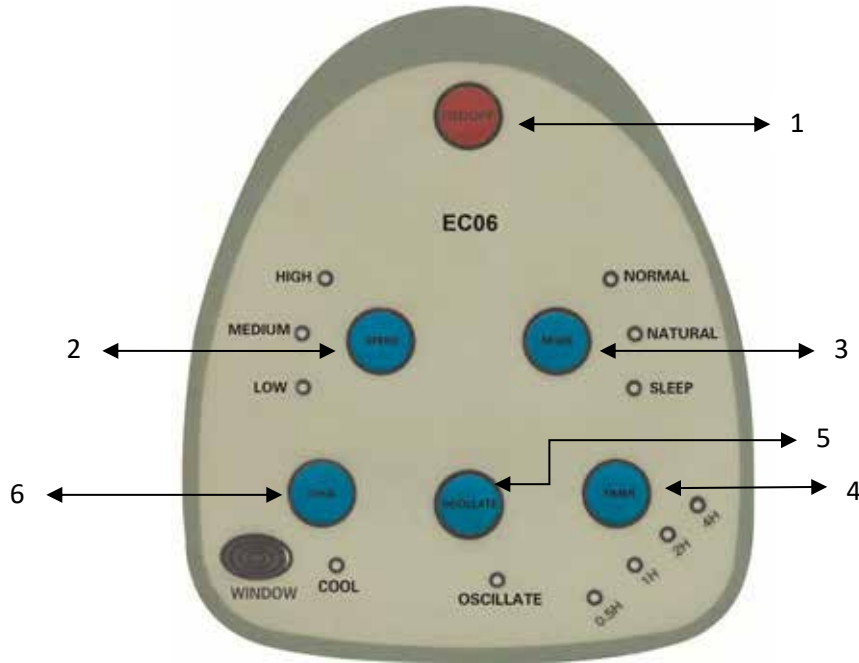

**1. ON/OFF**

To switch evaporative cooler on, press the **ON/OFF** (1) button.  
Press again to turn off.

**2. Speed Selector** – You can choose from 3 speeds by pressing the SPEED selector button (2) repeatedly to choose between LOW, MEDIUM and HIGH.

**3. Mode** – Press the MODE button (3) to choose from the below options:

**Normal** – Continuous operation at your chosen speed setting.

**Natural** – In natural mode, the Cooler will cycle depending on the speed setting chosen:

HIGH – cycles between HIGH/MED/LOW/OFF

MEDIUM – cycles between MED/LOW/OFF

LOW – cycles between LOW/OFF

**Sleep** – In this mode, the Cooler cycles between MED/LOW/OFF. To activate sleep mode, you will need to set the TIMER to the period of the time that you desire. After the timer has expired, the Evaporative Cooler will switch OFF automatically and go to sleep.

**NOTE:** ONE full cycle is approximately 100 seconds. The Cooler will stop blowing air during this cycle for a few seconds. This is a normal part of the Natural and Sleep mode cycle.

**4. Timer** - The timer options are for 0.5, 1.5, 3.5 or 7.5 hours. Press the TIMER button (4) once to select 0.5 hours. The 0.5 will illuminate on the control panel. Press again to select 1.5 hours (both 0.5 and 1 will illuminate). Pressing 3 times will set the timer for 3.5 hours (0.5, 1 and 2 will illuminate). To set the maximum of 7.5 hours, press the TIMER four times (all 4 lights will be illuminated).

**NOTE:** The numbers illuminated on the display need to be added together, and the total will equal the length of time that the Evaporative Cooler stays on for. These numbers are represented by 0.5, 1, 2 and 4 on the control panel.

**5. Oscillate** – Press the OSCILLATE button (5) to turn on the automatic horizontal louvre function. The indicator light will illuminate when this function is chosen. The vertical direction can also be adjusted manually by moving the louvre in the direction you wish.

**6. Cool** – Press the COOL button (6) to switch to cool air flow.

Window: This is the sensor for the remote control.



**Remote Control** – The Evaporative Cooler comes with a remote-control for more convenience.

 
The remote requires 2 x AAA batteries (not included).

The functions on the remote control are the same as those on the control panel of the main unit.

## Operation

1. Place the Evaporative Cooler on a level, dry surface.
2. Open the water tank cover and pour in clean water or ice. If you use ice, you will actually get a cooler air temperature. Do NOT fill the water tank above MAX level indicator in the water tank.

**NOTE:** If fresh water/ice is required for next use, (or to empty the water tank) place a water container or bucket under the plug hole (found on the bottom of the unit) and remove the rubber plug. The residual water will then drain out from the water tank.

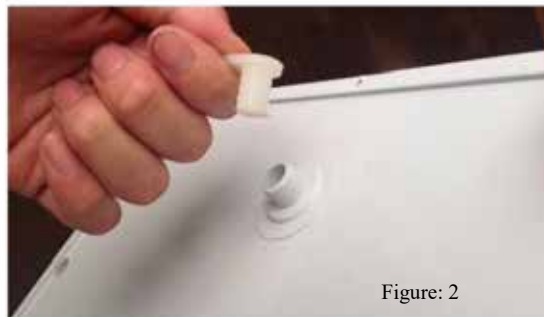

3. Select the wind speed by pressing the SPEED button. Please note the default wind speed is medium when you first press the **ON** button.
4. Press the MODE button to choose your desired setting.
5. Set the timer by pressing the TIMER button. The minimum setting is 0.5hr and maximum is 7.5hr.
6. To turn on horizontal oscillation, press the OSCILLATE button. You can control the vertical flow by manually adjusting the vertical louvres on the Evaporative Cooler.
7. To utilise the humidifying function, fill the Cold PAK with cold water then place in the freezer until they are frozen. Next, place inside the water tank. This will lower the water temperature, and the Evaporative Cooler will begin to humidify the air.



---

## Cleaning, Care and Maintenance

**NOTE:** Always unplug the Evaporative Cooler from the electrical outlet and allow it to cool before servicing, relocating, cleaning, or storing it.

- Remove the rubber plug from the back of the unit and drain the water (place a bucket beneath the plug for the water to drain into). (see above figure 1 & 2 where rubber plug is found)
- Clean the body with a soft, slightly damp cloth; do not use abrasive or corrosive products.
- Clean the exterior surfaces only by wiping with a soft, damp cloth. Dust can be removed from the grille using a small vacuum.
- Do NOT disassemble the motor housing of this product for cleaning of internal parts, as doing so may result in product damage and will void the warranty.
- Do not immerse any part of the Evaporative Cooler in water or other liquid:
- It is essential that the motor's air vents be kept free from dust and lint.
- If the Evaporative Cooler is not used for long periods (e.g., over winter), it is recommended to store the Cooler away in its original packaging in a cool dry place.

# LENOXX

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia

www.lenoxx.com.au

**LEADERS IN SOUND ENTERTAINMENT**

**Lenoxx Electronics (Aust) Pty Ltd**  
6 Oban Court Laverton North Vic 3026  
Phone (03) 9267 2100 Fax (03) 9267 2199  
**ABN 97 844 321 851**  
Email Address: [lenoxx@lenoxx.com.au](mailto:lenoxx@lenoxx.com.au)  
Web Site: [www.lenoxx.com.au](http://www.lenoxx.com.au)

**WARRANTY CARD**

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES, ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

**CAUTION:**

**CHOKING HAZARD – UNIT MAY CONTAIN SMALL PARTS NOT SUITABLE FOR CHILDREN UNDER THE AGE OF 3.**

**IMPORTANT MESSAGE:**

***BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR, YOU MUST SUPPLY PROOF OF PURCHASE (ORIGINAL RECEIPT) TO VALIDATE YOUR WARRANTY***

**THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.**

***“Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure”.***

For warranty registration please visit our website  
[www.lenoxx.com.au](http://www.lenoxx.com.au)  
Service Direct Line (Australia only): 1300 666 848

MODEL NO:

EC06

BATCH NO:

PR4423