

Healthy Choice[®]

1.8L Electric Glass Kettle



Model: GK400 | Batch: PR4920

HOUSEHOLD USE ONLY

Carefully read all instructions before use and save for future reference.

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

When using the appliance, basic safety precautions should be followed, including:

1. CAUTION! Risk of fire!
 - Keep the appliance away from heat sources.
 - Do not let the power cord hang over table corners and keep it away from hot surfaces.
 - Do not place on or near a gas or electric burner or in a heated oven.
2. Keep this appliance in a low-humidity environment.
3. To protect against fire, electric shock, or personal injury, do not immerse the kettle, power base, cord or plug in water or any other liquid.
4. Close supervision is necessary when any appliance is used by or is near children.
 - Keep the appliance and its cord out of reach of children under 8 years old.
 - This appliance may only be used by or kept near children over the age of 8 years if they are closely monitored during use.
 - Never leave this appliance unattended while in use.
 - This appliance may be used by persons with limited physical, sensory or mental abilities, or lack of experience and knowledge only if they are under the proper supervision or have received instructions for safe operation.
5. Do not modify this appliance under any circumstances.
6. Do not use this appliance if any parts are damaged or the device is malfunctioning.
7. Only qualified technicians should perform repairs.
8. Use this kettle with the supplied power base only.

9. Make sure household voltage matches the rated specification.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. Using attachments that are not recommended by the manufacturer may result in fire, electric shock, or injury
12. Do not operate the appliance when empty to avoid damaging the heating elements.
13. Ensure that the kettle is used on a firm, horizontal and flat surface that is out of reach of children. This can prevent the appliance from overturning and help avoid damaging the user and/or kettle.
14. Do not move this appliance while it is switched on.
15. Use only cold water when filling the device.
16. The water level must be between the MAX. and MIN. marks.
17. Make sure that the kettle is switched off before removing it from its power base.
18. Do not use this appliance outdoors.
19. Do not use this appliance and the power base for any purpose other than its intended use.
20. This appliance is intended to be used for household and similar applications, such as:
 - Staff/kitchen areas in shops, offices, and other working environments;
 - Farm houses;
 - By clients in hotels, motels, and other residential-type environments;
 - Bed and breakfast type environments.
21. Unplug the power cord when not in use, before repositioning, and before cleaning.
22. **WARNING! Risk of scalding!**
 - Be careful when opening the lid for refilling when the kettle is hot.
 - Do not overfill the kettle. Take care to pour water slowly and do not over-tilt the kettle to avoid the risk of splashing.
 - Always ensure that the lid is closed during the boiling process or when pouring out hot water in order to prevent scalding.
 - Do not contact steam from the spout or open the lid when water is

boiling or just after it has been switched off.

- Be careful when moving the kettle containing hot water.
- The kettle becomes hot during use. Allow this device to fully cool before touching any surface that may be hot. Use the handle at all times.
- Allow the kettle to cool down completely before cleaning and storing.

CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents. Use a soft cloth and a mild detergent to clean.

Technical Parameters


Product Name	1.8L Electric Glass Kettle
Model No.	GK400
Rated Voltage	220-240V
Rated Frequency	50Hz
Total Power	1500W

BEFORE FIRST USE

Before using the kettle for the first time, remove all packaging materials.

Before using the kettle for the first time, or if it has not been used for a long time, it is recommended that you clean the kettle by boiling a full kettle of water twice and discarding the boiled water. Use only water without any additives.

PRODUCT OVERVIEW

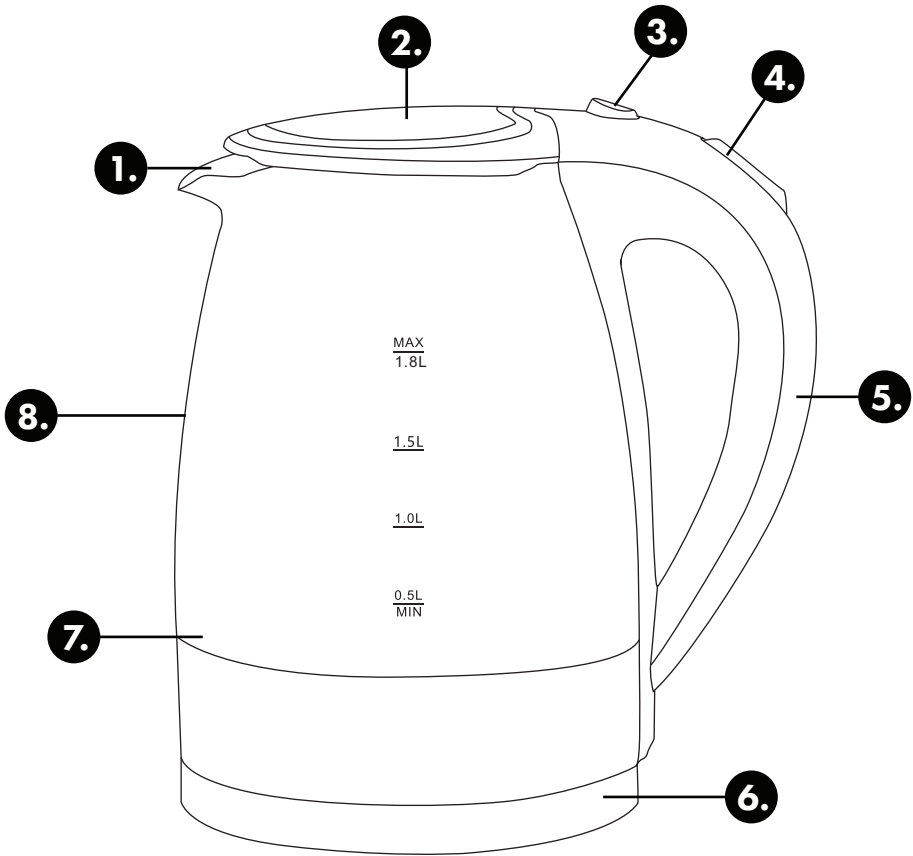

1. Spout

2. Lid

3. Open button

4. On/Off switch

5. Handle

6. Power base

7. Indicator light

8. Transparent double wall housing

USING THE KETTLE

Remove the kettle from the power base and open the lid by pressing down on the lid button.

Fill the kettle with water to the desired level. Always fill the kettle between the MIN (0.5L) line and MAX (1.8L) line.

- Too little water will result in the kettle switching off before the water has boiled.
- Do not fill the water over the MAX line, as water may spill out of the spout while boiling.

Close the lid until it snaps securely into place. Place the kettle onto the power base. Make sure the kettle makes complete contact with the power base.

NOTE: Ensure that the lid is firmly in place before connecting the power cord to the outlet.

Connect the power cord to a power outlet. Turn the power switch to the ON position to begin the boiling process. The power indicator light will illuminate.

The kettle will switch off automatically and the light will turn off once the water has boiled. You can stop the heating process by flipping the power switch off while the kettle is operating.

NOTE: Ensure that the power switch is clear of obstructions. The kettle will not turn off if the switch is constrained or if the lid is left open.

Lift the kettle from the power base using the handle and pour the water.

NOTE: Take care not to touch the kettle body as it will be hot. Operate carefully when pouring water from your kettle, as boiling water may

result in scalding. Do not open the lid while there is hot water inside.

The kettle will not re-boil until the power switch is flipped up again.

The kettle may be stored on the power base while not in use.

NOTE: When not in use, unplug the power base from the electrical outlet.

Boil-Dry Protection

If you accidentally operate the kettle without water, the boil-dry protection will automatically shut it off. If this happens, let the kettle cool completely before filling it with cold water and boiling it again.

CARE & CLEANING

Before cleaning the kettle, make sure it is disconnected from the power supply and has cooled down completely. To prevent the risk of electric shock, avoid cleaning the kettle and its base with water, and refrain from immersing it in water. Do not clean it under running water. Avoid using abrasives, harsh cleaning solutions, or hard brushes.

To prevent scale or lime deposit buildup, empty the kettle after each use.

Descaling

Depending on your area's water quality, lime deposits may accumulate on the heating element. It's recommended to remove such deposits regularly. A mixture of 0.5L of water and 40 ml of vinegar is suitable for descaling. Pour the mixture in, switch the kettle on, and let the solution

reach its boiling point. Leave the descaler in the kettle for a short period. After descaling, clean the kettle thoroughly with clean water. Ensure sufficient ventilation during descaling, and avoid inhaling any vinegar vapours. Do not pour descaler down enamel-coated sinks.

Cleaning the External Housing

Wipe the exterior of the kettle with a soft, slightly damp, lint-free cloth.

Cleaning the Filter

Clean the filter with a soft, damp brush when necessary.

Storage

When not in use or in storage, you may wind the power cord around the cord storage under the kettle's base.

LENOXX

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics