

LENOXX™

1200W Halogen Heater



Model: H1052 | Batch: PR4863

Carefully read all instructions before use and save for future reference.

SAFETY INSTRUCTIONS

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. The appliance becomes hot during use; only touch plastic handles and switches.
2. Avoid touching the heating elements while hot.
3. Do not cover the appliance when hot to prevent fire risk.
4. Children should not operate the appliance without supervision.
5. Do not touch the appliance with wet hands or feet.
6. Keep the appliance indoors and protect it from rain and strong sun.
7. Do not move the appliance by pulling the cord; unplug safely.
8. A light click after switching on/off is normal and indicates heating/cooling.
9. Remove all packaging and promotional labels. Keep packing materials out of reach of children and dispose of them according to local regulations.
10. Ensure mains voltage matches the appliance specifications.
11. The appliance is for domestic use only.

Model	H1052
Rated Power	3x400W 400-800-1200W
Rated Voltage	220-240V~
Frequency	50-60Hz

BEFORE USE

1. Before each use, inspect the appliance and cable for damages.
2. Keep the appliance away from heat sources and flammable materials.
3. Ensure a clear space of 1 m in front and 0.5m on the sides.
4. Place the appliance on a flat surface; ensure the safety system contacts the floor.
5. Position the cable away from hot surfaces and do not wind or bend it.
6. Avoid using the appliance near water sources to prevent electrical shock.

ASSEMBLY

1. Place the appliance on a flat, stable surface.
2. Unscrew the wing nut screws from the lower part of the body frame.
3. Insert the power cord through the slot in middle part of the base plate and then assemble the body frame to the base plate.
4. Secure the body frame to the base plate using the two wing nuts previously removed.

OPERATION

1. Plug in and switch on; the central heating element will light up.
2. Use individual switches for other heating elements.
3. Activate the swinging function (TURN) to oscillate left and right.
4. To switch off, set all keys to "OFF," and unplug.

CLEANING AND MAINTENANCE

1. Switch off, unplug, and let the appliance cool before cleaning.
2. Protect the heating elements from dust to maintain heating properties.
3. Clean the body with a soft, damp cloth; avoid abrasive products.
4. Use a vacuum cleaner for delicate and/or hard to reach parts.
5. When not in use, cover and store in a dry place, preferably using the original packing.

LENOXX™

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics