

# LENOXX™

## 1500W Ceramic Heater



Model: HC113 | Batch: PR4863

Carefully read all instructions before use and save for future reference.

# SAFETY INSTRUCTIONS

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Keep children under 3 years away unless continuously supervised. Children aged 3-8 can only operate the appliance with supervision and shall not plug in, regulate and clean the appliance or perform user maintenance.
2. Caution:
  - Some parts can become very hot, especially when in use.
  - Do not use near water sources.
  - If the supply cord is damaged, contact the manufacturer for replacement.
3. Warnings and Precautions:
  - Keep combustible materials at least 100cm away.
  - Maintain clear air inlets and outlets (1 m in front, 50cm behind).
  - Use only at the specified voltage.
  - Do not leave the appliance unattended while in use.



This symbol serves as a friendly reminder: please do not cover for effective operation and safety.

## PRODUCT OVERVIEW


The fan heater utilises advanced PTC heating technology, providing high efficiency, centralised heat, and versatile usage.

Model	HC113
Rated Power	1500W
Rated Voltage	220-240V~
Frequency	50-60Hz

## GETTING STARTED

1. Before use, ensure that the heating element and cable are intact.
2. Place the fan heater on a flat surface to prevent tipping.

Control Panel Functions:

- Off
-  Fan only
- I Low heat
- II High heat

Adjust the heating temperature using the thermostat knob. The appliance automatically cuts off power if tilted or lifted from the ground.

## OPERATION

### 1. Turning On:

Connect to the power source and turn the knobs on top of the appliance to the desired function and temperature.

## 2. Turning Off:

When not in use, turn off the power switch and unplug the appliance.

## 3. Moving the Heater:

Turn off the switches, unplug the appliance, and use the handle on the back for safe movement.

# MAINTENANCE

## 1. Cleaning:

- Ensure the plug is disconnected before cleaning.
- Use a soft, damp cloth with mild detergent; do not use abrasive detergents and do not immerse in water or any other liquid.

## 2. Storage:

- Store the heater in a dry place.
- If not in use, store it in the original packing or a rust-proof polybag.

# LENOXX™

[www.lenoxx.com.au](http://www.lenoxx.com.au)



1300 666 848



LenoxxElectronics



LenoxxElectronics