

Tower Power Board



Carefully read all instructions before use and save for future reference.



GENERAL SAFETY WARNING

If the powerboard or cord is damaged, contact Lennox Customer Service for advice. Do not attempt to open the board or replace the cord. The cord must be replaced by appropriately qualified personnel.

If the powerboard requires repair, contact Lennox Customer Service; never disassemble or modify the powerboard or attempt to service it yourself.

Run the power supply cord in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.

The powerboard is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.

Young children should be supervised to ensure they do not play with the power board. Close supervision is always necessary when any appliance is used by or near children.

The power board is designed for indoor use in dry places only.

Do not exceed a maximum loading of 2500 watts.

Before installing the powerboard, make sure to place it away from: heat sources, radiators or other products that produce heat; areas with high temperatures, high humidity or direct sunlight; excess dirt and dust; open windows and any place where water may get to the unit.

Do not immerse the cord, plug or power board in water or any other liquid.

INFORMATION

Overload Protection

The power board features overload protection to prevent damage to your electrical equipment. If the total power drawn exceeds the rated capacity, the socket will automatically turn off, ensuring safety and protecting your appliances. Additionally, it includes a high-temperature fuse anti-thunder device that guards against voltage surges. Enjoy peace of mind knowing your home appliances are always protected.

Technical Parameters

USB port type:	2 x USB A + 2 x USB C
----------------	-----------------------

Colour:	Black & White
---------	---------------

Power:	220-240V-10A 50/60Hz
--------	----------------------

USB output:	5V 2.1A
-------------	---------

Cord length:	2M
--------------	----

Model number	PT610 / PT1010
--------------	----------------

Cleaning

Only use a soft, dry cloth for cleaning the product; do not use a damp cloth. Never clean with detergent or chemicals. Wipe off any moisture, dirt or dust on the power sockets with a clean, dry cloth.

Storing

When not in use, disconnect from the power source and store in a cool, dry and well-ventilated location out of direct sunlight, and not subject to humidity.

LENOXX™

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia