

# LENOXX

AM/FM RADIO

MODEL: R26



## Specification:

Frequency range:

FM:88-108MHz

MW: 530 - 1600 KHz

Max power out put: >600mW

Loud speaker  $\phi$  77mm  $4\Omega$  3W

Battery 3x1.5v(UM-1X3)

DC 4.5V

AC:240/50Hz

Earphone jack:  $\phi$  3.5mm

## Battery operation:

Insert 3 x D size batteries into the compartment as per the polarity inside the battery compartment.

## Note:



When the batteries aren't going to be used for a long time,remove the batteries from radio to avoid leaking and damaging.

Rotate the Power/VOL. Knob counter clockwise to turn on the radio,you may hear a "d" sound. Continue to rotate it,the volume will increase,to turn off the radio, rotate the knob clockwise.

Rotate the tune knob up and down, then select the desired radio station.



Lenoxx Electronics (Aust) Pty Ltd  
6 Oban Court Laverton Norh 3026  
Tel: +61 3 9267 2100 Fax: + 61 3 9267 2199  
Email: lenoxx@lenoxx.com.au  
Website: www.lenoxx.com.au

 LenoxxElectronics  
 @LenoxxAustralia