

Healthy Choice®

ELECTRIC EGG STEAMER



Model: SE70 | Batch: PR4722

HOUSEHOLD USE ONLY

Carefully read all instructions before use and save for future reference.

IMPORTANT SAFEGUARDS

Please read these instructions carefully before using the appliance, and always follow the safety and operating instructions. When using an electrical appliance, basic safety precautions should always be followed including the following:

1. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the appliance.
2. Do not touch hot surfaces. Use handles or knobs only.
3. To protect against electrical shock, do not immerse the cord, plug, or any part of the appliance in water or any other liquid.
4. Close supervision is necessary when it is used by or near children.
5. Unplug the unit from the power outlet when not in use and before cleaning.
6. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
7. Do not place on or near a hot gas or electric burner, or in a heated oven.
8. Never leave the appliance unsupervised when in use.
9. From time to time check the appliance for damages. Never use the appliance if the cord or appliance show any signs of damage.
10. Only use the appliance for domestic purposes and in the way indicated in these instructions.
11. Never use the appliance near hot surfaces.
12. Never use the appliance outdoors and always place it in a dry environment.
13. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk damaging the appliance.
14. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
15. Always place the appliance on a table or other flat, horizontal surface.
16. Make sure the appliance is unplugged before inserting, removing, or cleaning one of the accessories. It is necessary to remove the accessories before cleaning them.
17. Only for cooking chicken eggs.

18. Make sure the cord never comes into contact with the hot parts of the appliance. Never touch the hot parts of the appliance, use the plastic handles. Always use oven mitts when handling the appliance. Make sure nothing comes into contact with the heating element of the appliance.

19. Before using the appliance, always check the water level in the water tank. Water is necessary as it is used for cooking. Before filling the water tank, always unplug the appliance. Be careful not to spill water on any of the electrical parts and do not exceed the maximum water level indicated in the water tank.

20. CAUTION: Avoid injuries from the egg-piercing device. Be careful not to hurt yourself with the needle (situated underneath the measuring cup) that serves for piercing the egg before cooking it, as it is very sharp. Make sure it is always clean as it comes into direct contact with food.

21. Never move the appliance when it is in use.

22. The appliance shouldn't be operated by means of an external timer or any kind of separate remote-control system.

23. Save these instructions for future reference.

24. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

25. Children should be supervised to ensure that they do not play with the appliance.


26. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

27. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential-type environments;
- bed and breakfast type environments.

28. This appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

PRODUCT INTRODUCTION

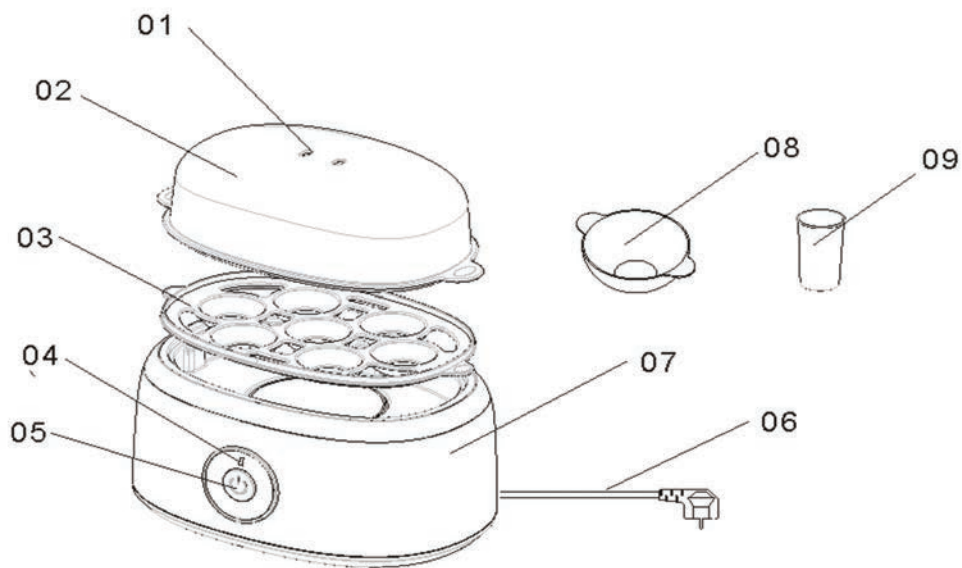

01. Steam outlet

02. Lid

03. Egg holder

04. Indicator lamp

05. Power switch

06. Power cord

07. Main unit

08. Bowl

09. Measuring Cup

NOTE: The boiling time depends on the size and temperature of the eggs. Depending on the content of minerals in the water of your region you may see a slight decolourisation of the egg shells. This does not affect the taste or the quality of the egg.

USING THE EGG STEAMER

Before first use

Remove all packaging materials. Clean the appliance thoroughly (refer to the “Cleaning & Maintenance” section of this manual).

Cook eggs to perfection

Using the measuring cup, measure out the required quantity of cold water (refer to the table below to determine the amount of water needed).

Type	Amount of Water	Cooking Time
Soft	60ml	7 min
Medium	80ml	11 min
Hard	100ml	14 min

NOTE: The above table is for reference only. Adjust the water level according to your own experience. Remember to always keep the egg steamer on a level, horizontal surface, and never place it on an incline.

Pour the water into the water tray and put the egg rack on top.

Pierce the rounded end of each egg with the egg piercer, which you will find on the bottom of the measuring cup and place the eggs on the egg rack. Using the egg piercer prevents the eggs from cracking during boiling. Please be very careful when using the egg piercer as the needle is very sharp.

Place the lid on top of the egg steamer and connect it to power.

Press the power switch. The light will switch on, indicating that the appliance is working.

CAUTION: To avoid burns, keep your hands and face away from the steam outlet in the lid while the egg steamer is in use.

When the eggs are ready, a bell will ring, and the light will switch off indicating that the eggs are ready. For the bell to stop ringing, switch off the appliance and unplug it.

Remove the lid using the handles. Take the egg rack out and rinse the eggs with cold water. Set aside and let them cool down. Cooling eggs with cold water makes peeling the shells easier.

If you need to cook more eggs, let the appliance cool down before the next use.

CLEANING & MAINTENANCE

Unplug the appliance and let it cool down completely before cleaning.

Clean the lid, egg tray and cup with warm soapy water. Use a damp soft cloth to clean the main unit and the water tray. Never use abrasive cleaners. Let the appliance and all parts dry thoroughly before storing or using it again.

Egg shells contain calcium salts. The salt residue can deposit in the appliance. Possible residues can be easily removed with a vinegar solution or commercially available descalers.

In order to remove the residue deposits in the water tray, add 1 tsp of vinegar and 1 cup of water. Then, operate the appliance for ten minutes without the lid.

Unplug the appliance and wait until it has cooled down. Pour away the liquid and rinse.

LENOXX®

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia