

Healthy Choice[®]

2 SLICE TOASTER



Model: ST400B

Batch: PR4677

HOUSEHOLD USE ONLY

Carefully read all instructions before use and save for future reference.

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

When using this appliance, basic safety precautions should always be followed, including the following:

1. Read the instructions carefully before use.
2. Remove and safely discard any packaging material and labels before using this product for the first time. Ensure children and babies do not play with plastic bags or any packaging materials.
3. Before use, check that your local voltage corresponds with the specifications shown on the appliance nameplate located under the appliance.
4. Always operate the appliance on a horizontal surface that is level, stable and non-combustible. Do not operate the appliance on or near combustible materials such as tablecloths or curtains.
5. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
6. Never connect this appliance to an external timer or a separate remote-control system.
7. Never use this appliance with an extension cord or power board. Ensure it is plugged into a dedicated power point and without any other appliances on the same outlet.
8. The toaster, plug and mains power lead must not come into contact with water or any other liquids. This could result in the risk of electric shock. You should therefore not, for example, place the toaster near a sink. Do not use the toaster outdoors.
9. The housing body must never be immersed in water or any other liquids. Water must not come into contact with the electric parts from underneath.
10. Do not touch the appliance, power lead or plug with wet hands.
11. Unplug from the outlet when not in use and before cleaning. Allow the appliance to cool down before cleaning.

12. The appliance does not contain any serviceable parts inside. Do not attempt to open and repair the appliance yourself. All components should only be serviced by a qualified technician.

13. Do not use the appliance if the plug, mains power lead or unit itself are damaged. If the power lead is damaged, you must have it replaced at a service centre by qualified persons to avoid a hazard.

14. Do not use the appliance for anything other than the intended use. It is for household use only. It is not to be used outdoors or for commercial purposes.

15. Close supervision is necessary when any appliance is used near children. Keep the appliance and power lead out of reach of children when it is in operation or during the cooling process.

16. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential-type environments;
- bed and breakfast type environments.

17. This appliance should be operated on a separate electrical power point from other operating appliances. If the power point is overloaded with other appliances, this appliance may not work properly.

18. Unplug the toaster,

- if a disturbance occurs,
- if you are not going to use it for a prolonged period of time,
- during thunderstorms and
- before cleaning it.

19. The toaster becomes hot while in use. Do not move it during operation and do not pull on the mains power lead.

20. Do not let the power lead hang over the edge of the table or counter.

21. Do not unplug the appliance by pulling on the power lead.

22. Only use the appliance for its intended purpose.

23. Do not insert any forks, knives or any metal items in the toasting slot.

24. This appliance is not designed to be used by people (including children) with a physical, sensory or mental impairment, or people without knowledge or experience unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

25. Do not leave the appliance operating while unattended.

26. Children shouldn't play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Technical Parameters

Name	2 Slice Toaster
Model	ST400B
Voltage	220-240V~ 50/60Hz
Power	730 - 870W



- 1. Housing
- 2. Toasting Slots
- 3. Loading Handle
- 4. Knob

- 5. Defrost Button
- 6. Reheat Button
- 7. Cancel Button
- 8. Removable Crumb Tray

Before first use

Put the toaster in a well-ventilated area. Fully unwind the power lead and plug it into a dedicated mains power supply.

Select the highest browning setting. Let the toaster complete a couple of toasting cycles without any bread slices in it. This burns off any dust and prevents unpleasant smells.

WARNING! Do not operate the toaster without the crumb tray.

Toasting fresh bread slices

1. Turn the knob into a desired toasting setting, between 1 and 6. Level 1 is a light toasting setting and level 6 is a long toasting setting. For a medium, golden brown toasting result, please select level 3.
2. Place the bread slices into the toasting slots. This toaster can toast two slices at a time. If only toasting one slice, set the toasting level one level lower.
3. Push the loading handle downward. The cancel button illuminates blue to indicate that the toaster is switched on.
4. When the toast raises back up, toasting is complete. The loading handle flips upward. The cancel button no longer illuminates blue.

If you wish to stop toasting the bread slices immediately, simply push the cancel button. The toast raises back up. The loading handle flips upward. The cancel button no longer illuminates blue. Never attempt to force or lift the loading handle to stop toasting. Always use the cancel button.

Toasting frozen bread slices

1. Turn the knob into a desired toasting setting, between 1 and 6. Level 1 is a light toasting setting and level 6 is a long toasting setting. For a medium, golden brown toasting result, please select level 3.
2. Place the bread slices into the toasting slots. This toaster can toast two slices at a time. If only toasting one slice, set the toasting level one level lower.
3. Push the loading handle downward. The cancel button illuminates blue to indicate that the toaster is switched on.
4. Press the defrost button. The cancel button and defrost button both will now illuminate blue. The toaster is now toasting in defrost mode.
5. When the toast raises back up, toasting is complete. The loading handle flips upward. The cancel & defrost buttons no longer illuminate blue.

Reheating cooled bread or toast slices

1. Turn the knob into a desired toasting setting, between 1 and 6. Level 1 is a light toasting setting and level 6 is a long toasting setting. For a medium, golden brown toasting result, please select level 3.
2. Place the bread slices into the toasting slots. This toaster can toast two slices at a time. If only toasting one slice, set the toasting level one level lower.
3. Push the loading handle downward. The cancel button illuminates blue to indicate that the toaster is switched on.

4. Press the reheat button. The cancel button and reheat button both will now illuminate blue. The toaster is now warming in reheat mode.
5. When the toast raises back up, toasting is complete. The loading handle flips upward. The cancel & reheat buttons no longer illuminate blue.

CLEANING & MAINTENANCE

Note: Unplug the appliance and allow it to cool down completely before handling, cleaning or storing.

Cleaning

The exterior of the toaster should be cleaned, if necessary, with a slightly damp cloth without additives. Do not use abrasive cleaning products.

To clean the crumb tray, slide the crumb tray out of the bottom of the toaster. Rinse the crumb tray in warm soapy water and thoroughly dry. Slide the crumb tray back into position. The crumb tray is not dishwasher safe. Do not use abrasive scourers to clean the crumb tray.

Storing

The appliance has a heat-insulated “cool touch” casing. However, as metal parts still heat up during operation, please allow the toaster to cool down before you put it away. Store the appliance in an upright position in a dry location.

Proper disposal

Once the appliance reaches the end of its life cycle, do not throw it away. Hand it in at an official recycling collection point.

LENOXX®

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia