

Table Blender



Model: TB100R TB100B | Batch: PR4764

HOUSEHOLD USE ONLY

Carefully read all instructions before use and save for future reference.

IMPORTANT SAFEGUARDS

PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

- 1. When using the appliance, basic safety precautions should be followed, including:
- 2. Do not use outdoors.
- 3. Care shall be taken when handling the sharp cutting blades, emptying the glass jug and during cleaning.
- 4. Do not blend hot liquids.
- 5. Unplug from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- 6. Switch off the appliance and disconnect from the power before changing accessories or approaching parts that move in use.
- 7. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- 8. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and if they understand the hazards involved.
- 9. Children shall not play with the appliance.
- 10. This appliance is intended for use at a maximum altitude of 2000m above sea level.
- 11. This appliance is designed for home use and should never be used for commercial or industrial use under any circumstances. Any incorrect use or improper handling of the product shall render the warranty null and void.
- 12. Prior to plugging in the product, check that your mains voltage is the same as the one indicated on the product label.
- 13. The mains connection cable must not be tangled or wrapped around the product during use.
- 14. Do not use the device, or connect and disconnect to the supply mains with wet hands.

- 15. In order to ensure the sealing effect of the blending blade, please do not allow the blending blade to work without load.
- 16. Do not pull on the connection cord in order to unplug it or use it as a handle.
- 17. Unplug the product immediately from the mains in the event of any breakdown or damage and contact an official technical support service. In order to prevent any risk of danger, do not open the device. Only qualified technical personnel from the brand's Official technical support service may carry out repairs or procedures on the device.
- 18. To protect against the risk of electrical shock do not put housing in water or other liquid.
- 19. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- 20. Do not let the cord hang over the edge of the table or counter.
- 21. Keep hands and utensils out of the jug while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
- 22. The blender is not to be operated with an empty blending unit (i.e. without solid or liquid ingredients)
- 23. Do not operate the blender for more than 3 minutes at a time.
- 24. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
- 25. Always operate the blender with the glass jug in place.

PRODUCT OVERVIEW



- 1. Lid
- 2. Cap/measuring cup
- 3. Glass jug

- 4. Motor base
- 5. Speed control knob
- 6. Feet with anti-slip rubber

Technical Parameters

Product Name	Table Blender
Model No.	TB100R TB100B
Rated Voltage	220V-240V~
Rated Frequency	50Hz/60Hz
Power	500W

BEFORE FIRST USE

Remove all packaging and labels. Clean the appliance thoroughly, to remove manufacturing dust etc.

INSTRUCTIONS FOR USE

- 1. Place the motor base on a flat, clean, level surface.
- 2. Lower the jug onto the motor base and lock it by turning it clockwise until you hear a click.
- 3. Remove the lid.
- 4. Put the ingredients into the jug. Don't fill past the MAX 1.5L mark
- 5. Replace the lid with the cap on. Don't operate the appliance without the lid.
- 6. Plug in the appliance and rotate the speed control knob to position 1 or 2. At the end of preparation, rotate the knob back to position 0.

Pulse mode

Turn and hold the knob in the P position in order to use the pulse function.

WARNING: Never operate the blender when the glass jug is empty. Never overfill the jug - do not exceed the MAX line (1500ml line). Do not use it for more than 3 minutes at a time.

CLEANING

Before cleaning, always turn off the appliance and unplug it from the power supply. During the cleaning process, special care must be taken with the blades and they are very sharp.

It is recommended to clean the appliance thoroughly after every use.

- 1. Unplug the blender from the power supply. Do not immerse the motor base in water or any other liquid. Wipe the outside of the motor unit with a clean damp cloth. Do not use abrasive cleaning detergents
- 2. Handwashing of the jug and lid is recommended. Use hot soapy water, rinse with clean water and dry thoroughly. These parts are also dishwasher-safe.

Pulse cleaning

Fill the jug with water, then turn and hold the knob in the P pulse position.

HEALTHY CHOICE SIGNATURE RECIPES

Strawberries & Cream Smoothie

Ingredients:

2 cups strawberries

1 ripe banana, peeled

a handful of fresh mint leaves

1 tsp vanilla essence

1 cup almond milk (or milk of your choice)

Method:

Place all the ingredients in the glass jug and blend until smooth. Best served immediately.

Blackberry, Banana & Kiwi Smoothie

Ingredients:

1 cup blackberries

1 ripe bananas, peeled

1 cup baby spinach

2 kiwi fruits, peeled and sliced

1 cup almond milk (or milk of your choice)

Method:

Place all the ingredients in the glass jug and blend until smooth. Best served immediately.



www.lenoxx.com.au



1300 666 848





LenoxxElectronics
LenoxxElectronics
@LenoxxAustralia

