

Healthy Choice
WC100

BENCH TOP WATER FILTER AND COOLER

5 LITRE WATER CAPACITY

Model no: WC100
Batch no: PR4056



Household use only.



READ AND SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

Read and follow all the instructions in this "Use And Care" even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

Your attention is drawn particularly to the sections concerning "IMPORTANT SAFEGUARDS", "FOR YOUR SAFETY", and the "WARRANTY" and "SERVICE" statements.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

NOTE: The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

IMPORTANT SAFEGUARDS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance must be used and rested on a stable and level surface;
- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
- To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
- This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
- Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
- In order to avoid any dangerous overheating, we recommend fully unwinding the power cord.
- Do not use the appliance for other than its intended use.
- Do not immerse the appliance exposed to the weather (rain, sun, etc).
- Never operate the appliance with wet or damp hands.
- Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.

- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by your electricity supplier or qualified technician.
- If the appliance is not working normally, disconnect from the power supply and contact the nearest authorized service agent.
- This product is intended for normal domestic/household use only.
- This water filter must only be used with municipally treated tap water. Do not attempt to filter untreated, raw water or water of unknown quality.
- Filter replacement is essential for the product to perform as represented. It must be replaced at least every 3 months.
- This appliance has been designed to be used continuously.

READ AND SAVE THESE INSTRUCTIONS


PARTS LOCATION



On / Off Switch
Located on the back of the unit



Bottom Cleaning
Drainage Hole

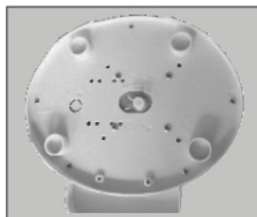

USING YOUR WATER FILTER AND CHILLER

Before First Use:

Clean the appliance and its accessories:

- Unpack the gift box and check if all components and accessories are included.
- Wash the lid, two water tanks and all the accessories with warm soapy water then rinse thoroughly and dry.
- Wipe the appliance body over with a damp clean cloth or paper towel.
- Put the filter in cold tap water, make sure the whole filter is immersed in water for about 30 minutes.

Flushing the dispensing system:

It is important to rinse out the dispensing system before starting to use your appliance:

- Put the base water tank onto the water chiller; ensure that the tank sits into the slots located in top of the water chiller.
- Put the upper water tank on the base water tank and put the filter into the upper water tank.
- Fill the water tanks with cold tap water.

Note: Do not fill the water tank too quickly; because when you fill the upper water tank, the water will go through the filter and enter into the base water tank and the water chiller. When the top of the filter is immersed in water, please wait a couple of seconds to allow the water to enter into the base water tank.

- Turn the dial on the lid to current month. The change date will show the second successive month from the start date.
- The first jug of filtered water may contain some black dust released from the carbon filter. Although this is not harmful, we recommend that you flush the filter and discard the first batch of filtered water. Press the Normal Water Tap and Chilled Water Tap together until the entire contents of the water tank has been filtered and dispensed. It is important not to interrupt the water flow during this time. It is normal for a small amount of unfiltered water to remain in the bottom of the water tank.
- The flushing procedure should be repeated with Cold Tap Water to ensure there is no residual taste.
Note: During the flushing process, the appliance may splutter as the air inside the filter is replaced by water. You will notice a change in the filtering noise when the water tank is almost empty.
- Do not fill the top water tank above the lip(below the lid).
- When flushing the filter using the Cold Tap Water for the first time, while pressing the Normal Water Tap and Chilled Water Tap, no water will be dispensed until the tank is almost empty as the water will be filling the internal cooling reservoir.
- After flushing the filter, the water will need to chill. Leave the appliance plugged in and wait for the water to chill. On first use the appliance should be plugged in and left overnight to chill.
- The light may flicker on and off as chilled water is dispensed and if the ambient temperature increases. The fan will also come on in these conditions and will remain on until the water is chilled again.

Instructions For Use

- Wash and rinse out the plastic water tanks thoroughly before use. (Refer to Cleaning Section)
- Remove the filter from its packaging then fully cover and soak the filter in cold clean water for 30 minutes.
- Place Lower water tank and Upper water tank onto the chiller.
- Insert filter and ensure it sits flat and fully seated.



- Fill Upper water tank with clean cold water.
- As a reminder of when to change and replace the filter, lift and turn the dial on the lid to the current month. The Filter Replacement month will show the second successive month from the start date.



- Place the lid on the Upper water tank.
- Let the water flow through the filter into the lower water tank and continue to refill the top water tank until both the top and lower water tanks are full.

Note: It is recommended that you empty and discard the water through the taps from the first fill to flush the system through.

- Insert the plug into a power socket and switch on.
- Switch the Water Chiller to “ON” at the back of the unit.



- Both the Blue “Cold” and Yellow “Power” indicator lights will illuminate indicating there is power supplied to the unit, and that the water chiller is chilling the water.



- For best performance, and depending on the water temperature, allow approximately 30 – 40 minutes for the water to chill before use.
- When the water has reached the required temperature, the “Cold” indicator light will turn off indicating the water in the 600ml chiller tank has fully chilled.

Note: The Water Chiller Tank has a capacity of 600ml and does not supply a continuous stream of chilled water.


The unit needs time to chill the replacement water as it enters the chiller tank as will be indicated by the Blue Indicator Light illuminating.

Float

The float is an important part of the Water Chiller. It is used to gauge the water levels and prevent any leakages.

To ensure the float is fitted correctly:

1. Unscrew the bottom of the float housing to expose the float.
2. The float has a rubber stopper on the tip. This rubber tip must be pointing up towards the base water container.
3. Tightly screw the ring back on the housing.

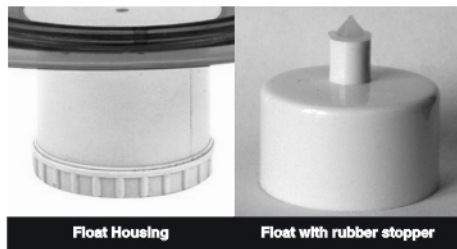

Filtering room temperature water:

Place a glass or jug under the spout and press the Normal Water Tap. To filter the entire contents of the water tank, place a large container or jug (at least 4.5 liters) under the spout.

Filtering chilled water:

Place a glass or jug under the spout and press the Chilled Water Tap. The unit will dispense up to 3 cups (about 0.8 liters) of chilled water at a time. If you've dispensed more than two cups one time, the unit will require about 1.5 hours to chill the whole water reservoir. The chilled water ready light will go OFF when the unit is able to dispense chilled water again.

NOTE: The "Chilled Water" mentioned above is about 15°C below the Normal Tap Water.

Filter life:

The life of your filter will be affected by the quality of your tap water. When you notice that the water begins to flow very slowly from the spout it is time to change the filter. This can be any time from one month to three months depending on the area where you live. However, it must be replaced at least every three months. The Date Indicator for Filter Replacement on the filter will help you to remember when this is.



Replacing the filter:

1. Removing the old filter:

- Switch off and unplug the appliance.
- Ensure the top tank is empty
- Remove and discard the old filter.
- If O-ring seal remains inside the appliance remove and discard it.

2. Installing the new filter:

- Wet the new O-ring seals located at the middle of the filter and fit the filter into place.
- Fill the water tank and plug the appliance into the power outlet.
- Flush the filter as explained above.

If the appliance has not been used for more than two weeks, flush the filter before use.

Emptying the internal tank

- Switch off the unit and unplug from the mains supply.
- Turn the unit upside down to reveal a drain plug located in the centre of the base.
- Remove the spring clip securing the silicone cap to the drain and remove the silicone cap.
- Drain the unit.
- Refit the silicone cap and spring clip.

CARE AND CLEANING

- Do not use harsh detergents or abrasive cleaners.
- Do not place any part of this appliance in the dishwasher.
- Wipe the base with a clean cloth or paper towel.
- Wash the water tank in warm soapy water using a mild detergent.
- Do not immerse the base in water or any other liquid.
- If the unit is to be moved or if it is to be stored for a prolonged period without being used, it is recommended to drain the internal tank of any remaining water.

SERVICE AND WARRANTY

Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information card. Retain in the event that warranty service is required.

Lenoxx Electronics(Aust)Pty Ltd
6 Oban Court Laverton North Victoria Australia 3026
For service call:1300 666 848

READ AND SAVE THESE INSTRUCTIONS