

LENOXX™

Portable Twin Tub Washing Machine



Model: WM150 | Batch: PR4774

Carefully read all instructions before use and save for future reference.



BEFORE YOU START

Please read all instructions carefully and retain for future reference.

We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, level and stable surface.

Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


Never immerse the cord or appliance in water.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Technical Parameters

Voltage	240V 50Hz
Water Capacity	High: 29.5L Low: 17.4L
Capacity	Wash: 4.6kg Spin: 3kg
Model Number	WM150

STRUCTURE AND PARTS

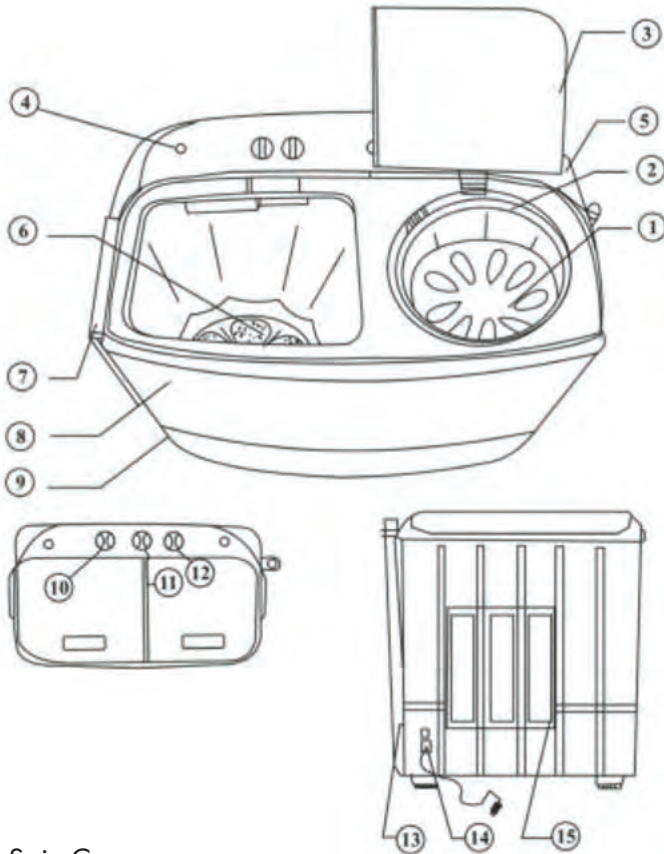

1. Spin Cap
2. Spin Tub
3. Spin Cover
4. Cold Water Inlet
5. Control Panel
6. Pulsator
7. Wash Cover
8. Body
9. Base
10. Wash Timer Switch
11. Wash & Drain Selector Switch
12. Spin Timer Switch
13. Drain Hose
14. Power Cable
15. Back Cover

WASHING INSTRUCTIONS

Preparation

1. Place the machine on a flat, level surface near a drainage point.
2. Lay down the drain hose on the ground level.
3. Use the water inlet hose to connect the cold water tap to the water inlet.
4. Adjust the water level based on the type of clothing and its weight.
5. Turn on the power.

Washing

1. Set the Wash & Drain Selector Switch to the wash position
2. Place the clothes into the tub, adjust the water level to the desired position and put in the proper amount of detergent into the wash tub.
4. Set the Wash Timer and the washing machine will start to wash.
5. After washing, set the Wash & Drain selector switch to the the Drain position to drain the water.


Spinning

1. After spinning, set the water inlet hose to the water inlet of the spin tub position for 20-30 seconds.
2. According to the Spin Timer process, spin the clothes for 1 min - 5min, and repeat once or twice.

Rinsing

1. After spinning, the spin tub will stop. Open the spin cover and transfer the clothes to the wash tub to prepare for rinsing.
2. Repeat the washing process but do not add any detergent.

IMPORTANT SAFEGUARDS

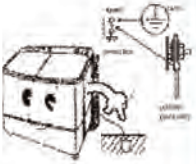

For your own safety, ensure the machine is connected to a suitable electrical supply.



Never put your hands into the spin tub whilst it is working.



To prevent machine damage or water blockage, avoid washing textiles that contain volatile materials.



The timer should always be turned clockwise.



If abnormal sounds or movements occur during operation, stop the washing machine immediately and perform a thorough check. Refer to the Troubleshooting section of the manual for assistance.



When washing, ensure that the water temperature remains below 60°C to prevent deformation of the plastic components. This machine is designed for cold wash operations.

MAINTENANCE

Always unplug the machine before cleaning.



When cleaning the machine, it is recommended to use a soft cloth to prevent scratching the surface.



Do not put the washing machine outdoors or in damp areas such as bathrooms.



Do not place heavy objects on top of the washing machine.



Do not place the washing machine near heat-generating items such as heaters or gas cookers.

TROUBLESHOOTING

Problem	Possible cause & solution
Machine will not start.	Power failure or not connected to a suitable electrical supply. Plug not connected properly. Timer set to 0 (zero). Wash selector set to Drain.
Machine will not drain.	Outlet hose twisted or kinked or has a blockage.
Wash or spin tub not operating at normal speeds.	Overfilled with clothes - reduce load. Power supply voltage may be too low.
Water leaks from the machine.	The hose is not connected properly - reconnect and tighten.

If the problem persists and was not resolved, please contact our customer service for further assistance. You can reach us at 1300 666 848.

LENOXX™

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics



@LenoxxAustralia