

Healthy Choice™

WT6030

CORDLESS WARMING TRAY

HIGH-QUALITY BRUSHED STAINLESS STEEL



Model: WT6030 | Batch: PR4090

This appliance is intended for household use only.

Please read and retain these instructions for future reference.

The illustrations used in the manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

ABOUT THE PRODUCT:

Keeping serving dishes and food contents warm during your party, home-banquet, or holiday gathering is as simple as plug, heat, unplug and serve with our Cordless Warming Tray.

This convenient warming tray is perfect for serving with its large 60cm by 30cm surface area. The high-quality brushed Stainless-Steel and quick high-powered heating element allows the 'hot plate' to fully heat up in just eight minutes. Once unplugged from the power supply, this handy warmer gives off heat up to one hour.

Very simple to use, just plug the warming tray into the power supply and the red power indicator light turns on; then wait until the second green indicator light turns on to gauge when the warming tray is fully heated. From here, the warming tray can either be unplugged and easily transported to the table or serving area, or it can remain plugged in for consistent heating use. The choice is all yours with this versatile food warmer.

Enjoy your next social gathering or festive shindig with this straightforward Cordless Warming Tray.

CAUTION: HOT SURFACE WARNING!



CAUTION: Do not touch hot surfaces. The temperature of the outer body can get very hot while the Warming Tray is in operation. Allow the unit to cool down before cleaning or packing the unit away for storage.

WARNING: Never leave the Warming Tray unattended and in a location where children have unsupervised access and can easily come into contact with the extremely hot Stainless-Steel warming plate surface.

CAUTION: Do not heat up or use the Warming Tray in a location where children can easily reach and touch the Warming Tray.

CAUTION: It is not recommended to position the Warming Tray on low surfaces where children can easily come into contact with the hot surface of the Stainless-Steel warming plate.

CAUTION: After the Warming Tray has heated up, it will be extremely hot. If using in cordless mode, please be extremely careful when moving the Warming Tray as injury can occur if contact is made with the Stainless-Steel surface. Always use oven mitts when moving the Warming Tray and only carry the Warming Tray by the handles provided.

IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed, including the following:

WARNING: Do not touch the hot surfaces of the warming tray. Only hold it by the black plastic legs/handles.

1. Read instructions carefully before use.
2. Remove and safely disregard any packaging material and labels before using this product for the first time. Ensure children and babies do not play with plastic bags or any packaging materials.
3. Before use, check that your local voltage corresponds with the specifications shown on the appliance nameplate located underneath or on the back of the appliance.
4. Always operate the appliance on a horizontal surface which is level, stable and non-combustible. Do not operate the appliance on or near combustible materials such as tablecloths or curtains.
5. Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
6. Never connect this appliance to an external timer or separate remote-control system.
7. Never use this appliance with an extension cord or power board. Ensure it is plugged into a dedicated power point and without any other appliances on the same outlet.
8. Do not turn on the power until the appliance and parts are in place as required.
9. To protect against electric shock, do not immerse the cord, plug, or appliance in water or any other liquid. Do not expose the appliance to dripping or splashing and ensure that no objects filled with liquids such as vases are placed on the appliance. Do not put any water or other liquid into the main housing of the appliance through the vents. Do not rinse it under the tap.
10. Do not touch the appliance, power cord or power plug with wet hands.
11. Unplug from the outlet when not in use and before cleaning. Allow the appliance to cool down before cleaning.
12. The appliance does not contain any serviceable parts inside. Do not attempt to open and repair the unit yourself. All components should only be serviced by a qualified technician.
13. Do not use the appliance if the plug, power cable or unit itself are damaged. If the power cord is damaged, you must have it replaced at a service centre with qualified persons in order to avoid a hazard.
14. Do not use the appliance for anything other than the intended use. It is for household use only. It is not to be used outdoors or for commercial purposes.
15. Close supervision is necessary when any appliance is used near children. Keep the appliance and power cord out of reach of children when it is in operation or during the cooling process.

16. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

17. This appliance should be operated on a separate electrical power point from other operating appliances. If the power point is overloaded with other appliances, this appliance may not work properly.

18. Do not move the appliance while it has dishes of food on it.

19. Leave enough open space from other objects while in use. Do not block air intakes or exhausts if applicable.

20. Do not place the appliance against a wall or against other appliances. Leave at least 10 centimetres of free space on the back and sides and above the appliance to allow for adequate air circulation.

21. Do not cover the appliance while in use.

22. Do not let the cord hang over the edge of the table or counter.

23. Do not unplug the appliance by pulling on the cord.

24. This appliance is not designed to be used by people (including children) with a physical, sensory or mental impairment, or people without knowledge or experience, unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety. Children must be supervised to ensure that they do not play with the appliance.

25. Do not leave the appliance operating while unattended.

26. You may notice a slight odour being emitted from the Warming Tray during the initial use. This is normal and odour will cease with continued use.

27. Should the appliance emit black smoke, un-plug it immediately. Wait for the smoke to stop before removing the appliance's contents.

HANDELING AND USEAGE:

1. Never touch the surface of the Warming Tray while it is operating.
2. Never leave food at room temperature on the Warming Tray.
3. Always operate on a dry level surface. Operating on sinks or uneven surfaces must be avoided.
4. Do not clean with metal scouring pads, this will directly damage the Stainless-Steel surface of the Warming Tray. Plus, pieces may break off the pad and touch the electrical parts, creating a risk of electric shock.
5. Always unplug the Warming Tray and let it cool down sufficiently before cleaning. Since the Warming Tray is constructed for cordless usage, it can take up to 3 hours for the Warming Tray to cool down sufficiently to be cleaned.
6. Thoroughly clean all parts that will come in contact with food with a soft damp cloth and dry thoroughly before use.
7. Use non-disposable, oven-safe vessels only on the Warming Tray, ensuring they are positioned in the centre of the Warming Tray and do not overhang the edges.
8. Do not use the Warming Tray to reheat refrigerated food. The Warming Tray is only for keeping freshly cooked food warm.
9. Do not use your fingers or hands to move the food on the Warming Tray. Only use heat-proof serving utensils to stir or serve food from the Warming Tray. Do not leave the serving utensils inside the serving dishes after single use. Never leave utensils on top of the Warming Tray.
10. Follow food safety standards when using the Warming Tray and ensure food is kept at safe temperatures for consumption. Do not allow cooked food to remain on the Warming Tray longer than 60 minutes after it is switched off.
11. Porcelain and china dishes may cause scratches. Place dishes carefully on the stainless-steel heating surface so they do not scratch.
12. Never put food directly on the Warming Tray, use cookware, casserole or serving dishes.

HELPFUL HINTS:

- Covered crockery dishes with a flat base and edges that are not too high keep food the warmest.

SHORT CORD INSTRUCTIONS:

Do not use with an extension cord. A short power supply cord is provided to reduce the risks resulting from being entangled in or tripping over a long cord.

ELECTRIC POWER:


If the electrical circuit is overloaded with other appliances, your unit may not operate properly. It should be operated on a dedicated electrical circuit (power point).

BEFORE FIRST USE:

Wipe the surface of the warming tray with a damp cloth and dry it thoroughly.

Never use a metal scourer to clean the Warming Tray. It will damage the stainless-steel surface of the Warming Tray.

PRODUCT OVERVIEW:

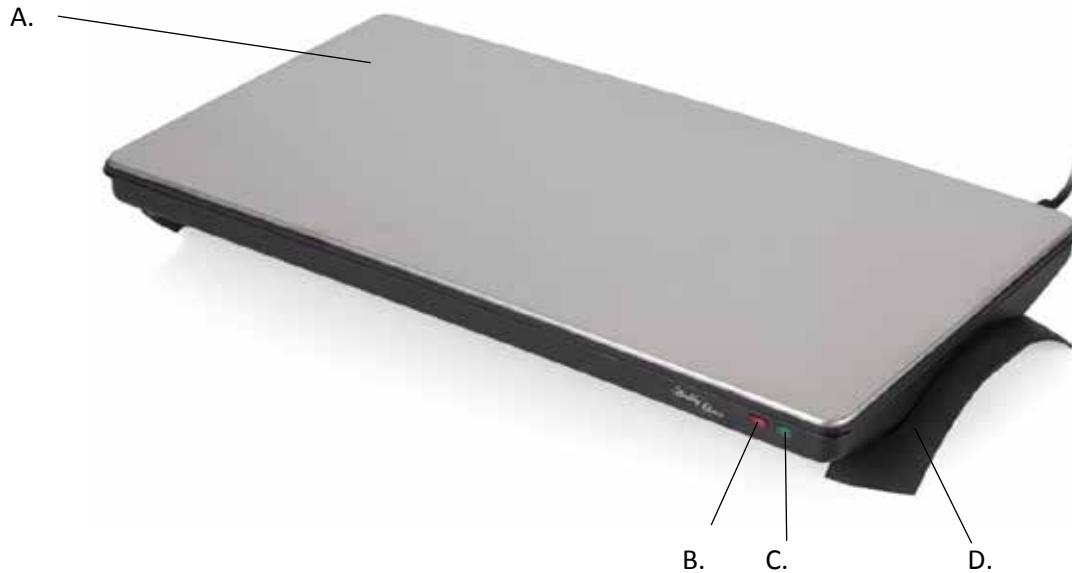

A. Stainless-Steel warming plate

B. Power indicator light

C. Ready indicator light

D. Warming tray handles

OPERATIONAL INSTRUCTIONS:

1. Connect the power cord to the Warming Tray by inserting the connector into the socket at the back of the Warming Tray.

2. The power indicator light will illuminate to show that the Warming Tray power is on and the Warming Tray will begin to heat up. The power indicator light will illuminate whilst the Warming Tray is plugged in and switched on at the power outlet.

3. Allow the Warming Tray to pre-heat for approximately 8-10 minutes. The ready indicator light will illuminate when the Warming Tray is ready to use and the power indicator light will also stay on. Whilst plugged in and switched on at the power outlet, the thermostat will regulate the temperature to prevent the Warming Tray from overheating. Please note that this will cause the ready indicator light to cycle on and off; this is not a product fault and is part of the operation of the Warming Tray.

4. Using oven mitts, transfer the food that has already been cooked onto the Warming Tray. You can use the Warming Tray to keep warm appetizers, finger foods and also for keeping whole plates warm.

5. Once you have finished using the Warming Tray, switch off at the power outlet and unplug the power cord. Carefully remove the food from the Warming Tray using oven mitts as the oven proof cookware and serving dishes will be very hot.

6. Allow the appliance to cool down completely before disassembling and cleaning the Warming Tray. The Warming Tray may take 3-4 hours to cool down completely.

NOTE: It is not recommended to use the Warming Tray plugged in to an outlet and switched on for more than 2 hours within any 6-hour period.

CAUTION: Never leave the Warming Tray unattended while it is switched on or still hot. This is very dangerous.



CAUTION: Do not touch hot surfaces. The temperature of the outer body can get very hot while the Warming Tray is in operation. Allow the unit to cool down before cleaning or packing the unit away for storage.

USING THE WARMING TRAY CORDLESS:

1. The Warming Tray can also be used cordless. Once the Warming Tray has reached its maximum temperature, the ready indicator light will illuminate. The Warming Tray is now ready to be used as a cordless appliance. Switch off at the power outlet and unplug the power cord. Both the power and ready indicator lights will cease to illuminate.

2. Carefully remove the power cord from the socket at the back of the Warming Tray, taking care not to touch the hot surface. It is recommended to wear oven mitts whilst removing the power cord from the Warming Tray. The Warming Tray can now be moved to the desired position.

3. Using oven mitts, carefully pick-up the Warming Tray by the warming tray handles, taking care not to come in contact with the hot surface. Gently place the Warming Tray in the desired location, ensuring that it is located on a dry, flat and stable surface.

CAUTION: After the Warming Tray has heated up, it will be extremely hot. If using in cordless mode, please be extremely careful when moving the Warming Tray as injury can occur if contact is made with the Stainless-Steel surface. Always use oven mitts when moving the Tray and only carry the Tray by the handles provided.

WARNING: Never move the Warming Tray with the serving dishes already on top of the plate. Move the Tray first to the desired location and THEN place the serving dishes on top of the Stainless-Steel plate.

4. After locating the Warming Tray, transfer the serving dishes to the Tray. You can use the Warming Tray to keep warm appetizers, finger foods and also for keeping whole plates warm. The Warming Tray will keep food warm for up to 60 minutes.

NOTE: Never put food directly on the Warming Tray. Always use oven proof cookware or heat-proof serving dishes.

5. Once you have finished using the Warming Tray, carefully remove the food from the Warming Tray using oven mitts as the oven proof cookware and serving dishes will be very hot.

6. Allow the appliance to cool down completely before cleaning the Warming Tray. Since the Warming Tray is constructed for cordless use, it can take up to 3 hours for the Warming Tray to cool down sufficiently to be cleaned.

NOTE: The Warming Tray is not intended to defrost or cook food.

NOTE: The Warming Tray is not designed to keep large, deep pots full of food or liquid warm.

NOTE: Extended use over long periods of time at high temperatures may cause discolouration of the Warming Tray and scorching may occur on the oven proof cookware and heat-proof serving dishes.

WARNING: Never leave the Warming Tray unattended and in a location where children have unsupervised access and can easily come into contact with the extremely hot Stainless-Steel warming plate surface.

CAUTION: Do not heat up or use the Warming Tray in a location where Children can easily reach and touch the Warming Tray.

CAUTION: It is not recommended to position the Warming Tray on low surfaces where children can easily come into contact with the hot surface of the Stainless-Steel warming plate.

CLEANING:

1. Switch OFF the power outlet and unplug the Warming Tray from the outlet. Always unplug the Warming Tray and let it cool down sufficiently before cleaning. Since the Warming Tray is constructed for cordless usage, it can take up to 3 hours for the Warming Tray to cool down sufficiently to be cleaned.

2. Wipe the Warming Tray with a damp cloth and then dry thoroughly.

WARNING: Do not immerse the Warming Tray, cord or plug into water or any other liquids.

WARNING: Do not use metal scouring pads to clean the Warming Tray as it will damage the Stainless-Steel surface of the Tray. Plus, pieces may break off the pad and touch the electrical parts of the Warming Tray, creating risk of electric shock.

OVERHEAT PROTECTION (THERMAL CUT-OUT):

The Warming Tray has an overheat protection system that shuts off the Warming Tray in the event of overheating.

Should the Warming Tray stop working, turn it off and let the Warming Tray cool down for at least 3 hours or until it is cooled down completely, then try it again. If the Warming Tray still doesn't work, contact customer service.

STORAGE:

- Before packing the Warming Tray away for storage, ensure it has completely cooled down and is clean and dry.
- We recommend storing the Warming Tray in its original carton, which will protect it from dust, with the cord stored inside.
- Store the Warming Tray in a clean and dry place, out of children's reach.
- Do not place heavy objects on top during storage.

SPECIFICATIONS:

Voltage: 220 – 240V, 50-60Hz


Power: 1000W

Measurements: 68 cm x 33 cm x 7 cm

Surface area: 60 cm x 30 cm

LENOXX

www.lenoxx.com.au

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia