

## Accessories

### Cylinders



- 4111(6)-3071**  
**Cast iron cylinder assembly (CYL)**
- Handed
  - Standard

### Covers



- 4110-72**  
**Plastic Cover (PC)**
- Non-handed
  - Standard



- 4110-72MC**  
**Metal Cover (MC)**
- Handed
  - Required for plated finishes and custom powder coat finishes
  - Optional

### Arms



- 4110-3049EDA**  
**Hold Open Arm (H)**
- Handed
  - Optional
  - Provides hold open function, adjustable at shoe



- 4110-3049FL**  
**Fusible Link Arm (FL)**
- Handed
  - Releases hold-open function adjustable at shoe when exposed to temperatures above 165° F
  - Optional

Note: Check local codes before specifying FL arms.  
 NOT A life safety product!



- 4110-3077CNS**  
**Cush-n-Stop Arm (CUSH)**
- Non-handed
  - Features solid forged steel main arm and forearm with built-in stop in soffit shoe



- 4110-3077EDA**  
**Extra Duty Arm (EDA)**
- Non-handed
  - Features forged, solid steel main and forearm for potentially abusive installations



- 4110-3077EDA/62G**  
**Extra Duty Arm (EDA)**
- Non-handed
  - Features forged, solid steel main and forearm for potentially abusive installations
  - Optional 4110-62G thick hub shoe for blade stop clearance



- 4110-3049CNS**  
**Hold Open Cush-n-Stop Arm (HCUSH)**
- Non-handed
  - Provides hold open function with templated stop/hold open points
  - Handle controls hold open function



- 4110-3077SCNS**  
**Spring Cush-n-Stop Arm (SCUSH)**
- Non-handed
  - For abusive applications features solid forged steel main arm and forearm with spring loaded stop in the soffit shoe
  - Optional



- 4110-3049SCNS**  
**Spring Hold open Cush-n-Stop Arm (SHCUSH)**
- Non-handed
  - For abusive applications features solid forged steel main arm and forearm with spring loaded stop in the soffit shoe
  - Handle controls hold open function
  - Optional

### Installation accessories



- 4110-18**  
**Plate**
- Required for push side mount where top rail is less than 5 1/8" (130 mm), measured from the stop
  - Requires minimum 2" (51 mm) minimum top rail



- 4110-30**  
**CUSH shoe support**
- Provides anchorage for fifth screw used with CUSH arm, where reveal is less than 3 1/16" (78 mm)



- 4110-61**  
**Blade stop spacer**
- Lowers parallel arm shoe to clear 1/2" (13 mm) blade stop



- 4110-419**  
**PA flush panel adapter**
- Provides horizontal mounting surface for CUSH shoe on single rabbeted or flush frame