

Trim options

996 trim



Trim description

Nomenclature	996EO	996L*	996L-NL*	996L-BE*	996L-DT
Trim function	Exit only plate	Lever	Lever-night latch	Lever-blank escutcheon	Lever-dummy trim
Function description	Exit only plate	Key locks and unlocks	Key retracts latch bolt	Always operable, no cylinder	Pull when dogged
ANSI function	01	08	03	14	02

Device compatibility

98/99 Rim/Rim-F	■	■	■	■	■
XP98/XP99 Rim/Rim-F	■	■	■	■	■
98/9927/27-F	■	■	■	■	■
98/9947/47-F	■	■	■	■	■
98/9947WDC/WDC-F	■	■	■	■	■
98/9948/48-F	■	■	■	■	■
98/9949/49-F	■	■	■	■	■
98/9950WDC/50WDC-F	■	■	■	■	■
98/9952†	†	†	†	†	†
98/9957/57-F	■	■	■	■	■
98/9975/75-F	■	■	■	■	■

Dimensions

Escutcheon plate size	2 3/4" x 10 3/4" x 27/32" (70 x 273 x 21mm)				
Pull center to center	—	—	—	—	—
Projection	—	2 7/8" (73mm)	2 7/8" (73mm)	2 7/8" (73mm)	2 7/8" (73mm)

Handing

—	Handed/reversible	Handed/reversible	Handed/reversible	Handed/reversible
---	-------------------	-------------------	-------------------	-------------------

Cylinder type

Rim or vertical device	—	Rim	Rim	—	—
Mortise lock device	—	1 1/4" mortise	1 1/4" mortise	—	—

* Specify R/V if used for rim and vertical devices, M for mortise device. Example, 996L-R/V or 996L-M.

† Default trim is 252L /L-BE. Must be ordered as EO when paired with other trims (ordered separately).