


PRODUCTION

Congratulations on purchasing the PowerTac "X-10,000 Destroyer"! Engineered from the latest cutting-edge technology, coupled with exceptional craftsmanship, and unbeatable reliability. Designed to be the ultimate search & rescue handheld flashlight. It can produce an astonishing 10,500 lumens with an extra-long throw up to 738 yards (675 meters)...that's over 7 football fields!!! Ideal for professional first-responders, explorers or any other activities requiring a tremendous amount of illumination. Advanced heat management system with a built-in waterproof fan. An internal thermostat will sense the light getting hot and will activate the fan. This and a type III anodized aluminum body helps dissipate the heat efficiently without overheating. A sealed, rechargeable 8-cell circuit-protected 18650 lithium-ion (replaceable) battery pack is integrated into the light to provide many years of dependable service. The X-10,000 Destroyer is very easy to operate – a simple side button switches the light on and off. Then rotate the circular rotary ring surrounding the power switch to scroll through the 5 settings from low, medium, high, strobe and S.O.S.

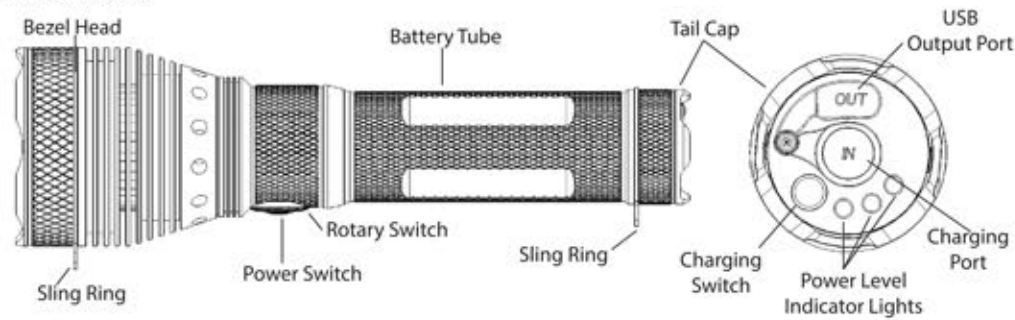

ILLUMINATION FUNCTIONS

Mode:	Lockout	Low	Medium	High	Strobe
Output:	Off	950 lm	4200 lm	10500 lm	10500 lm
Runtime:	-	15 hrs	2.7 hrs	1.7 hrs	3.4 hrs

Battery: 8 cell 18650 (3400 mAh)
Rechargeable Lithium-ion sealed battery pack with protective circuit board
(Disassembly of battery pack will void warranty)

Size: Length: 307mm
Bezel Diameter: 90mm
Body Diameter: 50mm
Tail Cap Diameter: 50mm

Weight: 3.7lbs (without battery)

LED TYPE: CREE- XHP70 and CREE XM-L2 U2 white LED

USAGE INSTRUCTIONS

- The flashlight comes assembled and includes a wall charger, and a shoulder strap.
- To turn On / Off – Depress power switch. Change illumination modes – simply rotate the rotary switch clockwise (Low – Medium – High – Strobe – SOS).
- To view remaining power level in the battery pack (when flashlight is not in charging mode) – press and release the charging switch, the power level indicator will light up as the following then turn off automatically after a few moments.
 - All three indicator lights on: 70% to 100% remaining
 - Two indicator lights: 30% to 70% remaining
 - One indicator light on: Less than 30%; flashlight needs charging.
- To charge the flashlight – plug AC charger into power supply, and then plug the AC charger cable into the charging port. Power level indicator will light up to show charging status:
 - One light flashing: less than 30% charged
 - One light on and second light flashing: 30% to 70% charged
 - Two light on and third light flashing: more than 70% charged
 - All three lights on: 100% fully charged and charging is completed.

- To charge other external devices with the battery pack, press and hold the charging switch in the tail cap, the power level indicator light(s) will turn on and stay on. (If none of the power level indicator turns on, refer to instruction 4 to charge the flashlight first). The USB output port is ready to charge other devices. Unseat USB output rubber port cover to expose port, plug your own smart phone USB cable into the USB port. The battery pack should be charging the devices. The power level indicator will stay on.

MAINTENANCE

Every 3 months, threads should be wiped with a clean cloth followed by a thin coating of silicon-based lubricant.

DISCLAIMER

- After long periods of use on the highest setting, the surface area may get hot. Please use caution when using the flashlight in a constant high brightness level. It is recommended to let the flashlight cool down to prevent any injury.
- High intensity light is harmful to human eyes. This product is not meant to be handled by children under the age of 18 without adult supervision.
- Use the highest quality, protected-circuit batteries to insure maximum performance and safety. Consult with the manufacturer regarding any questions or concerns.
- PowerTac's liability is voided if the light is not used in a proper manner or if modified.
- PowerTac reserves the right to change the design and/or specifications of all PowerTac products without prior notice.
- Please do not change batteries at dangerous locations such as gas stations. Batteries must only be changed or removed when light is off.

THE POWERTAC NO-HASSLE LIFETIME WARRANTY

PowerTac warrants our illumination tools to be free from defects in workmanship and materials, including any LEDs housed within, for the lifetime of the original parts (the lifetime of the parts are specified by individual parts manufacturers). If it is determined by us to be defective, we will repair or replace your original purchase of these products, at our discretion. Electronics, chargers, and rechargeable batteries are covered for a period of two years with proof of purchase. Normal wear and tear – including lamps burning out, batteries draining, and switches wearing out – is not covered, nor is damage resulting from misuse, abuse, neglect, battery damage, use of other non-approved batteries or altering these products from their original state. Parts and accessories for illumination tools are not covered by this warranty.

WARRANTY DISCLAIMER

The above warranty is exclusive, and to the extent permitted by applicable laws, shall be in lieu of all other warranties, express or implied, including, without limitation, any warranty of merchantability or fitness for a particular use or purpose. PowerTac disclaims any and all liability for product malfunctions, physical injuries, or property damages that result in whole, or in part, from the criminal, negligent, or improper use of the product, or from modifications or alterations thereto. In no event shall PowerTac be liable for any incidental, special, or consequential damages relating to the purchase, use, or performance of any PowerTac product.

WARRANTY CLAIMS

Please go to www.powertac.com/warranty

PRODUCT REGISTRATION

Please go to www.powertac.com/register



X10000

FLASHLIGHT

USER MANUAL

WWW.POWERTAC.COM