Assembly Instructions

The following instructions will assist you in assembling your particular fountain. Depending on which fountain you have purchased there will be slight variations in how they get assembled.







Aura ITEM # 03801

Pearl ITEM # 03800



STEP 1 MAKE SURE THE "FLOW CONTROL" ON THE PUMP IS IN THE FULLY OPEN POSITION. WITH THE PUMP IN THE UPRIGHT POSITION, THE SLIDING STEM ON THE FRONT OF THE PUMP COVER SHOULD BE SLID ALL THE WAY OVER TO THE LEFT. IF NOT, DO SO BEFORE INSTALLING. (Fig A)

STEP 2 ATTACH THE PLASTIC FITTING INTO PUMP OUTLET (Fig A)

STEP 3 (Halo and Aura only) INSERT THE L.E.D. INTO THE SHORT PLASTIC TUBE EXTENDING FROM THE BASE OF THE FOUNTAIN. PUSH UNTIL SNUG (Fig B)

STEP 3a (Pearl only) SLIDE THE L.E.D. RING OVER THE SINGLE PLASTIC TUBE EXTENDING FROM THE BASE OF THE FOUNTAIN. PUSH UNTIL SNUG (Fig C)

STEP 4 ATTACH THE PUMP (with plastic fitting installed) INTO THE LONGER PLASTIC TUBE EXTENDING FROM THE BASE OF THE FOUNTAIN. (Fig D)

STEP 5 PLACE THE PUMP INTO THE BASIN, MAKING SURE THAT THE PUMP CONNECTOR REMAINS OUTSIDE THE BASIN, AND PLACE THE FOUNTAIN ON TOP OF THE BASIN. BE SURE TO PLACE BASIN ON LEVEL SURFACE.

STEP 6 PLUG THE MALE L.E.D. BARREL CONNECTOR INTO THE MATING CONNECTOR COMING OUT OF THE PUMP. (Fig E) BE SURE THIS CONNECTION REMAINS OUTSIDE THE WATER. THE CONNECTION SHOULD BE VISIBLE AFTER MOUNTING THE FOUNTAIN ONTO THE BASIN.

STEP 7 PLUG THE MALE BARREL CONNECTOR ON THE 6 FT. LONG CORD INTO THE A.C. WALL ADAPTER

STEP 8 FILL THE BASIN WITH WATER UNTIL IT REACHES THE BASE PLATE OF THE FOUNTAIN.

STEP 9 ADD DECORATIVE ROCKS INCLUDED WITH FOUNTAIN TO TOP OF BASE PLATE.


STEP 10 INSTALL CRYSTAL BALL INTO CENTER CAVITY OF FOUNTAIN (Fig F)

STEP 11 PLUG A.C. WALL ADAPTER INTO OUTLET. BE SURE TO LEAVE A "DRIP LOOP" IN THE WIRE. (SEE FIG. 1 ON OPPOSITE PAGE)

Allow a minute for water to flow. If water flow does not start, unplug and NOTE: refer to STEP 1 and check that flow control is open position.

WARNINGS:

- This product is for INDOOR use only.
- Pump must ALWAYS be submerged in water. DO NOT RUN DRY.
- Keep ALL electrical connections out of the water.
- Never plug into outlet if any part of the product appears to be damaged.
- Check for leaks after initial setup and occasionally afterwards.
- DO NOT use any household cleaners on painted surfaces.
- ALWAYS use a "Drip Loop" when operating the pump (see Fig.1).

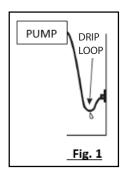

MAINTENANCE:

- Change water periodically to reduce scaling & mineral buildup.
- Check water level and add as necessary to maintain proper level.
- Drain all water from basin if fountain will be out of service for an extended period of time.
- Remove pump from fountain periodically and rinse with fresh water to remove any debris or buildup.
- Rinse basin periodically with tap water and wipe away any buildup.
- Use of distilled water will prevent mineral buildup.

Limited Warranty

E. G. Danner will repair or replace any unit found to be mechanically defective within 90 days of purchase. For warranty issues please contact Danner Customer Service for information before returning product. A dated proof of purchase must be presented to validate any warranty claim. Damages or injuries resulting from negligence, abuse or misuse of this product are excluded from this warranty. This warranty gives you specific legal rights and you may have other rights which vary from state to state.