


2) If splashing occurs when the fountain is running, try re-arranging the rocks **or** reduce the flow rate on the pump by sliding the stem on the front cover towards the other side.

WARNINGS:

- This product is for INDOOR use only.
- Pump must ALWAYS be submerged in water. DO NOT RUN DRY.
- Keep ALL electrical connections out of the water.
- Never plug into outlet if any part of the product appears to be damaged.
- Check for leaks after initial setup and occasionally afterwards.
- DO NOT use any household cleaners on any of the surfaces.
- ALWAYS use a "Drip Loop" when operating the pump (see Fig.1).

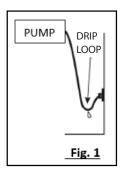

MAINTENANCE:

- Change water periodically to reduce scaling & mineral buildup.
- Check water level and add as necessary to maintain proper level.
- Drain all water from basin if fountain will be out of service for an extended period of time.
- Remove pump from fountain periodically and rinse with fresh water to remove any debris or buildup.
- Rinse basin periodically with tap water and wipe away any buildup.
- Use of distilled water will prevent mineral buildup.

Limited Warranty

E. G. Danner will repair or replace any unit found to be mechanically defective within 90 days of purchase. For warranty issues please contact Danner Customer Service for information before returning product. A dated proof of purchase must be presented to validate any warranty claim. Damages or injuries resulting from negligence, abuse or misuse of this product are excluded from this warranty. This warranty gives you specific legal rights and you may have other rights which vary from state to state.