

WARNING

- INGESTION HAZARD: This product contains a button cell or coin battery. DEATH or serious injury can accur if ingested.
 A swallowed button cell or coing battery can cause Internal Chemical
- Burns in as little as 2 hours.
- Keep new and used batteries OUT OF REACH OF CHILDREN
- Seek immediate medical attention if a battery is swallowed or inserted inside any part of the body.



- Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash. Even used batteries may cause severe injury or death.
- In case of emergency call a local Poison Control Center for treatment information.

Assembly Instructions


The following instructions will assist you in assembling your particular fountain. Depending on which fountain you purchased, there will be slight variations in the assembly process.



Felicity with Tealights – Item # 03823



Mantra with Tealights – Item # 03851

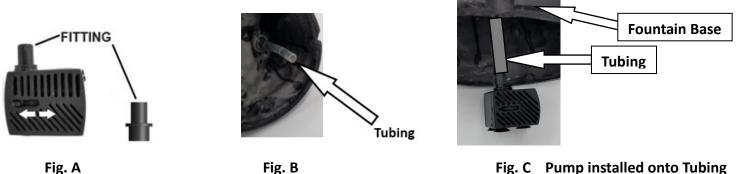



Step 1. Set the "Flow Control" on the pump to the fully opened position. Do this by sliding the stem on the front of the pump cover all the way over to the "+" sign. (see Fig. A)

Step 2. Insert the included plastic fitting into the outlet of the pump. Some models may already have the fitting pre-installed. (see Fig. A)

Step 3. Turn the fountain upside down and attach the pump & fitting to the soft tubing extending down from the inside of the fountain. (see Fig. B and Fig. C)

Step 4. Place the fountain with the attached pump onto the basin. Be sure to check that the basin is sitting on a level surface.

Step 5. Slowly fill the basin with water until it reaches the base of the fountain.

Step 6. Add the included decorative rocks (dependent on model) to the top surface of the fountain base.

Step 7. Slide the switch located on the rear side of Tealights to the "ON" position and place in each of the (2) holders on the base of the fountain.

Step 8. Plug into outlet. Be sure to leave a "Drip Loop" in the wire (see Fig. 1)


Setup hints:

- 1) If water does not flow shortly after power up, unplug and refer to STEP 1 to confirm that the flow control is in the fully open position. **OR** Air may be trapped within the pump. Remedy this by removing the pump from the water & placing back into the filled basin.
- 2) If splashing occurs when the fountain is running, try re-arranging the rocks or reduce the flow rate on the pump by sliding the stem on the front cover towards the other side.

Care and Operating Instructions

WARNINGS:

- This product is for INDOOR use only.
- Pump must ALWAYS be submerged in water. <u>DO NOT RUN DRY.</u>
- Keep ALL electrical connections out of the water.
- Never plug into an electrical outlet if any part of the product appears to be damaged.
- Check for leaks after initial setup and occasionally afterwards.
- DO NOT use any household cleaners on any of the surfaces.
- ALWAYS use a "Drip Loop" when operating the pump (see Fig.1).

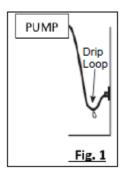

MAINTENANCE:

- Change water periodically to reduce scaling & mineral buildup.
- Check water level and add as necessary to maintain proper level.
- Drain all water from the basin if the fountain will be out of service for an extended period of time.
- Remove pump from fountain periodically and rinse with fresh water to remove any debris or buildup.
- Rinse basin periodically with tap water and wipe away any buildup.
- Use of distilled water will prevent mineral buildup.

Limited Warranty

E. G. Danner will repair or replace any unit found to be mechanically defective within 90 days of purchase. For warranty issues please contact Danner Customer Service for information before returning the product. A dated proof of purchase must be presented to validate any warranty claim. Damage or injuries resulting from negligence, abuse or misuse of this product are excluded from this warranty. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

SAVE THESE

