

# Chelsea

# Electric Recliner Swivel & Glider Chair with USB

Item Number: ITI-CHEL-EGG-E

IMPORTANT: PLEASE READ CAREFULLY AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

# SAFETY PRECAUTIONS

Please follow these instructions carefully to assemble your Electric Recliner Chair.

If you are missing any parts or require some assistance please contact us via the contact details on this page.

## A WARNING A

ADULT ASSEMBLY REQUIRED:

DUE TO THE PRESENCE OF HEAVY PARTS DURING ASSEMBLY, KEEP OUT OF REACH OF CHILDREN UNTIL ASSEMBLY IS COMPLETE.


DO NOT SIT ON THE EDGE OF THE SEAT, ARMRESTS OR ON THE BACKREST AS THIS COULD CAUSE THE CHAIR TO TIP OVER.

DO NOT USE THE CHAIR AS A STEP STOOL.

DO NOT LEAVE CHILDREN UNATTENDED ON OR BESIDE THE CHAIR.



### 2

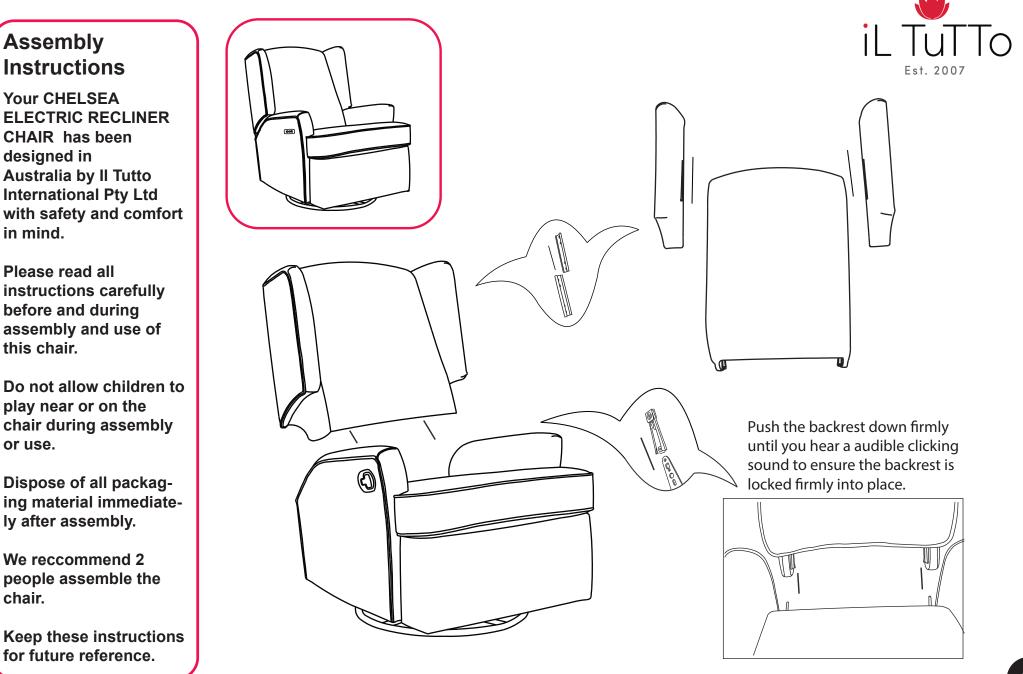


#### **OPERATING THE RECLINE POSITION**



**1.** To recline the chair and release the footrest, push one button on the side of the chair.

**2.** To retract the chair back into the upright position, push the 2nd button on the side of the chair to replace it back into the upright position.

**3.** USB port is located on the side of the chair for you to charge your device.

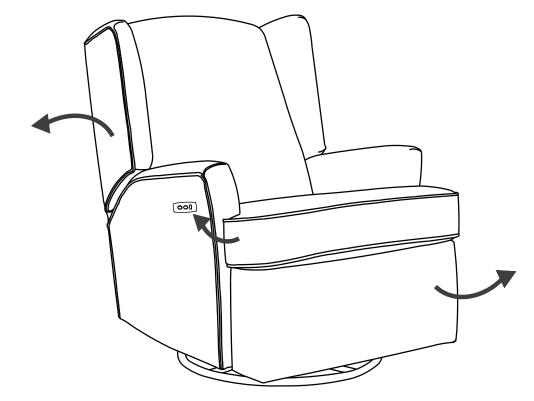

## $\triangle$

**CAUTION:** Do not allow children to play on this electronic chair or operate the mechanism. The leg rest folds down on closing and could possibly injure a child if they are near the folding mechanism. Do not leave children unattended on or near the chair. Always leave the chair in an upright and closed position. Keep hands and feet clear of mechanism. Only the adult occupant should operate the chair.



**RISK OF ELECTRIC SHOCK.** 


USE IN DRY LOCATION ONLY.

#### POWER CORD SAFETY

UNPLUG AND REMOVE POWER CORD FROM THE WALL AND THE BACK OF THE ELECTRONIC CHAIR WHEN NOT IN USE. STORE THE CORD OUT OF REACH OF CHILDREN.

#### DANGER

TO REDUCE THE RISK OF ELEC-TRIC SHOCK; ALWAYS UNPLUG THE POWERED ELECTRONIC CHAIR FROM THE ELECTRICAL OUTLET BEFORE CLEANING.

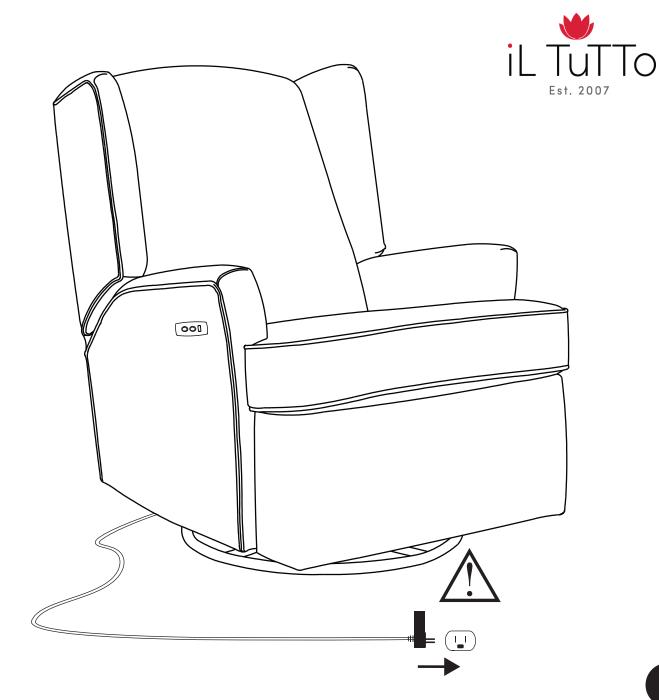



RISK OF FIRE. MAKE SURE THE POWER CORD IS NOT UNDER THE METAL BASE OF THE ELEC-TRONIC CHAIR. THIS IS A FIRE HAZARD.

#### POWER CORD SAFETY

UNPLUG AND REMOVE POWER CORD FROM THE WALL AND THE BACK OF THE ELECTRONIC CHAIR WHEN NOT IN USE. STORE THE CORD OUT OF REACH OF CHILDREN.

#### DANGER

TO REDUCE THE RISK OF ELECTRIC SHOCK; ALWAYS UNPLUG THE POW-ERED ELECTRONIC CHAIR FROM THE ELECTRICAL OUTLET BEFORE CLEANING.





#### **CLEANING & MAINTENANCE**

Wipe clean with a damp cloth. Use mild soap if required. Do not use bleach. Treat spills and stains as soon as possible. Made in China. Seat Lining 100% Polyester Seat Filling Polyester/ Polyurethane Foam

Always check parts regularily and tighten or replace any screws, nuts or fasteners if required. Always contact us immmediately if you have any concerns or require any spare parts for your recliner chair. Only use II Tutto replacement parts.

If you require assistance with assembly please contact us via the information on this page.

#### SAFETY STANDARDS

#### The electrical componenet of this chair has been tested to the following standards.

AS/NZS CISPR 14.1:2013 IEC 60335-1:2010 +A1:2013 +A2:2016 AS/NZS 60335.1:2011 + A1:2012 + A2:2014 + A3:2015

MAXIMUM WEIGHT LIMIT 130KG

**II Tutto** International Pty Ltd PO Box 45 Bulimba Q 4171 Australia Ph: 1300 780 548

www.iltutto.com.au hello@iltutto.com





Visit our channel for videos! https://www.youtube.com/@iltutto/videos