



Locate the 'Sample Coin' slot situated at the rear of the coin mech.

Once a sample coin has been positioned here, the coin mech will accept coins of the same size. This sample coin must remain in this position.

If a sample coin has been positioned and the coin mech continues to reject coins, please try another coin or ensure the sample coin has been positioned correctly.