


16' CANVAS



BELL
HINT

THEGETOUT.SHOP


WHAT IS INSIDE

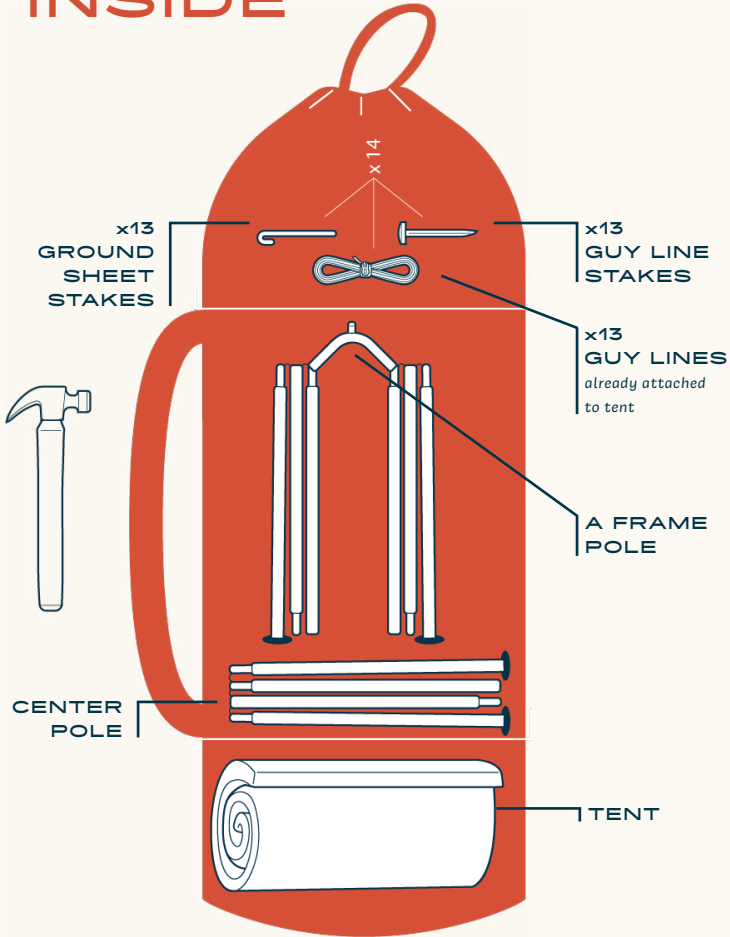


STEP ONE




Unroll your tent, groundsheet down and spread out as evenly as possible. Place the groundsheet stakes through the grommet tabs and hammer them into the ground.

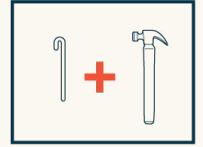


WHAT YOU NEED

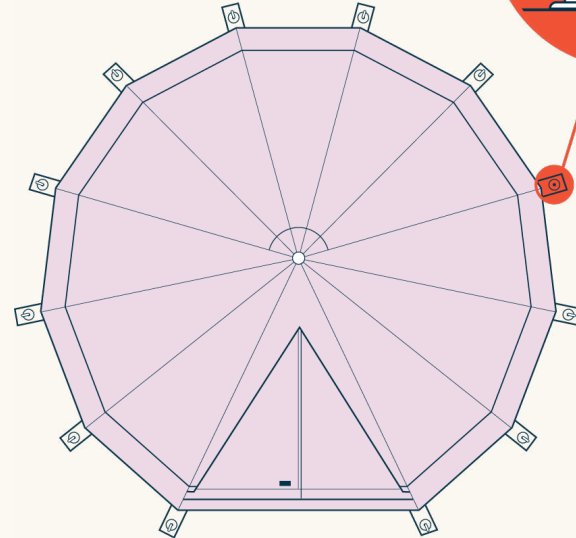

STEP TWO


 *Build Center pole** and Make sure loop hook on pole is on the top end of the pole. This comes in handy for hanging a lantern. Install pole by positioning one end centered inside on the tent ceiling and walk it upright.


**Do not install the center pole without the rubber ends.*

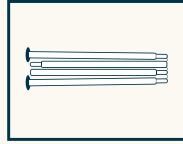



WHAT
YOU
NEED

STEP THREE

 *Bring "A" frame poles inside the tent and assemble.* The top post of the "A" frame should fit into a grommet found at the top of the door and the bottom poles will fit into straps sewn into the floor near either side of the door. Tie the pole to the tent at the top grommet and wind straps to prevent movement in wind.

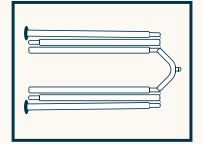


WHAT
YOU
NEED

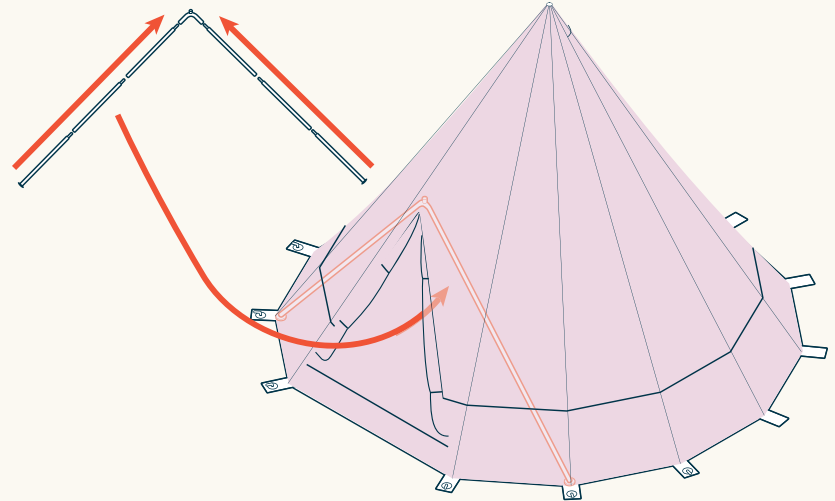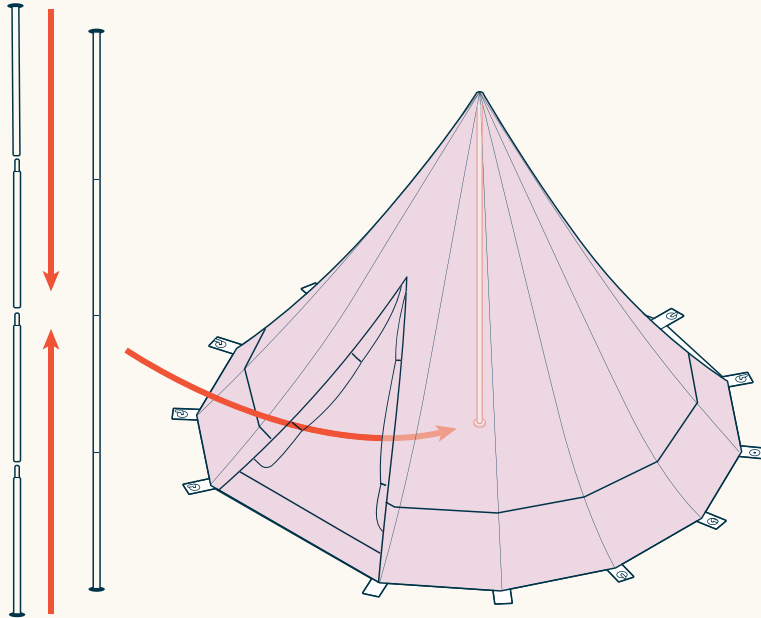


STEP FOUR

☀️ *Zip closed all window and door openings. Pull guy lines evenly from the tent about 2'-3' out and securely stake them into the ground with the guy line stakes. Make sure the guy lines come off the tent at the same angle as the seams.*

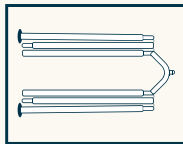


WHAT
YOU
NEED

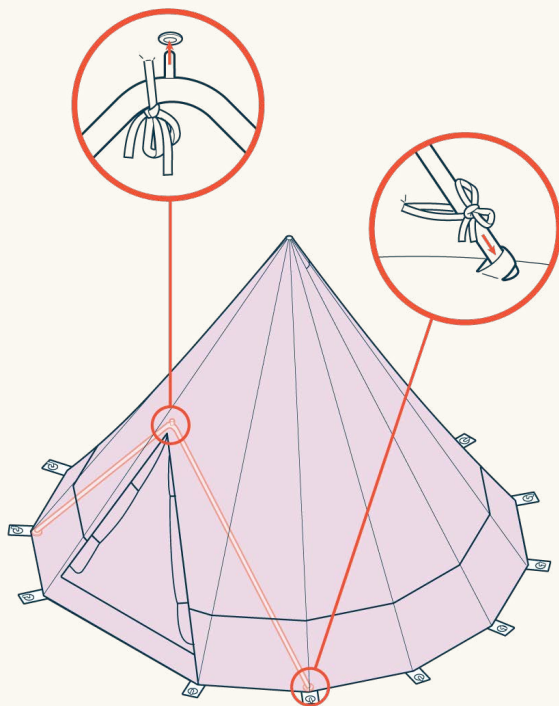


STEP FIVE

😊 *Tighten all guy lines evenly with attached slider.*

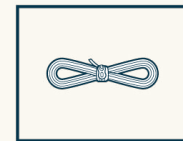

WHAT
YOU
NEED

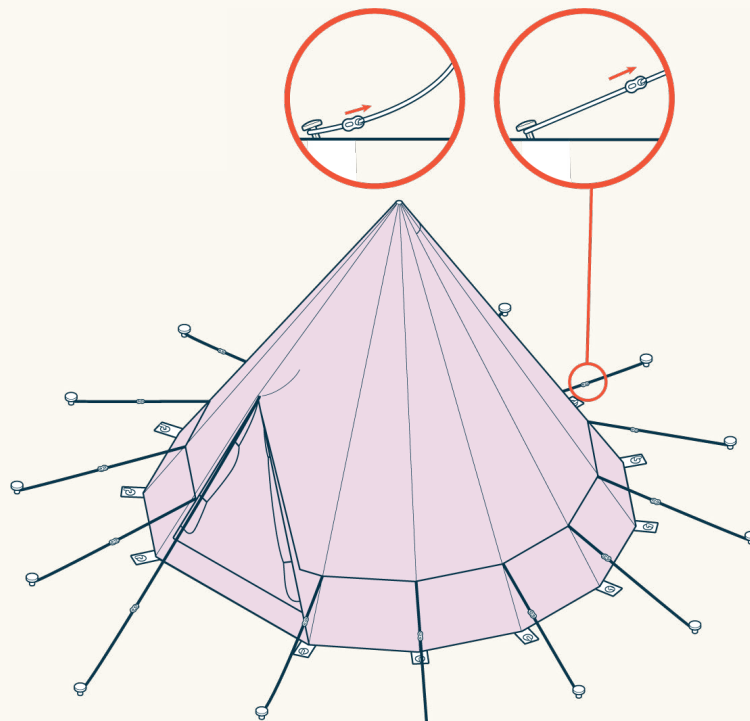

INSTRUCTIONS FOR USE AND CARE

The Bell tent is intended for personal leisure use and is a temporary structure.

When setting up your tent, carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds, and other possible hazards to help reduce the risk of loss or injury to the tent or occupants.

The Bell tent is made of flame resistant fabric which meets CPAI-84 specifications. It is not fireproof. The fabric will burn if left in continuous contact with any flame source. Keep all flames and heat sources away from the tent. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective. Do not operate any device which burns fuel inside this tent.

CLEANING: Spot clean with warm water and a mild detergent. Test on an inconspicuous area before application. For overall cleaning, a power washer and scrub brush will get your tent looking good as new. Make sure you give the fabric time to fully dry before packing and storing. Always store in a dry place.


REPAIRS: The materials used on the Bell tent have been selected for their durability and ease of maintenance, but accidents do happen. Always apply any canvas repair work on the outside of the tent. Rips in the canvas can be stitched closed using a regular small gauge needle and thread. For groundsheet repairs, use a round PVC patch applied to both sides of the tear with a strong contact adhesive. Contact The Get Out for spare parts and repair kits.

WARRANTY

All Get Out tents carry a one year manufacturer warranty. This warranty does not cover mold or mildew damage due to improper use or storage. Please follow instructions for care to avoid damage.

For questions please contact us via phone or email at:

THE GET OUT
T: 707-242-1911
hello@thegetout.shop
www.thegetout.shop

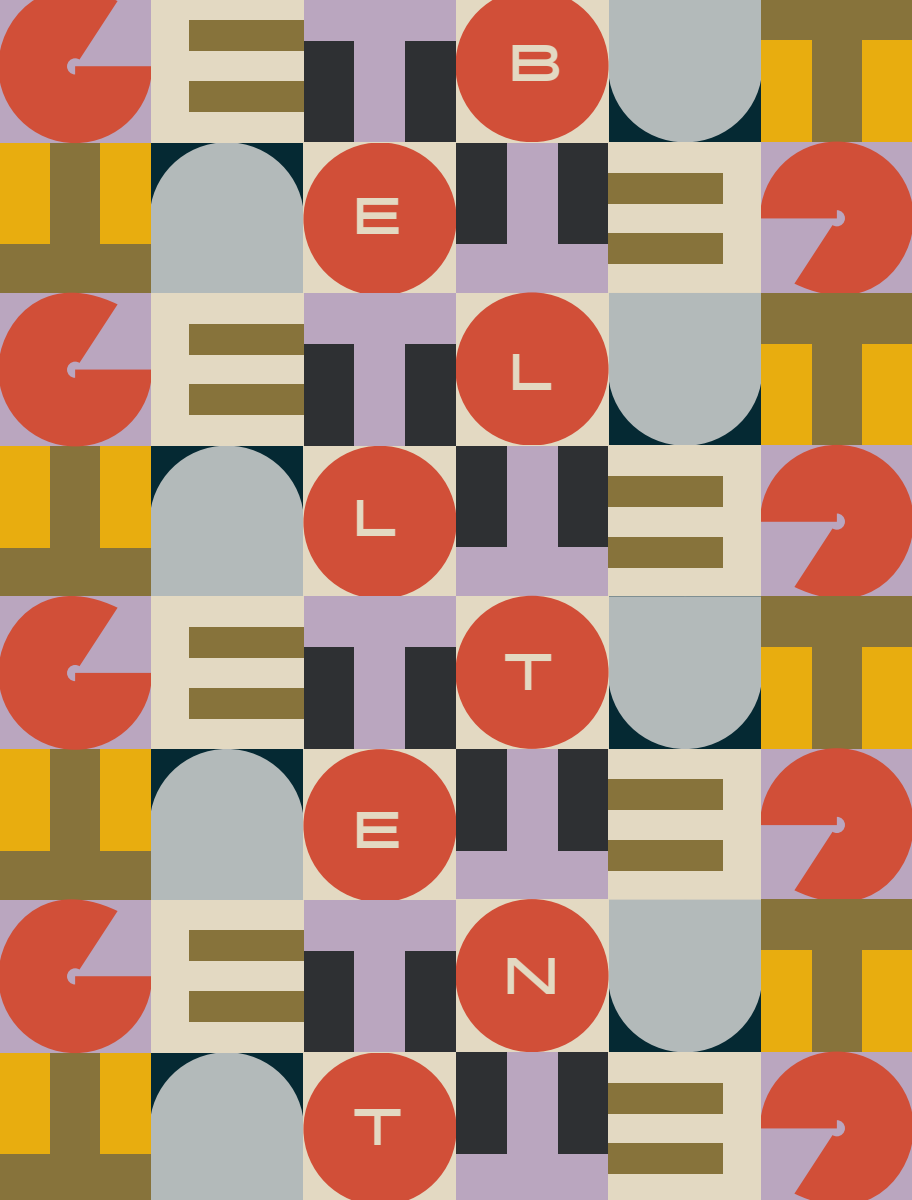

B

E

L

L

T

E

Z

T