

User instructions

The safe is locked when leaving the factory.

Using an override key to unlock your safe

- 1 Remove the lock cover.
- 2 Insert the key into the lock with the small lugs uppermost.
- 3 Press the key in and turn to the LEFT past slight resistance, approximately one EIGHTH of a turn until it stops. Holding the key against the stop, turn the handle to the RIGHT to unlock the door.

Activating the digital lock

- 4 Slide off the battery cover inside the door and insert the four batteries provided, observing correct polarity. The digital lock will beep once to indicate power is on. Replace the battery cover. **We recommend keeping the door OPEN for the following steps. Turn the handle to the LEFT to extend the bolts.**

- 5 A digital code is pre-set at the factory to the letters **DAVE** followed by * or # (or 2 1 9 3 followed by * or # if using numbers). **Using the keypad, apply the factory code.** The YELLOW light will flash then the GREEN light will illuminate, indicating that the code is accepted. You will also hear the digital lock action. **Immediately test the lock** by turning the handle to the RIGHT and observe the twin locking bolts retracting (after **5 SECONDS** the GREEN light will switch off as the lock times out). Note that it is not necessary to use a code to LOCK the safe - simply turning the handle to the LEFT will engage the bolts.

Setting your own digital code

- 6 Choose a memorable code with 3 - 8 digits, letters or numbers or a combination of both. Locate the RESET BUTTON inside the door. Remove the cover, press the button ONCE, and replace the cover. **When the button is pressed, the YELLOW light illuminates and you have approximately 15 SECONDS to set your code.** Apply your code via the keypad. Successful setting will be confirmed by one beep and the YELLOW light will switch off. **Test the lock immediately** using your new code - after **5 SECONDS** the GREEN light will switch off and the digital lock will time out. Save a reminder of your digital code, replace the lock cover and keep the override keys in a safe place.

Important

- If setting a new code is unsuccessful, the lock will beep three times and the yellow light will flash. Wait 30 seconds before trying again.
- When an incorrect code is entered more than 3 times, the lock will time out. Wait 30 seconds before trying again.
- If, when opening the safe, the red light is on, replace the 4 x AA batteries. Use an override key to unlock the safe (see instructions 1 - 3 above) if the batteries fail.
- We recommend securing your safe via the pre-drilled holes. Expanding fixings (for masonry) are provided.

