

LM300 and LM400 Laminators




Thank you for buying this laminator.
Please read this manual carefully before using your laminator, and keep it for future reference.

Specifications

	LM400	LM300
Electrical	220-240V / 50Hz / 1A	220-240V / 50Hz / 1.5A
Machine Dimensions	370x100x60mm	456x95x60mm
Machine Net Weight	0.8Kg	1.8Kg
Maximum Pouch Width	240mm	335mm
Pouch Thickness	80-125 Microns	80-125 Microns
Max Thru-out Thickness	0.6mm	0.6mm
Warm up Time	4-5mins	4-5mins
Operating Speed	300mm/min	300mm/min

Product features

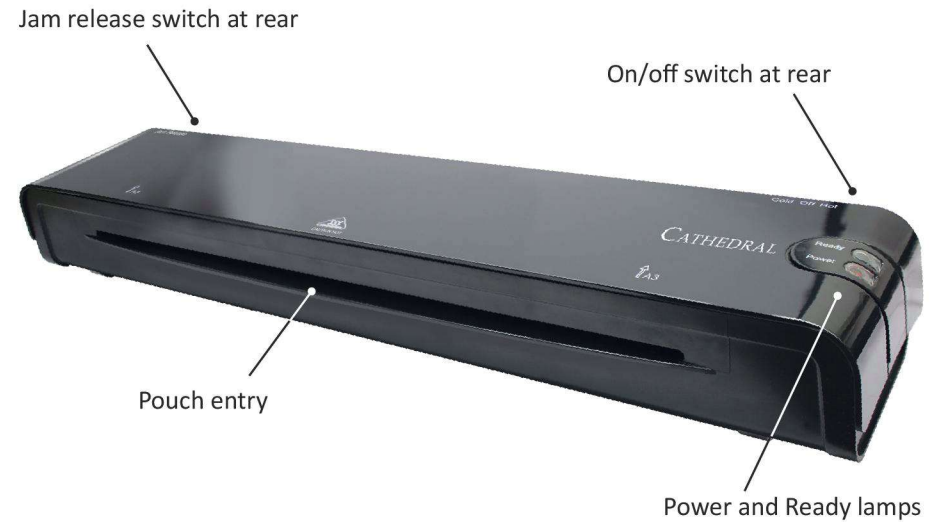

Guarantee

Operation of this machine is **guaranteed for one year from the date of purchase**, subject to normal use. Within the guarantee, and subject to our discretion, we will either repair or replace the defective machine free of charge. Defects due to misuse or use for inappropriate purposes are not covered under the guarantee. Proof of date of purchase will be required. Repairs or alterations made by persons not authorized by Cathedral Products (UK) Ltd will invalidate the guarantee. It is our aim to ensure that our products perform to specifications stated. This guarantee does not affect the legal rights which consumers have under applicable national legislation governing sale of goods.

LM300 and LM400 Laminators

Important safety instructions

Your safety as well as the safety of others is important. In this instruction manual are important safety messages. Read these messages carefully.



This safety alert symbol precedes each safety message in this instruction manual. This symbol indicates a potential personal safety hazard that could hurt you or others, as well as cause product or property damage.

Important safeguards



Warning: For your protection, do not connect the laminator to electrical power until you have read these instructions completely. Keep these instructions in a convenient location for future reference. To guard against injury, the following basic safety precautions must be observed in the set-up and use of this product.

General Safeguards

- Use the unit only for its intended purposes
- Do not place anything in the throat opening of the unit other than pouches / documents
- Place unit on a secure, stable work area to prevent the unit from falling and possibly causing personal injury and damage to the unit
- Follow all warning and instruction marked on the unit
- The socket outlet shall be installed near the equipment and shall be easily accessible

Electrical Safeguards

- The unit must be connected to a supply voltage corresponding to the electrical rating
- Unplug the unit before moving it, or when it is not in use for an extended period of time
- Do not operate with a damaged supply cord or plug, if it is damaged or malfunctions
- Do not overload electrical outlets beyond their capacity; fire or electrical shock could result
- The unit is intended for indoor use only
- Do not spill liquid of any kind on this product
- Close supervision is required when this product is used near children

Service

Do not attempt to service or repair this pouch laminator yourself. Unplug the unit and contact Cathedral Products (UK) Ltd for required repair.

Cleaning



Caution: Unplug this product from an electrical socket before cleaning. Wipe the exterior only with a damp cloth. Do not use solvents or detergents.

Operation

Operation, Hot Lamination

- 1 Connect the power cable to an appropriate power source and move the switch at the rear of the laminator to "HOT". The red "POWER" lamp will illuminate.
- 2 The "READY" indicator lamp will glow green when the laminator reaches lamination temperature. Once this occurs, the laminator is ready to be used.
- 3 Peel open a Cathedral Products (UK) Ltd pouch and carefully insert the item to be laminated fully into the **sealed edge**, ensuring equal space around the other edges.
- 4 Feed the sealed edge of the pouch into the laminator - **let the laminator gently take the pouch** - do not push.
- 5 The laminated item will automatically exit at the rear of the laminator. After the pouch has stopped moving, place it on a flat surface to cool for one minute before handling.
- 6 If you have finished laminating, then move the switch to the "OFF" position.

Note: Never laminate an empty pouch.

Operation, Cold Lamination

- 1 Connect power cord to appropriate power source and move the switch at the rear of the laminator to "COLD". The red "POWER" lamp will illuminate.
- 2 For Cold Lamination, the "READY" indicator lamp will not glow green. The unit will be ready to use when the red "POWER" lamp is illuminated. When Cold Laminating, ensure the laminator is not hot. If you have recently finished Hot Laminating, you will need to wait for the laminator to cool down prior to attempting Cold Lamination.
- 3 Use your cold pouch (Pressure sensitive – non thermal laminating pouch) **as in steps 3 and 4 above**
- 4 If you have finished laminating, then move the switch to the "OFF" position.

Jam Release

- 1 If a document jam occurs, move the switch to "OFF" and ensure the red "POWER" lamp is not illuminated.
- 2 Push the "JAM RELEASE" button and by holding the machine firmly in place, pull the pouch out from the front of the paper inlet until it is fully removed.