


Intelligent toilet manual precautions for use

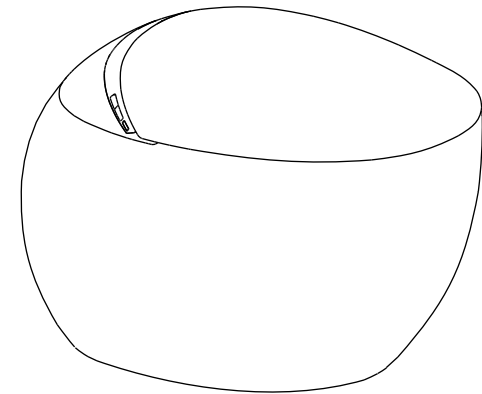

CATALOGUE

Contents

Important Safety Guidelines	1
Safety Precautions	2
Precautions For Use	6

How To

Instructions For Using The Remote Control	8
Pre-use confirmation	10
Usage Method	12
Hidden Function	13
Notice use	14

Clean Maintenance

Daily Clear Protection	15
Disassemble And Clean	16
When The Nozzle Function Is Weakened	17
Remote Control Battery Replacement	17
When Placed And Not In Use For A Long Time	18



There Is A Danger Of Freezing	19
Failure Judgment	20
Specification	21

Thank you for purchasing the smart toilet, please read this manual carefully and use it correctly.

Keep in a convenient place after reading the instructions.

Important safety guidelines

When using electronic products, especially children, you should follow the safety guidelines. It includes the following: please read all the guidelines before the product is installed.

-  **Danger** - in order to reduce the possibility of electric shock
1. Do not place the product or store it in a place where it may get wet.
 2. Please do not bring the remote control into the bathtub, sink and other liquids
 3. Do not spray water into the product or plug section.
-  **Warning** - for the possibility of scald, electric shock, fire and injury
1. Young children, paraplegic, are not sensitive to temperature. When using the product, you need to be accompanied by others and please adjust the temperature to the lowest level or close the toilet seat temperature.
 2. The product is limited to the functions listed in this specification. Do not use ancillary equipment recommended by the company.
 3. Please do not continue to use this product if the product line or plug is damaged, the product fails, the product is damaged or in the water. Deliver the product to a nearby designated maintenance center for inspection or maintenance.
 4. Please make sure that the wire is not ironed.
 5. Do not use this product in a sleepy or sleeping state
 6. Do not drop any items into or into water or water pipes.
 7. Do not use this product outside of your words.





Please save this safety guide.

safety precautions



Be sure to comply

Please read carefully (safety precautions) and use them correctly. The notes listed here are important security-related matters, and be sure to comply.

The signs and meanings are shown below

 warning	Ignoring this sign may cause serious injuries or casualties
 attention	If no operation is caused by ignoring this sign, it may result in personal injury or property loss

Examples and illustrations of icons

	⊘ It is not feasible, (forbidden); Left image (disassembling)
	ⓘ Represents the need for (mandatory) execution of the content; Left image representation (must be followed)

 **warning**



Ban on water

Doater or detergent on product or power plug.

Can cause fire or shock

May cause the toilet to rupture, damage or indoor water seepage

This product belongs to the electrical product, so please do not install in the place where the water is easy to be splashed or high humidity. When used in the bathroom, please install the ventilation equipment to keep the bathroom in good circulation.

• Can cause fire or shock

The outlet of the power supply wiring should be installed as follows

• A fire or electric shock may be caused if the wiring is not followed.

The circuit of the socket should be protected with high sensitivity, quick type leakage switch (rated inductor below 15mA) or insulated transformer (1.5 KAV or above, 3KAV).

b. The installation position of the socket must be above 0.3m above the ground, and as far as possible from the bathtub.

The grounding line of the product must be earthed. Please be sure to get the ground line.



• If it is not grounded, it may cause shock.

Note: ground handling here refers to the grounding resistance under 100 Ω, panel and the ground wire of more than 1.6 mm in diameter copper wire.

Please use it in the bathroom

Please make sure the power plug when used in the bathroom a silica gel has been used in waterproof processing

If it is not waterproof, it may cause fire or shock.

⚠ warning



Guard against damp
Use wet place

Do not install this product in damp places such as bathroom

Can cause fire or shock



Prohibited
remove

It is absolutely not possible to disassemble, repair and transform products

May cause fire or shock



Ban on
wet hands

Do not plug the power plug with wet hand

May cause fire or shock



Ban

Please do not continue to use the product when it fails.

Pull out the plug when the following occurs.
Close the inlet Angle valve and stop the water

The fault content.....
Ontology is leaking
The product cracks and cracks
Abnormal sound, abnormal smell
unit burnt smoke comes out
Abnormal heating of product
The toilet is blocked

If continue to use the defective case,
may cause fire disaster, electrical shock
or indoor water seepage problems



Ban

Do not damage the power cord or the seat cable

Do not pull, do not work,
do not heat, do not force
bending, do not pull, do
not put the weight on the
power line and the connecting
line

It may cause fire, electric shock and
short circuit if it continues to be used
regardless of product damage. If the
power cord is damaged, it should be
repaired by professionals.



Ban

Do not use loose power outlet

May cause fire or shock



Ban

Do not use long wire socket

Do not connect the wire or use
extension cord in the middle of
the road, it will cause the fever to
cause fire and electric shock.



Ban

Do not use water other than tap water

There may be problems with skin inflammation



Ban

Do not use ac 200V power supply

May cause fire

⚠ attention



Pay attention to the low temperature scald

Sit on the stool for a long time. Please adjust the
temperature of the seat to the room temperature

When the following person USES the heat preservation
seat and the warm air to dry, please adjust the seat
temperature to the room temperature, the warm wind
temperature adjust to the wind

Children and old people
cannot adjust their temperature
to the right degree. The patient,
the disabled, etc. The ease of
sleep medications (a sleeping
pill, medicine, etc.), depth of
sleepiness people drinking and
fatigue.

⚠ warning



forbid fire

Do not allow cigarettes to be close to the product

Could cause a fire



Ban

Do not use finger or other items to put in or block the warm air outlet

Please do not block the warm air out of the vents.
Do not clog the warm air outlet.

It can cause burns, electric shocks, and burns


Please pay close attention when children and old people use it



Ban

Please do not force or impact, do not stand on the stool,
cover or body, do not place heavy objects

May cause product cracking, bulk drop, personnel injury.
The toilet is broken, which can lead to indoor flooding.

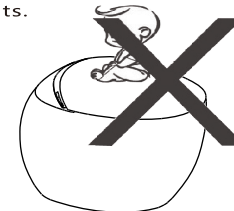

Ban

For maintenance, please use the diluted kitchen detergent (neutral)
and do not use the following products.

(toilet detergent, home use detergent, gasoline, banana water, detergent
powder, nylon brush, etc.)

It can damage the plastic and make it crack and cause personal injury
It may damage the water pipe and cause a leak



Ban

In the condition of opening the inlet
Angle valve, the water inlet filter can
not be removed, and the water filter
with water filter is released
Can cause a leak



Ban

Do not twist or damage the
water inlet hose


It could cause a leak



Ban

Do not use the toilet to wash
away anything other than
large or urine

Otherwise, it may lead to a blockage
and overflow of sewage

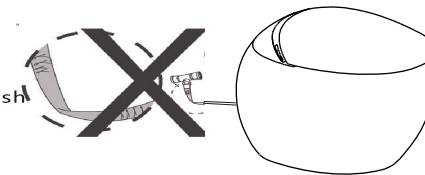

must obey

Pull the plug when not in
use for a long time

For safety reasons, please plug the
powerWhen used again, the corroded
water can cause inflammation of the
skin and so on. Please use after water



must obey

When a leak occurs, close the
inlet Angle valve and stop the
water



must obey

Prevent damage from freezing
Freezing can result in water inlet
configuration and internal damage
of the body, which can leak

Please keep warm and so on, raise
toilet temperature.



must obey

Freezing can result in water
inlet configuration and
internal damage of the body,
which can leak

Otherwise it can cause a leak.



must obey

Plug in the power cord

Please confirm the plug in the power cord before use. The plug and socket should be closely glued to the non-loose or incomplete phenomenon, or it may cause an unexpected fire caused by heat. When not using this product for a long time, please unplug the power.



must obey

When the toilet seat is blocked, please pull out the power plug and remove the blockage from the pipe that is sold on the market. Do not pull out the power plug, will do automatic washing, can cause sewage overflow, indoor flooding.



must obey


Do not direct sunlight into the product

Easy to make products change color, aging or cracking



must obey

Please use the attached hose

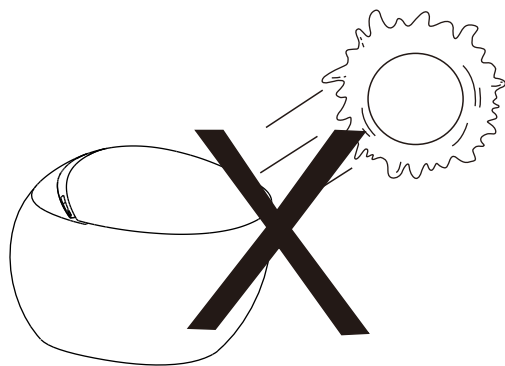


precautions for use


Please abide by the following matters 

Cause of damage and damage

Do not use dry cloth or tissue paper to wipe the product body (non-ceramic part) and seat, cap

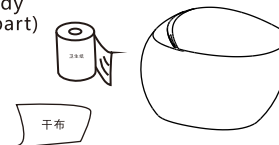


Do not rinse directly with water

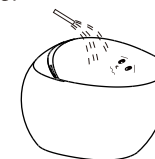


breakdown cause

Please do not pour pee on the body and nozzle

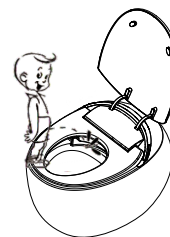

Please pull out the power plug when it is thundering.

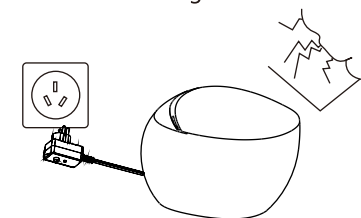

Bad action


The sensors, sensors and remote control are not allowed to send signals and receive signals. Can cause the intelligent toilet to misoperate

Do not lean back on the cap


May result in casing and damped damage.

Please abide by the following matters. 


In case of freezing overnight, damage to prevent freezing, please take anti-freeze measures.

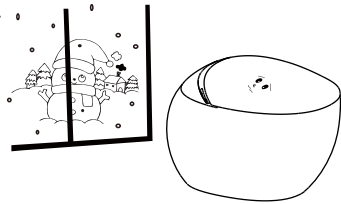



Please don't bring the heater or the heater to the body. It will change color or malfunction

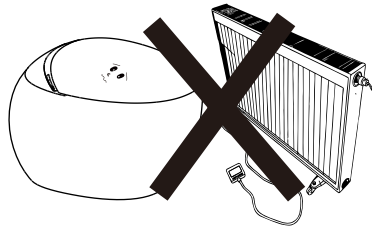



Please don't rudely open the seat or cover. It can crack or fail

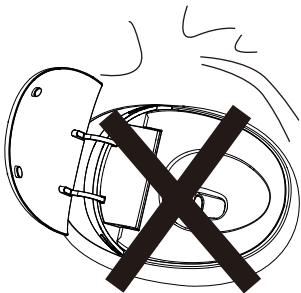

Instructions for remote controls

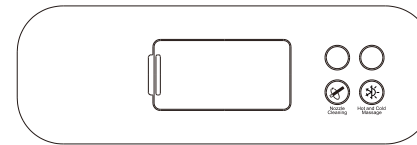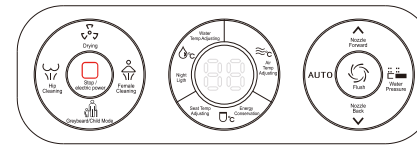

STANDARD VERSION

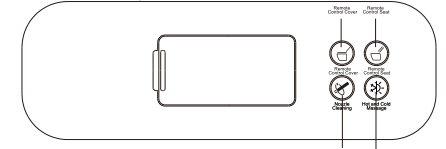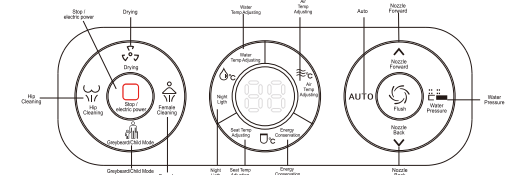

PREMIUM VERSION

Power/stop key: short press to stop the function; Press and hold to turn the toilet on and off.

Women's washing key: when you are seated, press the women's washing key briefly to turn on women's washing, and continue to press the women's washing key briefly to turn on mobile massage and washing.

Hip wash key: when sitting, press the hip wash key briefly to open the hip wash, and continue to press the hip wash key briefly to open the mobile massage wash.

Drying key: when sitting, if the toilet has been flushed with water once, press it briefly to turn on the drying; If the toilet has not been flushed, press briefly to flush the toilet first, and then open it for drying.

Elderly person mode/child mode: When sitting, short press to turn on the elderly person mode. At this time, the default is the one-button cleaning mode of the seat temperature and water temperature at the third gear of 40 degrees, the washing water pressure and drying at the third gear. Whether you are sitting or not, press and hold to turn on the children's mode for cleaning. At this time, the default is the one-button cleaning mode of the first gear of seat temperature and water temperature 34°C, cleaning water pressure and drying the first gear.

Note: When children's mode cleaning is turned on, only the power/stop key, drying key, nozzle forward and nozzle backward keys are available, and other functions cannot be used.

Water temperature/night light key: short press to adjust the water temperature, normal temperature gear/1 gear/2 gear/3 gear cycle regulation, gear 1 34 °C "tick" one prompt, gear 2 37 °C "tick" two prompts, gear 3 40 °C "tick" three prompts, normal temperature gear "tick" one long beep. Press and hold to switch on the night light.

Air temperature key: short press to adjust the air temperature, normal temperature gear/1 gear/2 gear/3 gear cycle adjustment, gear 1 "tick" a prompt, gear 2 "tick" two prompts, gear 3 "tick" three prompts, and normal temperature gear "tick" a long beep.

Seat temperature/energy saving: short press to adjust the seat ring temperature, normal temperature/1 gear/2 gear/3 gear cycle adjustment, 34 °C "tick" in gear 1, 37 °C "tick" in gear 2, 40 °C "tick" in gear 3, and a long beep in gear 3. Press and hold to switch the energy-saving mode.

AUTO full-automatic key: short press to open the one-button cleaning mode (spray bar fixed cleaning for 30 seconds, mobile massage cleaning for 30 seconds, automatic flushing after completion, and then turn on drying for 3 minutes).

Water pressure key: short press to adjust the water pressure, gear 00/01/02/03 cycle adjustment, gear 00 "tick" one prompt, gear 01 "tick" two prompts, gear 02 "tick" three prompts, gear 03 "tick" four prompts.

Flushing key: short press to turn on flushing.

Spray bar forward key: short press to adjust the spray bar forward.Backward movement key of spray bar: short press to adjust the backward movement of spray bar.


Flip/microwave key: short press to open and close the seat cover. Press and hold to switch the microwave automatic flap.

Seat ring key: short press to open or close the seat ring.


Nozzle cleaning key: when it is not seated, press it briefly to open the nozzle cleaning function, clean the nozzle, and automatically stop in 5 minutes. Long press to open the foam shield (the toilet must have the foam shield function).

Hot and cold massage key: When turning on the hot wash, women wash, elderly mode and automatic cleaning, press the hot and cold massage key briefly to turn on the hot and cold massage, and the cleaning water temperature changes between 30 °C and 40 °C.

Instructions for remote controls

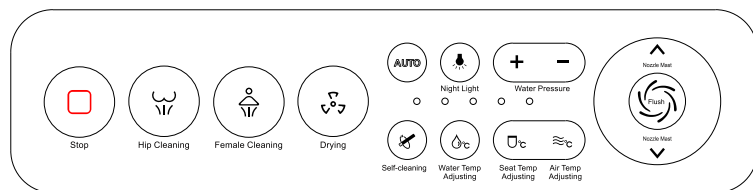

STANDARD VERSION

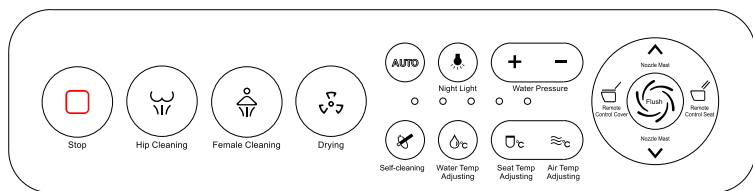

PREMIUM VERSION

Function operation instructions:

Power supply: turn on or off the toilet power supply

Stop: click to stop the function

Small punch: click to enter the small punch mode (suitable for users with high water pressure)

Big punch: click to enter the big punch mode (suitable for users with low water pressure)

Drying: turn on and off the warm air drying function when the human body is seated (drying time is 180 seconds)

Women washing: press once for women washing, and press again for mobile cleaning (cleaning time: 60 seconds)

Hip washing: press once for hip washing, and press again for mobile washing (washing time: 60 seconds)

Push to talk: Push to talk automatic cleaning

Night light: turn on the night light with one button

Energy-saving: click Energy-saving Start

Nozzle cleaning: press once to automatically clean the nozzle

Water temperature: press once to adjust the water temperature of the first gear. The gear is divided into four gears.

The right side is the gear indicator light (normal temperature gear, the first gear is about 34 °C, the second gear is about 37 °C, and the third gear is about 40 °C)

Air temperature: adjust the air temperature of the first gear at a time. The gear is divided into four gears. The right side is the gear indicator (normal temperature gear, the first gear is about 48 °C, the second gear is about 55 °C, and the third gear is about 62 °C)

Seat temperature: press once to adjust the seat temperature of the first gear. The gear is divided into four gears.

The right side is the gear indicator light (normal temperature gear, the first gear is about 34 °C, the second gear is about 37 °C, and the third gear is about 40 °C)

Water pressure: press to adjust the water pressure. The water pressure is divided into four gears, and the gear indicator is on the right

Flip: Press once to open or close the seat cover

Turn over: press once to open or close the seat ring

Nozzle moves forward: press once to move forward


Nozzle moves back: press once to move back

Pre-use confirmation



When using a smart toilet for the first time, please do not confirm the project

Power supply plug put in the socket

1. Insert the power plug into the AC 220V socket

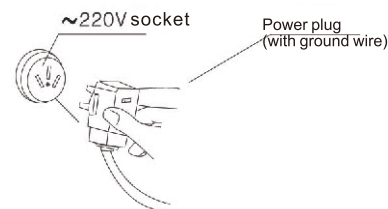

Confirm whether the inlet valve is open

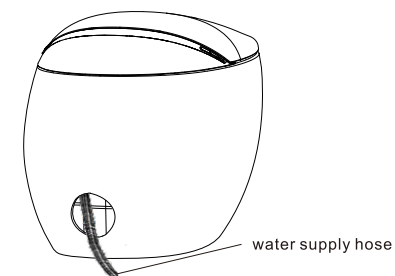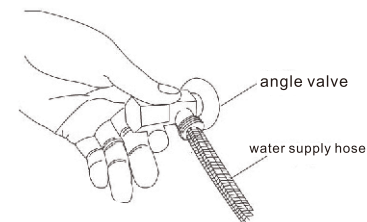

warning



Be sure to connect the ground firmly
The power plug of this product is three-phase
plug (with ground wire).

When a breakdown or leakage occurs, there is
a danger of electric shock.


Consult the electrical installation company when
there is no ground plug in the socket.

Fill the inlet Angle valve into the inlet hose

Pre-use confirmation


Identify various functions

1. The nozzle and its water pipe are leaky, dry water pipe each part hind, use water absorbent paper to inspect.
2. Press the seat to see if the buzzer has a "drop".
3. Check for cleaning, drying, automatic deodorization and automatic flushing.
4. Whether the damping buffer is normal.

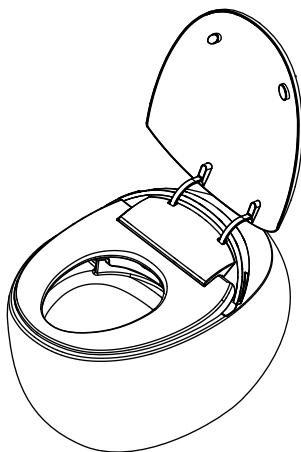

Seat induction position

 Check the cleaning, drying and deodorizing function of the seat sensor. When cleaning, cover the front end of the nozzle and block the spray nozzle to avoid splashing.




warning

Please do not use 220V power supply.

Fire hazard



operation button is used

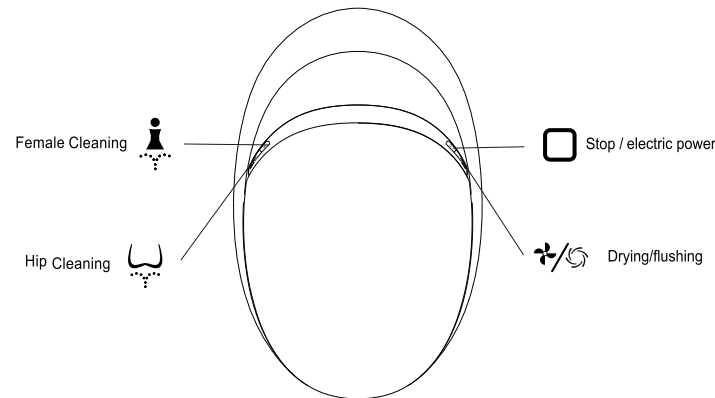

Power/Stop key: Short press to stop the function; Press and hold to turn the toilet on and off

Drying/flushing key: 1. When not seated, press briefly to flush the toilet. 2. When sitting down, if the toilet has been flushed for one time, press it briefly, turn it on for drying, continue to press it briefly, adjust the air temperature, and adjust it in a four-speed cycle. There is a prompt of "tick" in the first gear, two prompts of "tick" in the second gear, three prompts of "tick" in the third gear, and a long sound of "tick" in the normal temperature gear. 3. When sitting down, if the toilet has not been flushed, press briefly to flush the toilet first, then turn it on for drying, continue to press briefly to adjust the air temperature, adjust the four-speed cycle, give a prompt of "tick" in the first gear, give two prompts of "tick" in the second gear, give three prompts of "tick" in the third gear, and give a long sound of "tick" in the normal temperature gear. 4. Flushing without electricity: When there is no electricity, press and hold to turn on the flushing

Women washing key: 1. Remote control code checking function: When the toilet is powered on for self check, press and hold the washroom key, and when you hear a long beep or two beeps of the toilet, press any key of the remote control continuously, and hear a beep or two beeps of the toilet to complete the code checking of the remote control. 2. Tmall Fairy Online: When the toilet is equipped with Tmall Fairy, when you are not seated, press and hold the Women Wash key, and hear the Tmall Fairy prompt, enter the Tmall Fairy Online mode. 3. Seat ring temperature adjustment: When you are not seated, briefly press the wash button to adjust the seat ring temperature, and adjust the seat ring temperature in a four-speed cycle. There is a prompt of "tick" in the first gear, two prompts of "tick" in the second gear at 37 ° C, three prompts of "tick" in the third gear, and a long beep in the normal temperature gear. 4. Turn on the women's washing: when you are seated, briefly press the women's washing key to turn on the women's washing, and continue to press the women's washing key to turn on the mobile massage washing. 5. Turn on the elderly mode: when you are sitting, press and hold the women's washing key to turn on the elderly mode. At this time, the default is the one-button cleaning mode with the seat temperature and water temperature and water pressure drying being the third gear


Hip wash key: 1. Water temperature regulation: when you are not seated, press the hip wash key to adjust the water temperature, and adjust the water temperature in a four-speed cycle. The first speed "tick" will give a prompt, the second speed "tick" will give two prompts, the third speed 40 ° C "tick" will give three prompts, and the normal temperature speed "tick" will give a long sound. 2. Turn on the hip wash: when sitting, press the hip wash button briefly to turn on the hip wash, and continue to press the hip wash button briefly to turn on the mobile massage wash. 3. Turn on the child mode key: regardless of whether you are seated or not, press and hold the hip wash key to turn on the child mode wash. At this time, the default is seat temperature and water temperature is gear 1 The cleaning water pressure and drying are in the one-button cleaning mode of the first gear

Note: When children mode cleaning is on, only the power/stop button, drying/flushing button, nozzle forward and nozzle backward buttons are available, and other functions cannot be used

hide features

Use of hidden functions

1. Auto foam shield switch: press the power/stop button for 3 seconds, and then turn off the device. Press the water temperature/night light button on the remote control for 3 seconds. When you hear the toilet prompt "beep", turn off the auto foam shield; "Tick" twice to turn on the automatic foam shield After adjustment, press and hold the power/stop button to start the machine
2. Touch the seat moisture switch: long press the power/stop button, turn off the machine for 3 seconds, short press the remote control washing button, hear the toilet prompt "tick", and turn off the toilet moisture function; "Suodi" twice, turn on the function of the toilet to moisten the wall
3. Atmosphere light switch: long press the power/stop button, shut down the machine for 3 seconds, short press the bone wash button of the remote control, hear the toilet prompt "crow", and turn off the atmosphere light; "Didi" twice, turn on the atmosphere light
4. Foot sensor switch: long press the power/stop button, turn off the power for 3 seconds, short press the remote control seat temperature button, and hear the toilet prompt "tut" to turn off the foot sensor; "Tick" twice to open the foot feeling
5. Switching from big to small: long press the power/stop button, turn off the machine for 3 seconds, short press the remote control flush button, hear the "Hi" prompt from Mafu, and switch to "small"; "Tick" twice and switch to "Dash"
6. The function switch of automatic cover falling after 5 seconds of height: press the power/stop button, turn off the machine for 3 seconds, press the turn button of the remote control for a short time, hear the toilet prompt "tick", and the function is turned off; "Tick" twice, the function is turned on
7. Microwave induction distance adjustment: long press the power/stop key, turn off the machine for 3 seconds, short press the flip key of the remote control to enter the microwave induction distance adjustment, press the spray bar forward and the spray bar backward keys to adjust the distance gear, with a minimum of one "tick" prompt for gear 1 and a maximum of five "tick" prompts for gear 5
8. Adjustment of vinegar cover strength: long press the power/stop button, turn off the machine for 3 seconds, and short press the remote control spray bar forward button to adjust the flap strength. There are 15 gears from 00 to 14, each gear has a "tick" prompt, and the maximum force gear has a long sound prompt
9. Adjustment of loop turning force: long press the power/stop button, turn off the machine for 3 seconds, and short press the remote control spray bar backward key to adjust the loop turning force. There are 15 gears from 00 to 14, each gear has a "tick" prompt, and the maximum force gear has a long sound prompt
10. Time adjustment of foam shield: long press the power/stop button, shut down for 3 seconds, short press the water temperature button of the remote control to "spray" a long sound to prompt to enter the adjustment state, and then short press the water temperature button to adjust, with a prompt of "noise" at the lowest gear and four prompts of "beep" at the highest gear

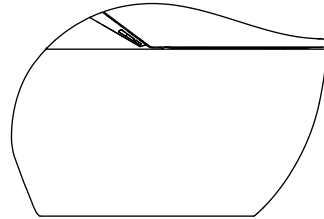

notice for use

Energy-saving function

The following measures can effectively save energy
After use, put down the seat ring.

Do not blindly set the water temperature to the high end
Adjustment to not affecting comfort level is preferred
Spring, summer, autumn and winter, please combine the temperature to adjust
Use the device with power saving function as far as possible.
Cut off the power when you go out for a long time
※When there is a possibility of freezing, please take anti-freezing measures

Slow down the seat and cover.

The smart toilet has a damping buffering device that prevents you from causing a crash when you close your seat.

Seat sensor

Because the installation has a sensor, so when there is no seat, even if the wrong operation presses the switch, the spray will not squirt water. Buttocks cleaning and women's cleaning are not open.


The sensor does not work if a sensor occurs below.

No seat is in the sensor sensor range.

※Please change your seat.

There is water coming out of the sprinkler

Before and after cleaning or the warm water switch is set to open, there is water around the nozzle, which is normal and not a breakdown.

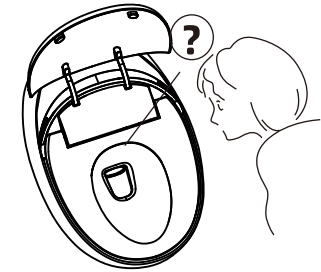

In addition to the above situation, if there is water flow, please close the inlet valve, pull the plug from the socket, and contact the buyer to solve it.

remote control

When the battery power is running out, the remote control indicator will be dimmed or undisplayed. The remote control cannot be sensed. Please replace the new battery in time.

Daily cleaning and maintenance

notice


When cleaning and maintenance, please do not remove the power switch to confirm that the power supply of the operation part of the body has been destroyed.

The clean maintenance method of smart toilet.

Please rub the soft cloth with water.

If you do not remove dirt in time, it will become difficult to clean. Please use water to clean it
In addition, the use of water to wipe can prevent the generation of static electricity, and enter the store to absorb dust, cause this product to become black, become dirty.


In addition, the body can also be removed from the toilet seat to facilitate the cleaning of the site between the toilet and the body.

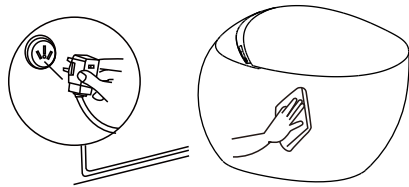


Clean maintenance of sprinkler head

There is dirt in the sprinkler head, please have a toothbrush and other small brush to clean.

Do not force stretch, bend nozzle

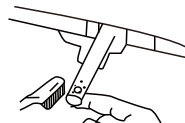

warning


-  Remove the dust attached to the power plug regularly. Remove the power plug when cleaning and wipe with a dry cleaning cloth.
 - ※ Poor insulation can lead to fire
- obey

Disassemble and clean


Disassembly method

Removal method of cap


1.Remove the power plug from the plug

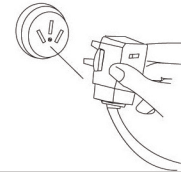


2. Close the inlet valve and stop the water supply

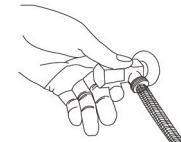

3. Close the inlet valve and stop the water supply

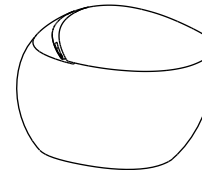

4.Place the cap on the floor mat

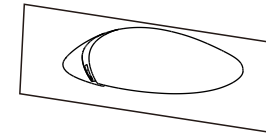





Don't put the upside down! Don't put it on the ground.



- 1.Be sure to pull the plug from the socket.
The heater dries, which can lead to smoke or fire.
- 2.Please do not connect the power cord or the water supply pipe.
It can cause damage or leakage.
- 3.Please be careful when removing the cover and cleaning it.
It can cause leakage and breakdown.
- 4.Do not put the upside down without pulling off the power supply,
and do not place it directly on the ground.
It can cause surface scratching or malfunction.

When the nozzle function weakens

After long use of the smart toilet, please clean the filter in the following order if the spray is stressed. (period depends on local water quality)

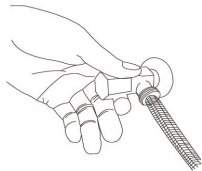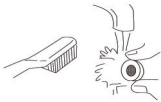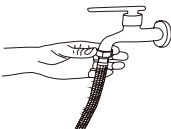The cleaning method of the filter	
<p>1. Close the inlet valve and stop the water</p> 	<p>3. Use a small brush and water to flush the dirt off the attached screen.</p> 
<p>2. Rotate to remove the filter Please place the basin below the corner valve, which will have a small amount of water coming out.</p> 	<p>4. Place the filter in the original direction and tighten the water supply hose to ensure firm.</p> <p>5. Open the Angle valve to the original position water supply.</p> 
<p>6. It's best to run it. (refer to page 10)</p>	

When removing the filter, be sure to close the inlet valve.
When installing the filter, please tighten the water supply hose, or cause leakage and water accumulation.

Replace the battery of the remote control


When the battery is running out, the remote control indicator lights up or out. In general, the remote control indicator is bright. The battery is mainly used to check the operating condition of the installation, so the service life can be very short. Replace the battery as follows.

notice
The positive and negative of the battery must be consistent with the logo on the remote control. New batteries and old batteries do not mix. Use alkaline batteries.

Replace the battery of the remote control

The rear cover of the remote control battery is opened and a new battery is replaced (two 1.5V7 alkaline batteries)

Battery cover

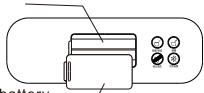




Alkaline battery


When not in use for a long time

Please be sure to drain the water

Don't use smart toilets for long periods of time. (water gets clogged after being polluted)

When the villa is not used for a long time. (in uninhabited homes, temperatures are falling faster than expected, prone to freezing and leaking)

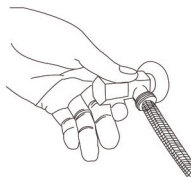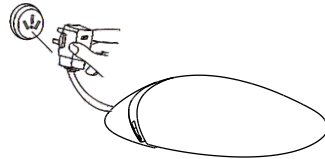Drain and cut off power	
<p>1. Close the inlet valve and stop the water</p> 	<p>3. Remove the power plug from the socket.</p> 
<p>2. Drain water from the water supply hose. Place the washbasin and other containers under the water inlet valve. Remove the water supply hose from the inlet valve and place the end of the water hose into the container</p> 	<p>4. Please make sure to run the test when you use it again.</p>

 **notice**

Remove the water hose, be sure to close the inlet valve. When installing water hose, please insert in place.


It is easy to cause water to leak and cause water to leak.

If it freezes, the water will not squirt out.




When the water supply hose or the water supply connection is frozen, the water will not squirt out. Cover the water supply hose or the water supply connection with a cloth soaked in hot water, to thaw it, or raise the temperature in the room to allow it to thaw naturally.

notice
Do not pour hot water or hot air into the water hose. Possible damage to the main supply pipe.

There is a danger of freezing in winter

In cold winter, smart can damage due to implement to freeze the water in the toilet, water. To prevent freezing, please do the following
Please remove the plug and plug in the power outlet.

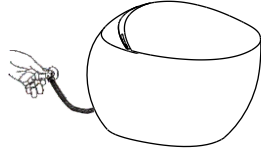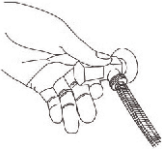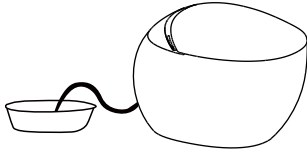

General measures to prevent freezing	
<p>The water temperature switch and the seat temperature switch switch to [high] and close the cover.</p>	<p>Drain water from the water supply hose. Place a wash basin and other containers under the drain valve Take the water supply hose from the inlet valve and put the end of the water hose into the container.</p> 
<p>Indoor heating If there is no heating in the room, please clean the water in the hose. Close the inlet valve and stop the water supply.</p> 	<p>When the water is drained, please insert the hose.</p>  <p>Please make sure to run the test when you use it again.</p>

! notice

Remove the water hose, be sure to close the inlet valve. When installing water hose, please insert in place.



⊗
It is easy to cause water to leak and cause water to leak.

When the water supply hose or the water supply connection is frozen, the water will not squirt out. Cover the water supply hose or the water supply connection with a cloth soaked in hot water, to thaw it, or raise the temperature in the room to allow it to thaw naturally.

notice

Do not pour hot water or hot air into the water hose. Possible damage to the main supply pipe.

breakdown predication

If there is a fault

Some failures can be ruled out by simple operation. Please confirm the following items before commissioning



breakdown	cause	elimination methods
the water doesn't squirt out	The power outlet is unplugged	Confirm whether there is a power outage
	The power switch is in the state of [switch]	Press the power switch to light the power lamp on the body display
	The power plug is not plugged into the socket	Plug in the power plug
	leakage	Please unplug the power plug and repair it
	The inlet valve is closed	Open feed valve
	Mesh blocking	clean strainer
	There is a tortuous obstruction to the inlet pipe	Straighten out the pipe
	Not falling into a limited range of sensors	Adjust the seating position
	Clear nozzle blockage	Clean the nozzle
	he water temperature is not set at the appropriate temperature	Cover the water supply hose or the water supply connection with a cloth soaked in hot water, to thaw it, or raise the temperature in the room to allow it to thaw naturally.
The spray is not gentle	The seat temperature is not set at the right temperature	Press the water temperature key to the appropriate temperature
The seat is not warm	Setting temperature is not set at suitable temperature	Press the key to adjust to the temperature
Deodorization does not work well	dust plug	Clean the deodorant box or remove the deodorant suction inlet

Through the above confirmation still cannot immediately when troubleshooting, please contact the merchants buy the product.

product standard

category		standard
nominal voltage		alternating current 220V±10% , 50HZ/60HZ
power		1350W
Cleansing function	water yield	Hip cleaning 700ml / min
		Women cleaning 700ml / min
	hot water temperature	normal temperature, 34°C、37°C、40°C (4 files)
	Warm water heating method	Instantaneous hot water heater
	heater power	1600W
	safety device	Inlet, water temperature sensor, temperature fuse, thermostat, leakage protector
Drying function	Warm wind temperature	48°C、55°C、62°C (3files)
	wind speed	>4m/s
	heater power	Average about 220W (Max. 350W)
	safety device	Bimetallic strip, temperature fuse wire
Seat heating	Temperature of the seat	normal temperature, 34°C、37°C、40°C (4files)
	heater power	about 40W
	safety device	Temperature sensor, temperature fuse wire
deodorization	type	Activated carbon funny catalyst filter
Mobile cleaning		Move 1.5m before and after sprinkler head
location of sprinkler head		Adjustable Fore and Aft
supply water temperature		3~40°C
Static water supply pressure		0. 15-0. 75mpa
Swater Flow		20L/min

warranty card	
Name	E-mail:
Address:	
Telephone	Mobile Phone:
Product Name	Type
Coding:	
Marketing Unit:	
Date of Purchase:	
<small>(signature invalid)</small>	
Warranty card (deputy)	
Name	E-mail:
Address:	
Telephone	Mobile Phone:
Product Name	Type
Coding:	
Marketing Unit:	
Date of Purchase:	
<small>(signature invalid)</small>	

Date of Purchase	
Name	E-mail:
Address:	
Telephone	Mobile Phone:
Product Name	Type
Coding:	
Marketing Unit:	
Date of Purchase:	
Installation Services satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
After-sales maintenance date Date After-sales service content	
After-Sales Service satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
After-sales maintenance date Date After-sales service content	
After-Sales Service satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
After-sales maintenance date Date After-sales service content	
After-Sales Service satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
<small>(signature invalid)</small>	

Warranty and terms of warranty

Dear customers, welcome your practical smart toilet. The product has been certified by CCC and iso9001-2008.

1、Principle of the warranty

failure operation in normal operation without private repair, which enjoy lifetime repair guarantee.

2、One of the following conditions is not guaranteed. But can carry out charge maintenance.

- a、The damage caused by human factors, the use of hot style abnormal wage environment, and the damage caused by the use of the manual, etc.;
- b、User's personal self-disassembly, self-repair, modification or repair by the company's warranty unit;
- c、Damage caused by force majeure (e.g. fire, flood, earthquake, lightning strike, etc.);
- d、No product warranty card.
- e、The warranty card is inconsistent with the product model, bar code or altered.

3、In the case of exceeding warranty period, we will collect the maintenance cost and certain service fee of the product parts if the after-sales service is needed.

二、Please fill in the warranty card after purchasing the product. No company warranty seal is invalid.

三、Please make sure to fill in the warranty card and send the warranty card back to our company within one month after purchase, to join our after-sales maintenance system so as to better enjoy the services provided by our company.