

Smart Toilet Instructions



Contents

Important Safety Guidelines	1
Safety Precautions	2
Precautions For Use	6

How To

Instructions For Using The Remote Control	8
Pre-use confirmation	14
Usage Method	16
Notice use	21

Clean Maintenance

Daily Clear Protection	22
Disassemble And Clean	23
When The Nozzle Function Is Weakened	24
Remote Control Battery Replacement	24
When Placed And Not In Use For A Long Time	25

There Is A Danger Of Freezing	26
Failure Judgment	27
Specification	28

Thank you for purchasing the smart toilet, please read this manual carefully and use it correctly.

Keepin a convenient place after reading the instructions.

Important safety guidelines

When using electronic products, especially children, you should follow the safety guidelines. It includes the following: please read all the guidelines before the product is installed.

Danger-in order to reduce the possibility of electric shock

1. Do not place the product or store it in a place where it may get wet.
2. Please do not bring the remote control into the bathtub, sink and other liquids
3. Do not spray water into the product or plug section.

Warning-for the possibility of scald, electric shock, fire and injury

1. Young children, paraplegic, are not sensitive to temperature. When using the product, you need to be accompanied by others and please adjust the temperature to the lowest level or close the toilet seat temperature.
2. The product is limited to the functions listed in this specification. Do not use ancillary equipment recommended by the company.
3. Please do not continue to use this product if the product line or plug is damaged, the product fails, the product is damaged or in the water. Deliver the product to a nearby designated maintenance center for inspection or maintenance.
4. Please make sure that the wire is not ironed.
5. Do not use this product in a sleepy or sleeping state.
6. Do not drop any items into or into water or water pipes.
7. Do not use this product outside of your words.





Please save this safety guide.

safety precautions



Be sure to comply

Please read carefully (safety precautions) and use them correctly. The notes listed here are important security-related matters, and be sure to comply.

The signs and meanings are shown below

 warning	Ignoring this sign may cause serious injuries or casualties
 attention	If no operation is caused by ignoring this sign, it may result in personal injury or property loss

Examples and illustrations of icons

 warning	It is not feasible, (forbidden); Left image (disassembling)
 attention	Represents the need for (mandatory) execution of the content; Left image representation (must be followed)

Warning



Ban on water

Doater or detergent on product or power plug.

Can cause fire or shock

May cause the toilet to rupture, damage or indoor water seepage

This product belongs to the electrical product, so please do not install in the place where the water is easy to be splashed or high humidity. When used in the bathroom, please install the ventilation equipment to keep the bathroom in good circulation.

- Can cause fire or shock


The outlet of the power supply wiring should be installed as follows.

- A fire or electric shock may be caused if the wiring is not followed.

The circuit of the socket should be protected with high sensitivity, quick type leakage switch (rated inductor below 15mA) or insulated transformer (1.5 KAV or above, 3 KAV).

b. The installation position of the socket must be above 0.3m above the ground, and as far as possible from the bathtub.

The grounding line of the product must be earthed. Please be sure to get the ground line.

- If it is not grounded, it may cause shock.
-  Note: ground handing here refers to the grounding resistance under 100Ω, panel and the ground wire of more than 1.6mm in diameter copper wire.

Please use it in the bathroom

Please make sure the power plug when used in the bathroom a silica gel has been used in waterproof processing

If it is not waterproof, it may cause fire or shock .

Warning



Guard against damp Use wet place

Do not install this product in damp places such as bathroom

Can cause fire or shock



Prohibited remove

It is absolutely not possible to disassemble repair and transform products

May cause fire or shock



Ban on wet hands

Do not plug the power plug with wet hand

May cause fire or shock



Ban

Please do not continue to use the product when it fails.

Pull out the plug when the following occurs
Close the inlet Angle valve and stop the water

The fault content...

Ontology is leaking

The product cracks and cracks

Abnormal sound, abnormal smell unit

burnt smoke comes out

Abnormal heating of product

The toilet is blocked

If continue to use the defective case, may cause fire disaster, electrical shock or indoor water seepage problems



Ban

Do not use loose power outlet

May cause fire or shock



Ban

Do not use long wire socket

Do not connect the wire or use extension cord in the middle of the road, it will cause the fever to cause fire and electric shock.



Ban

Do not use water other than tap water

There may be problems with skin inflammation



Ban

Do not use ac 110V power supply

May cause fire

Attention



Pay attention to the low temperature scald

Sit on the stool for a long time. Please adjust the temperature of the seat to the room temperature. When the following person USES the heat preservation seat and the warm air to dry, please adjust the seat temperature to the room temperature, the warm wind temperature adjust to the wind

Children and old people cannot adjust their temperature to the right degree. The patient, the disabled, etc. The ease of sleep medications (a sleeping pill, medicine, etc.), depth of sleepiness people drinking and fatigue.

warning



forbid fire

Do not allow cigarettes to be close to the product

Could cause a fire



Ban

Do not use finger or other items to put in or block the warm air outlet

Please do not block the warm air out of the vents.

Do not clog the warm air outlet.

It can cause burns, electric shocks, and burns

Please pay close attention when children and old people use it



Ban

Please do not force or impact, do not stand on the stool cover or body, do not place heavy objects

May cause product cracking, bulk drop, personnel injury

The toilet is broken, which can lead to indoor flooding.



Ban

For maintenance, please use the diluted kitchen detergent (neutral) and do not use the following products.

(toilet detergent, home use detergent, gasoline, banana water, detergent powder, nylon brush, etc.)

It can damage the plastic and make it crack and cause personal injury. It may damage the water pipe and cause a leak



Ban

In the condition of opening the inlet Angle valve,

the water inlet filter cannot be removed, and the water filter with water filter is released

Can cause a leak



Ban

Do not twist or damage the water inlet hose

It could cause a leak



Ban

Do not use the toilet to wash away anything other than large or urine

Otherwise, it may lead to a blockage and overflow of sewage



must obey

Pull the plug when not in use for a long time

For safety reasons, please plug the power

When used again, the corroded water can cause inflammation of the skin and soon. Please use after water



must obey

When a leak occurs, close the inlet Angle valve and stop the water



must obey

Freezing can result in water inlet configuration and internal damage of the body which can leak

Otherwise it can cause a leak.




must obey

Prevent damage from freezing

Freezing can result in water inlet configuration and internal damage of the body, which can leak

Please keep warm and soon, raise toilet temperature

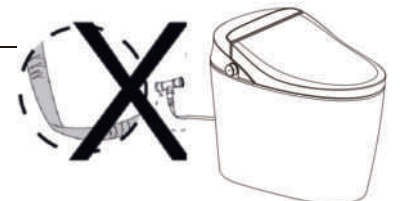



must obey

Plug in the power cord

Please confirm the plug in the power cord before use. The plug and socket should be closely glued to the non-loose or incomplete phenomenon, or it may cause an unexpected fire caused by heat. When not using this product for a long time, please unplug the power.



must obey

When the toilet seat is blocked, please pull out the power plug and remove the blockage from the pipe that is sold on the market

Do not pull out the power plug, will do automatic washing, can cause sewage overflow, indoor flooding.



must obey

Do not direct sunlight into the product


Easy to make products change color, aging or cracking



must obey



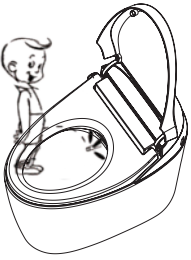

Do not direct sunlight into the product

Please use the attached hose

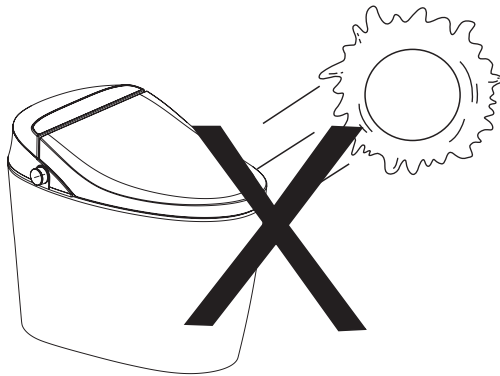


precautions for use

Please abide by the following matters 

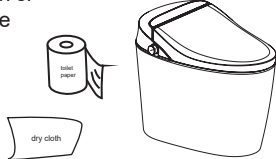
Cause of damage and damage	
<p>Do not use dry cloth or tissue paper to wipe the product body (non-ceramic part) and seat, cap</p> 	<p>Do not rinse directly with water</p> 
breakdown cause	
<p>Please do not pour pee on the body and nozzle</p> 	<p>Please pull out the power plug when it is thundering.</p> 
Bad action	
<p>The sensors, sensors and remote control are not allowed to send signals and receive signals Can cause the intelligent toilet to misoperate</p>	
Do not lean back on the cap	
May result in casing and damped damage.	

Please abide by the following matters. 


In case of freezing overnight, damage to prevent freezing.
Please take anti-freeze measures

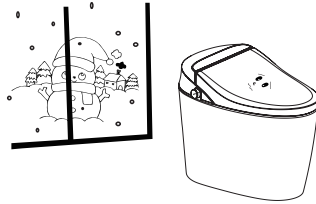


Please don't bring the heater or the heater to the body.
It will change color or malfunction.

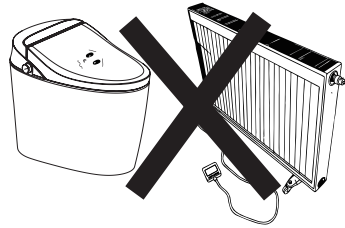

Please don't rudely open the seat or cover.
It can crack or fail

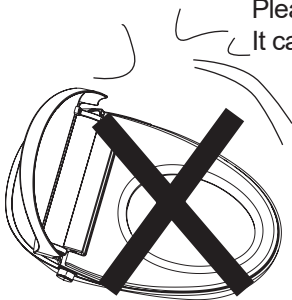


Instructions for remote controls

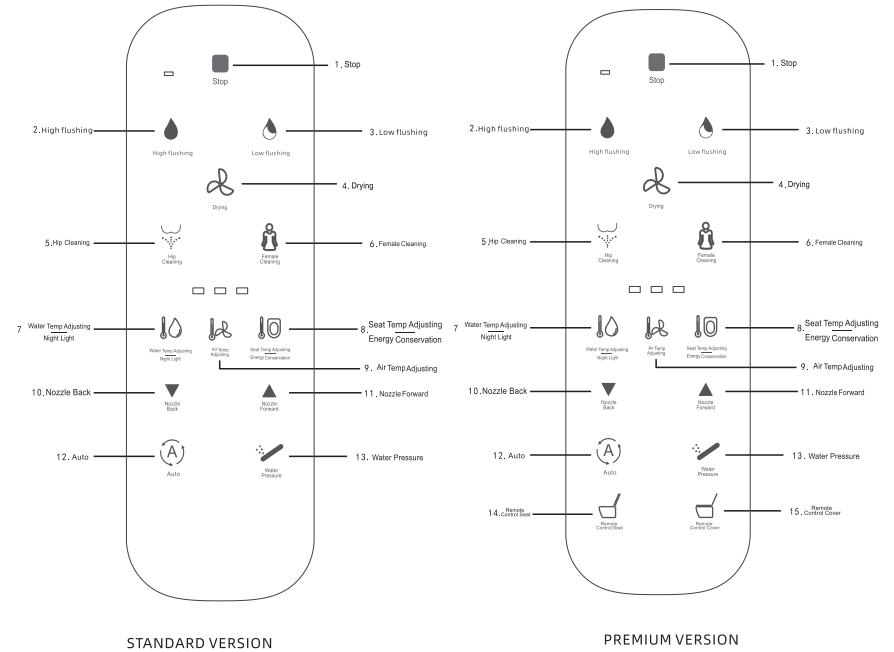

Functional operation instructions

- Stop:** Press once to stop the function, long press for 3 seconds to turn on or off the power supply of the entire machine.
- High flushing:** Press once to enter the high flushing force mode (suitable for users with low water pressure).
- Low flushing:** Press once to enter the small flushing force mode (suitable for users with high water pressure).
- Drying:** Turn on and off the warm air drying function while the human body is seated (drying time 180 seconds)
- Hip cleaning:** Press once to clean the buttocks, and then press again to move the cleaning (cleaning time 60 seconds).
- Female cleaning:** Press once for women's washing, and then press again for mobile cleaning (cleaning time 60 seconds).
- Water temp adjusting:** Adjust the water temperature one level at a time, with four levels divided. On the right side is the gear indicator light, which is adjusted in a cycle. Long press to turn on and off the night light.
- Seat temp adjusting:** Adjust the seat temperature one gear at a time, dividing the gear into four gears. The gear indicator light is on the right, and the gear cycle is adjusted. Long press and hold to enter the energy-saving state.
- Air temp adjusting:** Adjust the air temperature by one gear at a time, divided into four gears, with a gear indicator light on the right, and gear cycle adjustment.
- Adjustment of nozzle position:** Press the spray rod forward to move forward. Press the spray rod backward to move backward.
- Auto:** Enable the one click cleaning and drying functions.
- Water pressure:** Adjust the water pressure by one gear at a time, dividing the gear into three gears. The left side shows the gear indicator light, and the gear is cyclically adjusted.
- Remote control seat:** Press once to turn the seat circle on and off. Infrared foot feel can also turn the flip circle on and off.
- Remote control cover:** Press to open and close the seat cover, and the infrared foot feel can also open and close the flip.

Instructions for remote controls

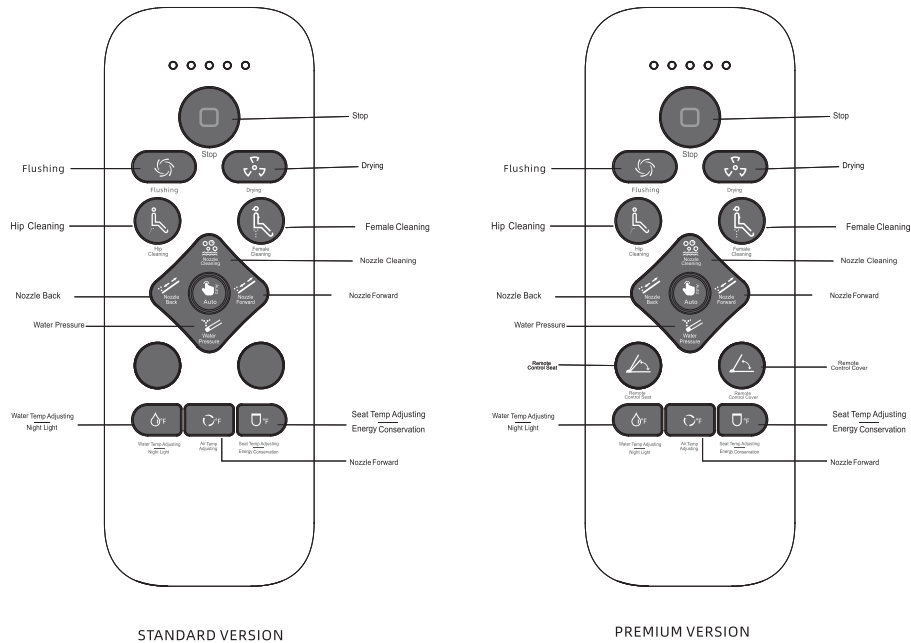

Functional operation instructions

Stop: Press once to stop the function, long press for 3 seconds to turn on or off the power supply of the entire machine.

Flushing: Press once to enter flushing mode.

Drying: Turn on and off the warm air drying function while the human body is seated (drying time 180 seconds).

Hip cleaning: Press once to clean the buttocks, and then press again to move the cleaning (cleaning time 60 seconds).

Female cleaning: Press once for women's washing, and then press again for mobile cleaning (cleaning time 60 seconds).

Water temp adjusting: Adjust the water temperature one level at a time, with four levels divided. On the right side is the gear indicator light, which is adjusted in a cycle. Long press to turn on and off the night light.

Seat temp adjusting: Adjust the seat temperature one gear at a time, dividing the gear into four gears. The gear indicator light is on the right, and the gear cycle is adjusted. Long press and hold to enter the energy-saving state.

Air temp adjusting: Adjust the air temperature by one gear at a time, divided into four gears, with a gear indicator light on the right, and gear cycle adjustment.

Adjustment of nozzle position: Press the spray rod forward to move forward. Press the spray rod backward to move backward.

Nozzle cleaning: Press once to automatically clean the nozzle


Auto: Enable the one click cleaning and drying functions.

Water pressure: Adjust the water pressure by one gear at a time, dividing the gear into three gears. The left side shows the gear indicator light, and the gear is cyclically adjusted.

Remote control seat: Press once to turn the seat circle on and off. Infrared foot feel can also turn the flip circle on and off.

Remote control cover: Press to open and close the seat cover, and the infrared foot feel can also open and close the flip.

Instructions for remote controls

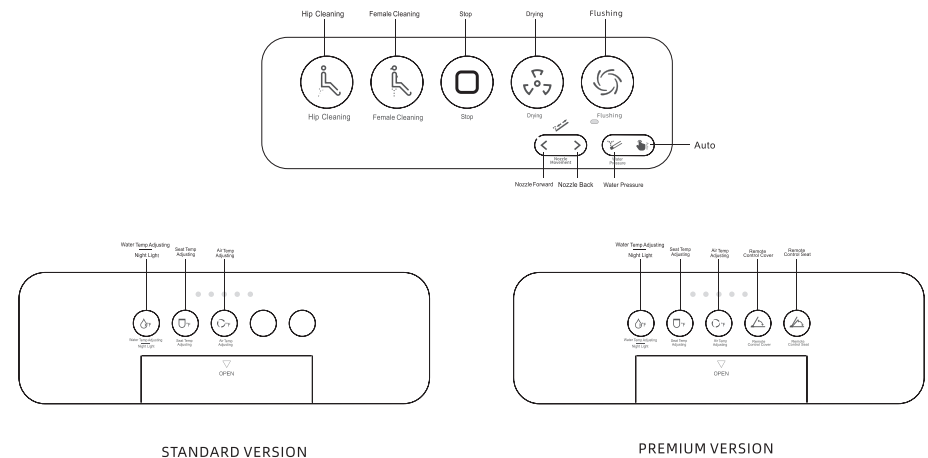

Functional operation instructions

Stop: Press once to stop the function, long press for 3 seconds to turn on or off the power supply of the entire machine.

Flushing: Press once to enter flushing mode.

Drying: Turn on and off the warm air drying function while the human body is seated (drying time 180 seconds).

Hip cleaning: Press once to clean the buttocks, and then press again to move the cleaning (cleaning time 60 seconds).

Female cleaning: Press once for women's washing, and then press again for mobile cleaning (cleaning time 60 seconds).

Water temp adjusting: Adjust the water temperature one level at a time, with four levels divided. On the right side is the gear indicator light, which is adjusted in a cycle. Long press to turn on and off the night light.

Seat temp adjusting: Adjust the seat temperature one gear at a time, dividing the gear into four gears. The gear indicator light is on the right, and the gear cycle is adjusted. Long press and hold to enter the energy-saving state.

Air temp adjusting: Adjust the air temperature by one gear at a time, divided into four gears, with a gear indicator light on the right, and gear cycle adjustment.

Adjustment of nozzle position: Press the spray rod forward to move forward. Press the spray rod backward to move backward.

Nozzle cleaning: Press once to automatically clean the nozzle

Auto: Enable the one click cleaning and drying functions.


Water pressure: Adjust the water pressure by one gear at a time, dividing the gear into three gears. The left side shows the gear indicator light, and the gear is cyclically adjusted.

Remote control seat: Press once to turn the seat circle on and off. Infrared foot feel can also turn the flip circle on and off.


Remote control cover: Press to open and close the seat cover, and the infrared foot feel can also open and close the flip.

Instructions for remote controls

STANDARD VERSION

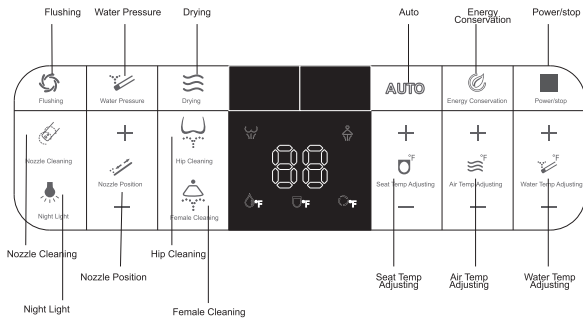

PREMIUM VERSION

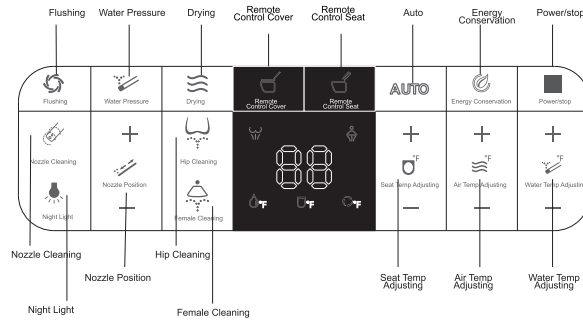

Functional operation instructions

Power/Stop: Press once to stop the function, long press for 3 seconds to turn on or off the power supply of the entire machine.

Flushing: Press once to enter flushing mode.

Drying: Turn on and off the warm air drying function while the human body is seated (drying time 180 seconds).

Hip cleaning: Press once to clean the buttocks, and then press again to move the cleaning (cleaning time 60 seconds).

Female cleaning: Press once for women's washing, and then press again for mobile cleaning (cleaning time 60 seconds).

Water temp adjusting: Press to adjust the water temperature in the first gear. The gear is divided into four gears, and the gear indicator light is on the right (normal temperature gear, first gear is about 93.2 ° F, second gear is 98.6 ° F, and third gear is 104 ° F)

Seat temp adjusting: Press once to adjust the first gear seat temperature. The gear is divided into four gears, and the gear indicator light is on the right (at room temperature, the first gear is about 93.2 ° F, the second gear is 98.6 ° F, and the third gear is 104 ° F)

Air temp adjusting: Adjust the first level air temperature at once, with four levels. The right side is the gear indicator light (normal temperature level, first level approximately 118.4 ° F, second level 131 ° F, and third level 143.6 ° F)

Nozzle position: Press once to adjust the cleaning position of the spray nozzle. Press "+" to move the spray rod forward and "-" to move the spray rod backward.

Nozzle cleaning: Press once to automatically clean the nozzle.

Night light: Press to turn on the night light.

Auto: One click automatic cleaning, drying, and flushing.

Energy conversation: Press Energy saving to start.


Water pressure: Press to adjust the water pressure, which is divided into four levels.

Remote control seat: Press once to turn the seat circle on and off. Infrared foot feel can also turn the flip circle on and off.


Remote control cover: Press to open and close the seat cover, and the infrared foot feel can also open and close the flip.

Instructions for remote controls

STANDARD VERSION

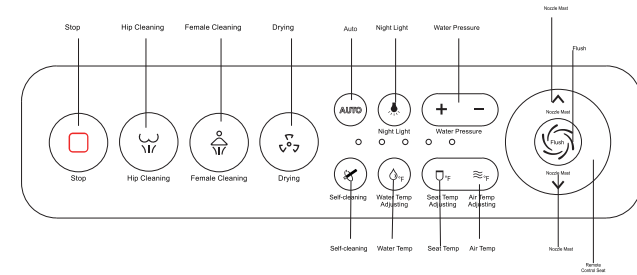

PREMIUM VERSION

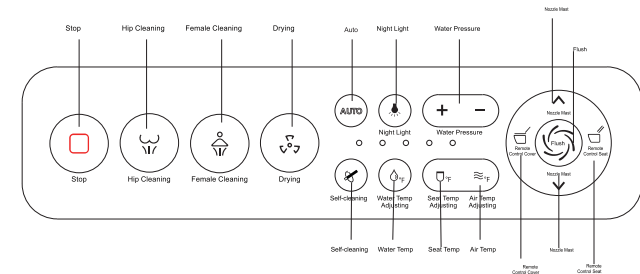

Functional operation instructions

Stop : Press once to stop the function, long press for 3 seconds to turn on or off the power supply of the entire machine.

Flushing: Press once to enter flushing mode.

Drying: Turn on and off the warm air drying function while the human body is seated (drying time 180 seconds).

Hip cleaning: Press once to clean the buttocks, and then press again to move the cleaning (cleaning time 60 seconds).

Female cleaning: Press once for women's washing, and then press again for mobile cleaning (cleaning time 60 seconds).

Water temp adjusting: Press to adjust the water temperature in the first gear. The gear is divided into four gears, and the gear indicator light is on the right (normal temperature gear, first gear is about 93.2 ° F, second gear is 98.6 ° F, and third gear is 104 ° F)

Seat temp adjusting: Press once to adjust the first gear seat temperature. The gear is divided into four gears, and the gear indicator light is on the right (at room temperature, the first gear is about 93.2 ° F, the second gear is 98.6 ° F, and the third gear is 104 ° F). Long press and hold to enter the energy-saving state.

Air temp adjusting: Adjust the first level air temperature at once, with four levels. The right side is the gear indicator light (normal temperature level, first level approximately 118.4 ° F, second level 131 ° F, and third level 143.6 ° F)

Nozzle position: Press once to adjust the cleaning position of the spray nozzle.

Self-cleaning: Press once to automatically clean the nozzle.

Night light: Press to turn on the night light.


Auto: One click automatic cleaning, drying, and flushing.

Water pressure: Press to adjust the water pressure, which is divided into four levels . Press "+" to increase water pressure and "-" to decrease water pressure

Remote control seat: Press once to turn the seat circle on and off. Infrared foot feel can also turn the flip circle on and off.

Remote control cover: Press to open and close the seat cover, and the infrared foot feel can also open and close the flip.

Instructions for remote controls

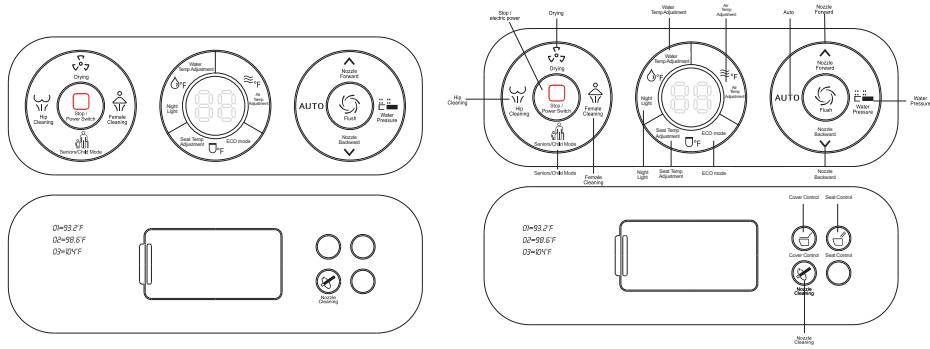

STANDARD VERSION

PREMIUM VERSION

- Power/Stop key:** short press to stop the function; Press and hold to turn the toilet on and off.
- Female cleaning key:** When sitting, short press the Female Cleaning key, open the woman washing, continue to shortpress the Female Cleaning key, open the mobile massage cleaning.
- Hip cleaning key:** While sitting, short press the Hip Cleaning key, open the buttock wash, continue to short press the Hip cleaning key, open the mobile massage wash.
- Drying key:** When sitting, if the toilet has flushed once, press short to open the drying, if the toilet has not flushed, press short to flush the toilet first, and then open the drying.
- Seniors/Child Mode:** When sitting, press to open Elderly mode. At this time, the default is the seat temperature and water temperature of the 3rd gear about 104°F, and the one-click cleaning mode of cleaning water pressure and drying the 3rd gear. Whether or not the seat is occupied, long press to turn on the child mode cleaning. The default cleaning mode is the seat temperature and water temperature of 01 gear 93.2°F, and the cleaning water pressure and drying are in 01 gear.
Note: When the child mode cleaning is turned on, only the power/stop key, dry key, nozzle forward and nozzle backward keys are available, and other functions cannot be used.
- Water Temp Adjustment/night light key:** short press, adjust the water temperature, normal temperature /01 /02 /03 cycle adjustment, 01 speed 93.2° F "Di" warning, 02 speed 98.6° F "Di" two warning, 03 speed 104° F "Di" three warning, normal temperature "Di" long warning. Press and hold to turn the night light on and off.
- Air Temp Adjustment key:** short press, adjust the wind temperature, normal temperature file /01 file /02 file /03 file cycle adjustment, 01 file "Di" one prompt, 02 file "Di" two prompt, 03 file "Di" three prompt, normal temperature file "Di" one long sound.
- Seat Temp Adjustment/ECO mode key:** short press, adjust the seat ring temperature, normal temperature /01/02/03 gear cycle adjustment, 01 gear 93.2°F "Di" warning, 2 gear 98.6 °F "Di" warning, 3 gear 104°F "Di" warning, normal temperature gear "Di" warning. Press and hold to enable the energy saving mode.
- AUTO:** Short press to open the one-key cleaning mode (spray rod fixed cleaning for 30s, mobile massage for 30s, automatic flush after completion, and then open for drying for 3min)
- Water pressure key:** short press, adjust water pressure, 00 /01 /02 /03 cycle adjustment, 00 file "Di" one prompt, 01 file "Di" two prompt, 02 file "Di" three prompt, 03 file "Di" four prompt.
- Flush key:** Press to open flush.
- Nozzle forward key:** short press to adjust the spray rod forward
- Nozzle Backward key:** short press to adjust the spray lever back.
- Nozzle cleaning key:** When there is no seat, press it to open the nozzle cleaning function, clean the nozzle, and stop automatically in 5 minutes. Press and hold to open the foam shield (Toilet must have foam shield function).

Pre-use confirmation

When using a smart toilet for the first time please do not confirm the project

Power supply plug put in the socket

1. Insert the power plug into the AC 110V socket

~110V socket

Power plug (with ground wire)

Warning

Confirm whether the inlet valve is open

angle valve

water supply hose

water supply hose


Fill the inlet Angle valve into the inlet hose

Be sure to connect the ground firmly. The power plug of this product is three-phase plug (with ground wire). When a breakdown or leakage occurs, there is a danger of electric shock. Consult the electrical installation company when there is no ground plug in the socket.

Pre-use confirmation


Identify various functions

1. The nozzle and its water pipe are leaky, dry water pipe each part hind, use water absorbent paper to inspect.
2. Press the seat to see if the buzzer has a "drop".
3. Check for cleaning, drying, automatic deodorization and automatic flushing.
4. Whether the damping buffer is normal.

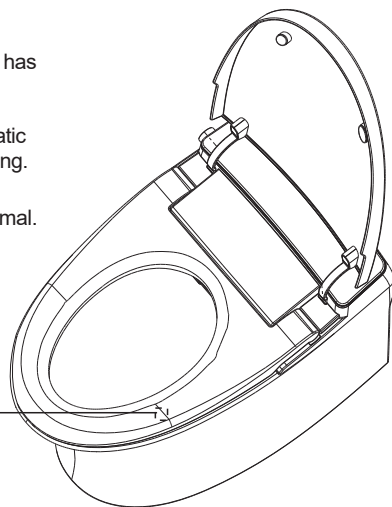

Seat induction position

 Check the cleaning, drying and deodorizing function of the seat sensor. When cleaning cover the front end of the nozzle and block the spray nozzle to avoid splashing.




warning

Please use the power supply between 90V - 125V

Fire hazard



Rotation operation button is used

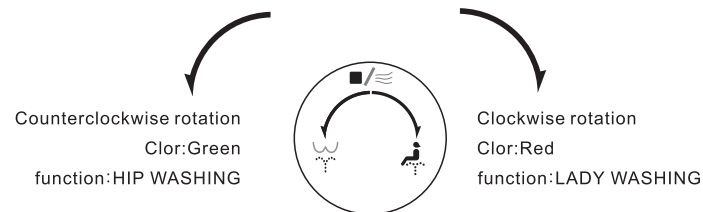

Front:power button:turn on/off the machine
 Drying key:long press the drying key to adjust the color of the seven color lamps
 Flush: Automatic washing ceramics/power off washing ceramics
 After the seat:the power button(or stop key)stops the function being performe
 Hip/female cleaning, drying key: open the corresponding function

knob

Drying/Stop/Flushing keys:


1. When there is no electricity, press and hold to turn on the no electricity flushing.
2. When not seated, briefly press to activate the flushing function.
3. When sitting, when activating the function, the first short press will stop the function, the second short press will flush and turn on the drying function (if the water has already been flushed once, directly turn on the drying function)
4. Long turn on/off

Bone washing key:

1. **Self-cleaning of the spray nozzle:** When there is no seat, rotate it counterclockwise for a short time to supervise the cleaning, turn on the self-cleaning function of the spray nozzle, clean the spray nozzle, and automatically stop within 5 minutes. Continue to rotate it short until the buttocks are washed or press the stop button to close.
2. **Open Hip Wash:** When sitting, short rotate to hip wash, open hip wash, continue short rotate to hip wash, open mobile massage wash.

Women's washing key:

1. **Remote control code checking function.** When the toilet is turned on for white check, rotate it clockwise until you hear a long beep or two beeps from the toilet, Press any key on the remote control continuously and you hear a beep or two beeps from the toilet to complete the code checking of the remote control.
2. **Tmall Genie Internet connection:** When the toilet is equipped with Tmall Genie, and there is no seat, rotate it to the women's washing room for a long time, hear the Tmall Genie prompt, and enter the Tmall Genie Internet connection mode.
3. **Turn on the Women's Wash:** When sitting, briefly rotate to the Women's Wash, turn on the Women's Wash, continue to briefly rotate to the Women's Wash, and turn on the Mobile Massage Clear.

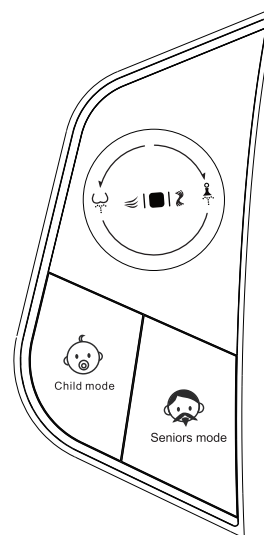

Seniors mode: When sitting, short press the Seniors mode key to activate the elderly mode, and complete the cleaning, flushing, and drying function with one click. At this time, the default temperature is the seat temperature, water temperature, and wind temperature in the third gear, which is about 104°F.

Child mode: Regardless of whether you are seated or not, short press the children's mode key to enter children's convenience mode. At this time, the white moving cover of the toilet (white moving version) and infrared foot feeling function are blocked for 20 minutes (the shielding is automatically removed after using any of its cleaning modes once). Long press the children's mode key to open the children's mode cleaning, and complete the cleaning, flushing, and drying function with one click (at this time, the default temperature is seat temperature, water temperature, and phoenix temperature, which are about 93.2°F in the first gear)

Note: When children's mode cleaning is enabled, only the switch stop button, dry/flush button, nozzle forward and nozzle backward buttons are available, and other functions cannot be used.

operation button is used

Power/stop button:

Short press to stop the function; Long press, toilet on/off

Drying/flushing button:


1. When not seated, briefly press to flush the toilet.
2. When sitting, if the toilet has been flushed with water once, briefly press, turn on the dryer, continue to briefly press, adjust the air temperature, and adjust the gear cycle. The first gear "Di" will sound once, the second gear "Di" will sound twice, the third gear "Di" will sound three times, and the room temperature gear "Di" will sound long.
3. When sitting, if the toilet has not been flushed, short press to flush the toilet first, then turn it on for drying, continue to short press to adjust the air temperature, adjust the four speed cycle, and give a prompt of "Di" in the first speed. Second gear "Di" prompts twice, and third gear "Di" prompts three times. At room temperature, there is a long sound of Di.

No electricity flushing:

When there is no electricity, press and hold to turn on flushing.

Women's washing button:

1. Remote control code checking function: When the toilet is powered on and self checked, long press the women's washing button. When you hear a long beep or two beeps of "Di" from the toilet, continuously press any key on there mote control and hear one or two beeps of "Di" from the toilet to complete code checking.
2. Tmall Genie Internet connection: When the toilet is equipped with Tmall Genie, and there is no seat, long press the women's wash button, hear the prompt of Tmall Genie, and enter the Tmall Genie Internet connection mode.
3. Seat temperature adjustment: When not seated, briefly press the "Women's Wash" button to adjust the seat temperature. Cycle the adjustment at room temperature/1st gear/2nd gear/3rd gear, with one prompt for 93.2°F "Di" in the first gear, two prompts for 98.6°F "Di" in the second gear, three prompts for 104°F "Di" in the third gear, and a long sound for "Di" in the normal temperature gear.
4. Turn on the Women's Wash: When sitting, briefly press the Women's Wash button to turn on the Women's Wash, continue to briefly press the Women's Wash button to turn on the Mobile Massage Wash.

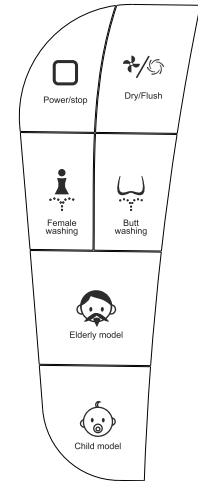

Hip washing:

1. Self cleaning of the nozzle: When not seated, long press the buttock. function of turn on the self-cleaning the nozzle, clean the nozzle, and automatically stop after 5 minutes. Continue to long press the buttocks to wash or stop turning off.
2. Water temperature adjustment: When not seated, briefly press the buttocks to adjust the water temperature, and adjust it in a foul speed cycle. The first speed is 93.2°F "Di" with one prompt, the second speed is 98.6°F "Di" with two prompts, the third speed is 104°F "Di" with three prompts, and the room temperature speed is "Di" with one long sound.
3. Open Hip Wash: When sitting, short press the hip wash, open the hip wash, continue to short press the hip wash, open the mobile massage wash.

Elderly mode:

1. Night light switch: When not seated, long press the elderly mode to turn on and off the night light.
2. Elderly mode cleaning: When sitting, short press Elderly mode to activate Elderly mode, and complete the cleaning, flushing, and drying function with one click (at this time, the default is seat temperature, water temperature, and phoenix temperature of 104°F in the third gear)


Children's mode:

Regardless of whether you are sitting or not, short press the children's mode to enter the children's cleaning mode. At this time, the automatic cover of the toilet (automatic version) and infrared foot feeling function will be blocked for 20 minutes (after using any of the cleaning modes once, the screen will be automatically released). Long press the children's mode to open the children's mode for cleaning, and one click to complete the cleaning, flushing, and drying function (at this time, the default is the seat temperature and water temperature, and the wind temperature is about 93.2°F in the first gear)

Note:

When children's mode cleaning is turned on, only the switch stops. drying/flushing, nozzle forward and nozzle backward are available. and other functions cannot be used.

operation button is used

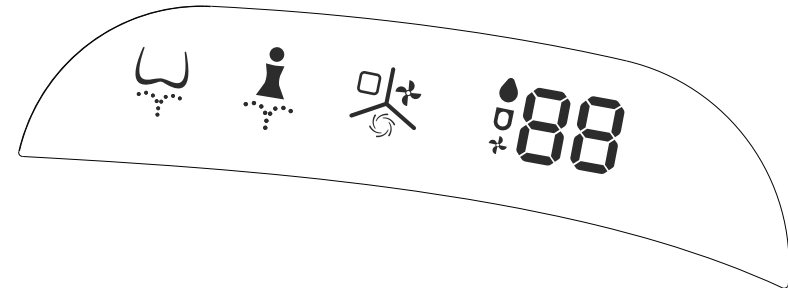

Drying/stopping/flushing:

1. When not seated, short touch to activate the flushing function.
2. When sitting, when the function is turned on, for the first short touch, stop the function, for the second short touch, flush and turn on the drying (if the water has already been flushed once, directly turn on the drying).
3. Long touch switch

Women's washing:

1. Remote control code checking function: When the toilet is powered on and self checked, long touch the toilet to wash. When you hear a long beep or two beeps from the toilet, press any key on the remote control continuously. When you hear a beep or two beeps from the toilet, complete the remote control code checking.
2. Tmall Genie Internet connection: When the toilet is equipped with Tmall Genie, when the toilet is not seated, touch the woman for a long time to wash, hear the Tmall Genie prompt, and enter the Tmall Genie Internet connection mode.
3. Seat temperature regulation: When not seated, briefly touch the washer to adjust the seat temperature. Cycle the adjustment at room temperature/1st gear/2nd gear/3rd gear, with a prompt of 93.2°F "Di" for the first gear, two prompts of 98.6°F "Di" for the second gear, three prompts of 104°F "Di" for the third gear, and a long sound of "Di" for the wet gear.
4. Open Women's Wash: When sitting, short touch women's wash, open women's wash, continue short touch women's wash open mobile massage wash.

Arm wash :

1. Self cleaning of our head: When not seated, touch the buttocks for a long time to wash, turn on the self-cleaning function of the nozzle, clean the nozzle, and automatically stop after 5 minutes. Continue to touch the buttocks for a long time to wash or stop turning it off.
2. Water temperature regulation: When not seated, briefly touch the buttocks to select and adjust the water temperature. Cycle regulation at room temperature/1st gear/2nd gear/3rd gear, with a prompt of 93.2°F "Di" for the first gear, two prompts of 98.6°F "Di" for the second gear, three prompts of 104°F "Di" for the third gear, and a long beep for the normal temperature gear.
3. Open Hip Wash: When sitting, short touch Hip Wash, open Hip Wash, continue short touch Hip Wash, open Mobile Massage Wash.

Power outage flushing:

Power outage flushing refers to touching the mechanical button under the armrest. When there is no power, press and hold for 3 seconds to turn on the power outage flushing function.

operation button is used



When the human body is seated

- 1. Hip cleaning:** Press to activate the hip cleaning function; Press the hip cleaning button again to activate the hip movement cleaning.
- 2. Female cleaning:** Press to activate the female cleaning function; Press female cleaning again to activate female mobile cleaning.
- 3. Drying:** Press to activate the drying function; Then connect to the drying and switch to the air temperature range. The prompt sound 1 indicates the first air temperature, 2 indicates the second air temperature, and 3 indicates the third air temperature. The prompt sound will continue to sound, indicating that the room temperature range is not heated.
- 4. Stop:** Stop the function in use.

When not seated

Press the buttocks to clean and switch to the water temperature range. The prompt sound 1 indicates the first water temperature, 2 indicates the second water temperature, and 3 indicates the third water temperature. The prompt sound keeps ringing, indicating that the room temperature range is not heated.

Press the female cleaning button to switch to the seat temperature range, and the prompt tone will sound 1 to indicate the first seat temperature, 2 to indicate the second seat temperature, and 3 to indicate the third seat temperature. The prompt tone will sound continuously, indicating that the room temperature range is not heated.

Press and hold the drying button for 3 seconds, and a prompt sound will sound once to turn off the wall moistening function: Two prompt sounds to activate the wall moistening function. Long press and hold the flushing button for 3 seconds to switch between large and small flushing functions.

Long press the power supply to stop switching on/off the machine.

Long press the hip cleaning button for 3 seconds to activate the mobile cleaning function.

In a complete power outage state, press and hold the flush button to activate the power outage flush function.

Digital display panel indicates instructions



Power supply:

The white light is on and in a powered on state

Water temperature:

There are four levels of water temperature, and there is a gear indicator light on the remote control

Seat temperature:

There are 4 levels of seat temperature, and there is a gear indicator light on the remote control

Wind temperature:

There are 4 levels of wind temperature, and there is a gear indicator light on the remote control

Sitting:

The white light is on to indicate sitting status

notice for use

Energy-saving function

The following measures can effectively save energy
After use, put down the seat ring.

Do not blindly set the water temperature to the high end
Adjustment to not affecting comfort level is preferred
Spring, summer, autumn and winter, please combine the temperature to adjust
Use the device with power saving functions as far as possible.
Cut off the power when you go out for a long time

※ When there is a possibility of freezing, please take anti-freezing measures

Slow down the seat and cover.


The smart toilet has a damping buffering device that prevents you from causing a crash when you close your seat.

Seat sensor

Because the installation has a sensor, so when there is no seat, even if the wrong operation presses the switch, the spray will not squirt water. Buttocks cleaning and women's cleaning are not open.
The sensor does not work if a sensor occurs below.
No seat is in the sensor range.
※ Please change your seat.

There is water coming out of the sprinkler

Before and after cleaning or the warm water switch is set to open, there is water around the nozzle which is normal and not a breakdown.

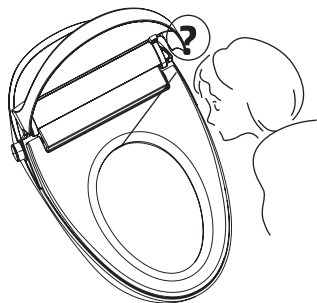

In addition to the above situation, if there is water flow, please close the inlet valve, pull the plug from the socket, and contact the buyer to solve it.

remote control

When the battery power is running out, the remote control indicator will be dimmed or undisplayed. The remote control cannot be sensed. Please replace the new battery in time.

Daily cleaning and maintenance

⚠ notice


When cleaning and maintenance, please do not remove the power switch to confirm that the power supply of the operation part of the body has been destroyed.

The clean maintenance method of smart toilet.

Please rub the soft cloth with water.

If you do not remove dirt in time, it will become difficult to clean. Please use water to clean it. In addition, the use of water to wipe can prevent the generation of static electricity, and enter the store to absorb dust, cause this product to become black, become dirty.


In addition, the body can also be removed from the toilet seat to facilitate the cleaning of the site between the toilet and the body.

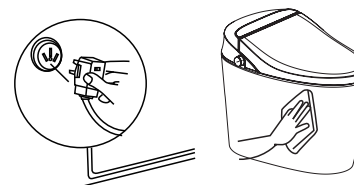

Clean maintenance of sprinkler head

There is dirt in the sprinkler head, please have a toothbrush and other small brush to clean.

Do not force stretch, bend nozzle

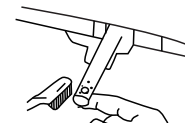

⚠ warning



Remove the dust attached to the power plug regularly. Remove the power plug when cleaning and wipe with a dry cleaning cloth.





obey

※ Poor insulation can lead to fire

Disassemble and clean

Disassembly method

Removal method of cap
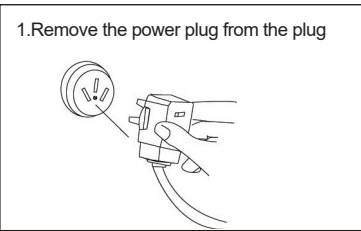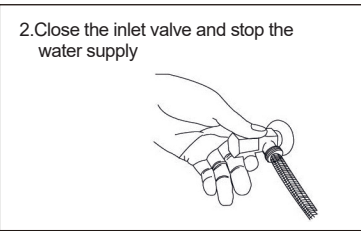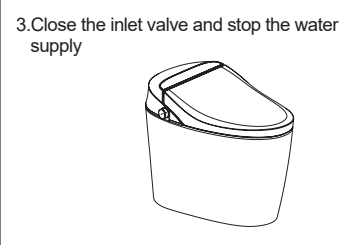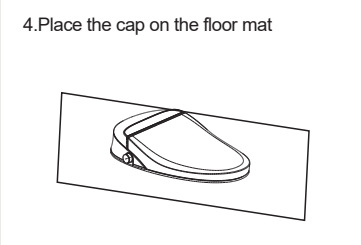
<p>1.Remove the power plug from the plug</p> 	<p>2.Close the inlet valve and stop the water supply</p> 
<p>3.Close the inlet valve and stop the water supply</p> 	<p>4.Place the cap on the floor mat</p> 

Don't put the upside down! Don't put it on the ground.







- 1.Be sure to pull the plug from the socket.
The heater dries, which can lead to smoke or fire.
- 2.Please do not connect the power cord or the water supply pipe.
It can cause damage or leakage.
- 3.Please be careful when removing the cover and cleaning it.
It can cause leakage and breakdown.
- 4.Do not put the upside down without pulling off the power supply,and do not place it directly on the ground.
It can cause surface scratching or malfunction.

When the nozzle function weakens

After long use of the smart toilet, please clean the filter in the following order if the spray is stressed.(period depends on local water quality)

The cleaning method of the filter
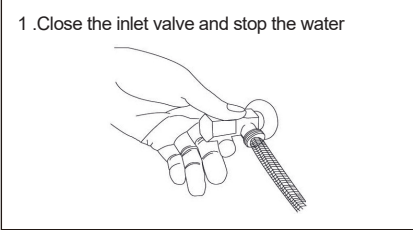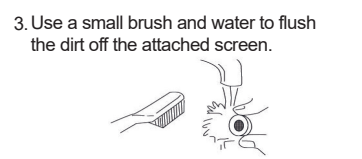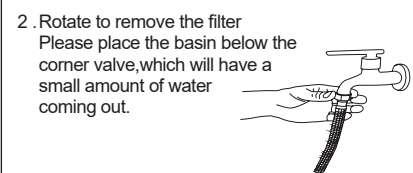
<p>1 .Close the inlet valve and stop the water</p> 	<p>3. Use a small brush and water to flush the dirt off the attached screen.</p> 
<p>2 . Rotate to remove the filter Please place the basin below the corner valve,which will have a small amount of water coming out.</p> 	<p>4. Place the filter in the original direction and tighten the water supply hose to ensure firm.</p>
<p>5. Open the Angle valve to the original position water supply.</p> 	<p>6.It's best to run it.(refer to page 13)</p>

When removing the filter, be sure to close the inlet valve.
When installing the filter, please tighten the water supply hose, or cause leakage and water accumulation.

 
Replace the battery of the remote contro

When the battery is running out,the remote control indicator lights up or out. In general, the remote control indicator is bright. The battery is mainly used to check the operating condition of the installation,so the service life can be very short.Replace the battery as follows.

notice
The positive and negative of the battery must be consistent with the logo on the remote control.New batteries and old batteries do not mix.Use alkaline batteries.

Replace the battery of the remote contro

The rear cover of the remote control battery is opened and a new battery is replaced(two 1.5V7 alkaline batteries)




When not in use for long time

Please be sure to drain the water


Don't use smart toilets for long periods of time. (water gets clogged after being polluted)
When the villa is not used for a long time. (in uninhabited homes, temperatures are falling faster than expected, prone to freezing and leaking)

Drain and cut off power

1. Close the inlet valve and stop the water

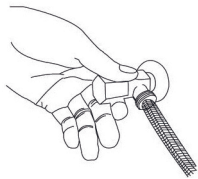


3. Remove the power plug from the socket.

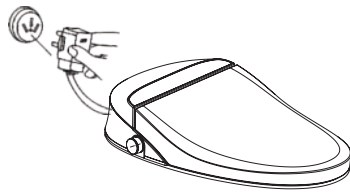

2. Drain water from the water supply hose.
Place the washbasin and other containers under the water inlet valve.

Remove the water supply hose from the inlet valve and place the end of the water hose into the container

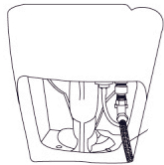

4. Please make sure to run the test when you use it again.

notice

Remove the water hose, be sure to close the inlet valve. When installing water hose, please insert in place.

※ It is easy to cause water to leak and cause water to leak.



If it freezes, the water will not squirt out.

When the water supply hose or the water supply connection is frozen, the water will not squirt out. Cover the water supply hose or the water supply connection with a cloth soaked in hot water, to thaw it, or raise the temperature in the room to allow it to thaw naturally.

notice

Do not pour hot water or hot air into the water hose. Possible damage to the main supply pipe.

There is a danger of freezing in winter

In cold winter, smart can damage due to implement to freeze the water in the toilet water. To prevent freezing, please do the following.


Please remove the plug and plug in the power outlet.



General measures to prevent freezing

The water temperature switch and the seat temperature switch switch to [high] and close the cover.


Drain water from the water supply hose. Place a wash basin and other containers under the drain valve. Take the water supply hose from the inlet valve and put the end of the water hose into the container.

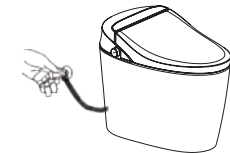

Indoor heating

If there is no heating in the room please clean the water in the hose. Close the inlet valve and stop the water supply.

When the water is drained, please insert the hose.

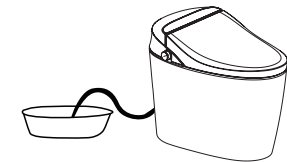

Please make sure to run the test when you use it again.

notice

Remove the water hose, be sure to close the inlet valve. When installing water hose, please insert in place.

※ It is easy to cause water to leak and cause water to leak.



When the water supply hose or the water supply connection is frozen, the water will not squirt out. Cover the water supply hose or the water supply connection with a cloth soaked in hot water, to thaw it, or raise the temperature in the room to allow it to thaw naturally.

notice

Do not pour hot water or hot air into the water hose. Possible damage to the main supply pipe.

breakdown predication

If there is a fault

Some failures can be ruled out by simple operation. Please confirm the following items before commissioning



breakdown	elimination methods	
the water doesn't squirt out	The power outlet is unplugged	Confirm whether there is a power outage
	The power switch is in the state of [switch]	Press the power switch to light the power lamp on the body display
	The power plug is not plugged into the socket	Plug in the power plug
	leakage	Please unplug the power plug and repair it
	The inlet valve is closed	Open feed valve
	Mesh blocking	clean strainer
	There is a tortuous obstruction to the inlet pipe	Straighten out the pipe
	Not falling into a limited range of sensors	Adjust the seating position
	Clear nozzle blockage	Clean the nozzle
	he water temperature is not set at the appropriate temperature	Cover the water supply hose or the water supply connection with a cloth soaked in hot water, to thaw it, or raise the temperature in the room to allow it to thaw naturally.
The spray is not gentle	The seat temperature is not set at the right temperature	Press the water temperature key to the appropriate temperature
The seats is not warm	Setting temperature is not set at suitable temperature	Press the key to adjust to the temperature
Deodorization does not work well	dust plug	Clean the deodorant box or remove the deodorant suction inlet

Through the above confirmation still cannot immediately when troubleshooting, please contact the merchants buy the product.

product standard

category		standard	
nominal voltage		alternating current 110V+10%, 50HZ/60HZ	
power		1350W	
Cleansing function	water yield	Hip cleaning	700ml/min
		Women cleaning	700ml/min
	hot water temperature	normal temperature、93.2°F、98.6°F、104°F (4 files)	
	Warm water heating method	Instantaneous hot water heater	
	heater power	1600W	
safety device		Inlet, water temperature sensor, temperature fuse, thermostat, leakage protector	
Drying function	Warm wind temperature	118.4°F、131°F、143.6°F (3files)	
	wind speed	>4m/s	
	heater power	Average about 220W(Max.350W)	
	safety device	Bimetallic strip,temperature fuse wire	
Seat heating	Temperature of the seat	normal temperature、93.2°F、98.6°F、104°F (4 files)	
	heater power	about 40W	
	safety device	Temperature sensor, temperature fuse wire	
deodorization	type	Activated carbon funny catalyst filter	
Mobile cleaning		Move 1.5m before and after sprinkler head	
location ofsprinkler head		Adjustable Fore and Aft	
supply water temperature		37.4~104°F	
Static water supply pressure		0.15-0.75mpa	
Swater Flow		20L/min	

Hidden functions

How to operate

1. Touch the seat automatic moisture switch:

long press the Stop/electric power button, turn off the machine for 3 seconds, short press the remote control washing button, hear the toilet prompt "tick", and turn off the toilet moisture function; "Suodi" twice, turn on the function of the toilet to moisten seconds, short press the bone wash button of the remote control, hear the toilet prompt "crow", and turn off the atmosphere light; "Didi" twice, turn on the atmosphere light.

2. Foot sensor switch:

long press the power/stop button, turn off the power for 3 seconds, short press the remote control seat temperature button, and hear the toilet prompt "tut" to turn off the foot sensor; "Tick" twice to open the foot feeling.

3. Switching from large to small flushing:

long press the power/stop button, turn off the machine for 3 seconds, short press the remote control flush button, hear the "Hi" prompt from Mafu, and stop button, turn off the machine for 3 seconds, press the turn button of the remote control for a short time, hear the toilet prompt "tick" and the function is turned off; "Tick" twice, the function is turned on.

4. Microwave induction distance adjustment:

long press the power/stop key, turn off the machine for 3 seconds, short press the flip key of the remote control to enter the microwave induction distance adjustment, press the spray bar forward and the spray bar backward keys to adjust the distance gear, with a minimum of one "tick" prompt for gear 1 and a maximum of five "tick" prompts for gear 5. The display will prompt 01-05 gears at the same time. Press and hold the flip button to turn on and off the microwave.

5. Adjusting the flipping force of the cover and loop:

Adjusting the flipping force of the cover and loop: Long press the power/stop button, turn off the machine for 3 seconds, and short press the remote control spray bar forward button to adjust the flap strength. There are 15 gears from 00 to 14, each gear has a "tick" prompt, and the maximum force gear has a long sound prompt.

6. Within 3 seconds of shutting down, press the hip wash button to turn on and off the ambient light.

7. Within 3 seconds of shutting down the machine, press the drying button to switch on and off the circle dropping and flushing function.

warranty card	
Name:	E-mail:
Address:	
Telephone:	Mobile Phone:
Product Name:	Type:
Coding:	
Marketing Unit:	
Date of Purchase:	
<small>(implication invalid)</small>	
Warranty card (deputy)	
Name:	E-mail:
Address:	
Telephone:	Mobile Phone:
Product Name:	Type:
Coding:	
Marketing Unit:	
Date of Purchase:	
<small>(implication invalid)</small>	

Date of Purchase	
Name:	E-mail:
Address:	
Telephone:	Mobile Phone:
Product Name:	Type:
Coding:	
Marketing Unit:	
Date of Purchase:	
Installation Service: satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
After-sales maintenance date: Date After-sales service content:	
After Sales Service: satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
After-sales maintenance date: Date After-sales service content:	
After Sales Service: satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
After-sales maintenance date: Date After-sales service content:	
After Sales Service: satisfaction <input type="checkbox"/> Dissatisfaction <input type="checkbox"/> common <input type="checkbox"/>	
<small>(implication invalid)</small>	

Warranty and terms of warranty

Dear customers, welcome your practical smart toilet. The product has been certified by CCC and iso9001-2008.

- Principle of the warranty
failure operation in normal operation without private repair, which enjoy lifetime repair guarantee.
- One of the following conditions is not guaranteed. But can carry out charge maintenance.
 - The damage caused by human factors, the use of hot style abnormal wage environment, and the damage caused by the use of the manual, etc.;
 - User's personal self-disassembly, self-repair, modification or repair by the company's warranty unit;
 - Damage caused by force majeure (e.g. fire, flood, earthquake, lightning strike, etc.);
 - No product warranty card.
 - The warranty card is inconsistent with the product model, bar code or altered
- In the case of exceeding warranty period, we will collect the maintenance cost and certain service fee of the product parts if the after-sales service is needed.

- ⚠ Please fill in the warranty card after purchasing the product. No company warranty seal is invalid.
- ⚠ Please make sure to fill in the warranty card and send the warranty card back to our company within one month after purchase, to join our after-sales maintenance system so as to better enjoy the services provided by our company.

