
ASSEMBLY INSTRUCTIONS 36" BATHROOM VANITY

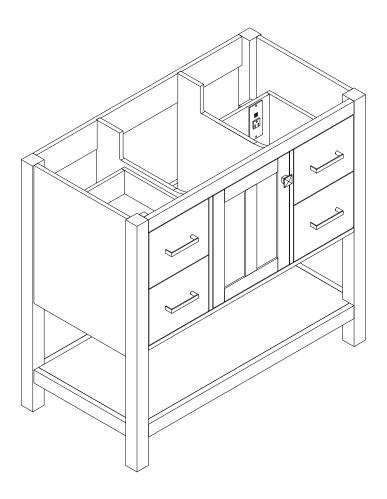

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

 


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation


Important - Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Cam Lock Assembly Instructions

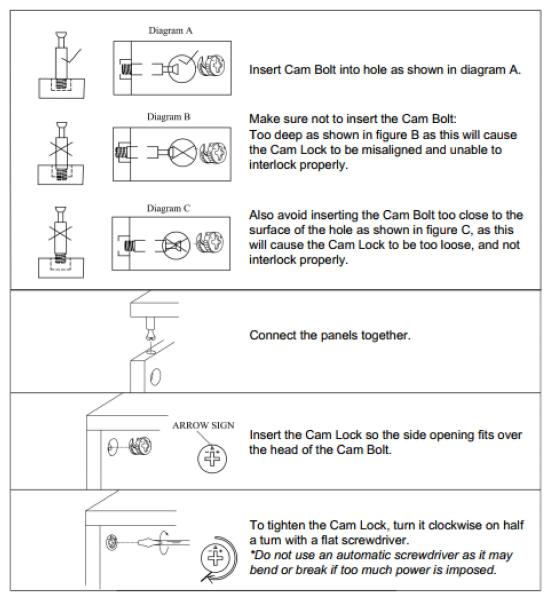

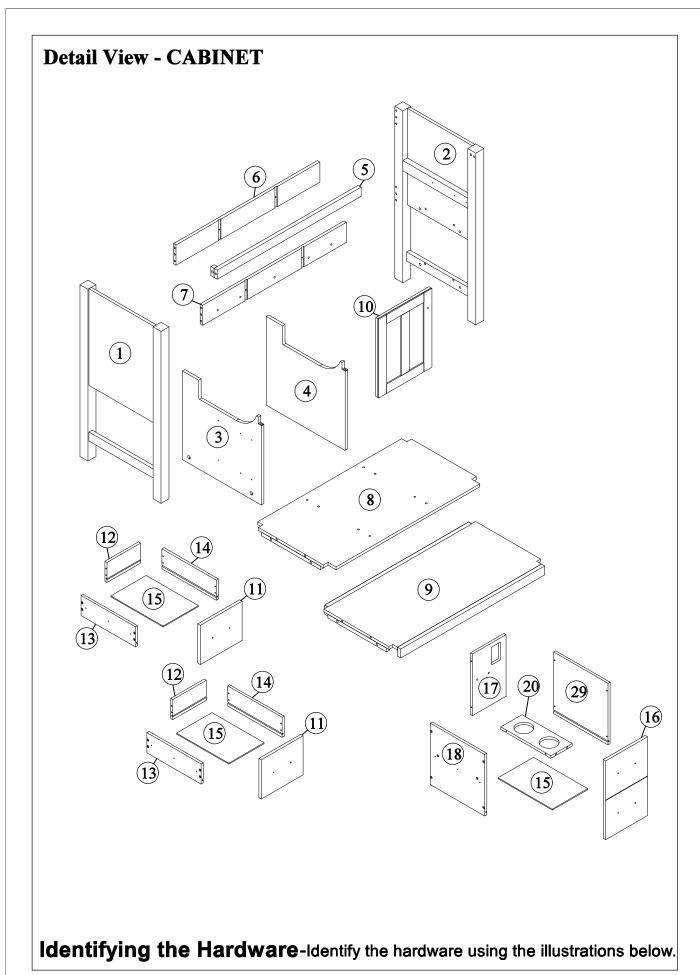


Part List - WF306444			
Side Panel (L) - 1p	oc Side Panel (R) - 1pc		
Mid Panel (L) - 1pc	Mid Panel (R) - 1pc		
5	6		
Front Bar - 1pc	Rear Panel Top - 1pc		
7	8		
Rear Panel Bottom - 1	•		
9 Frame Bottom - 1pc	Door - 1pc		
11	12		
Left Drawer Face - 2pcs			
13			
Left Drawer Side(L) - 2pc	Left Drawer Side(R) - 2pcs		


Part List - WF306444

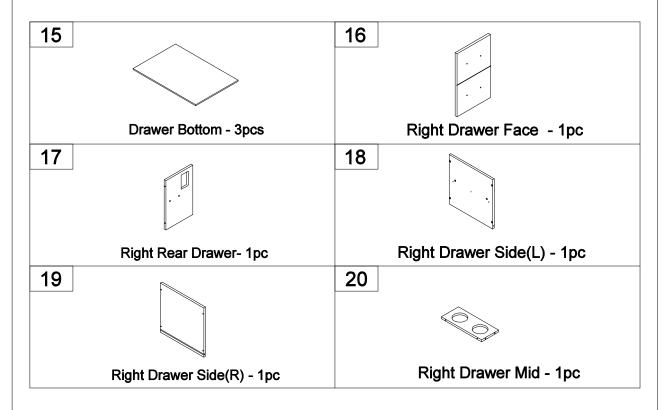



Hardware List - WF306444


Α	В	С	
0)00000000000000000000000000000000000			
ø13x1/4"x28mm	ø1/4"x16x1mm	ø6x35mm	
Hex-Head bolts(10pcs)	Washer(10pcs)	Three in one bolts(15pcs)	
D	E	F	
	E)mmmm>	€]mmmm>	
ø14.5x12mm	ø8xø4x25mm	ø8xø4x32mm	
Three in one lock(15pcs)	Round head screw(4pcs)	Round head screw(26pcs)	
G	Н	I	
		ø5/32"x22mm	
Handle (4pcs)	Handle (1pc)	Handle screw(1pc)	
J	K	L	
(S)		©mmm>	
ø5/32"x28mm		ø7xø3.5x12mm	
Handle screw(8pcs)	L-Bracket (2pcs)	Round head screw (6pcs)	
M	N	0	
		ø7xø3.5x15mm	
USB power socket(1pcs)	Damping hinge (2pcs)	Flat head screw(12pcs)	
P	Q	R	
		(1) 10000000>	
	<u>S</u>	ø6xø3x12mm	
ø300x35mm	ø298x18mm	51.11	
Slide rails (6pcs)	Slide rails(6pcs)	Flat head screw(36pcs)	
S	Т	U	
9////	Ø/////		
ø8x30mm	ø6x30mm	4mm	
Wood dowel(22pcs)	Wood dowel(4pcs)	Allen key(1pc)	
Anti fall hardware(1set)			

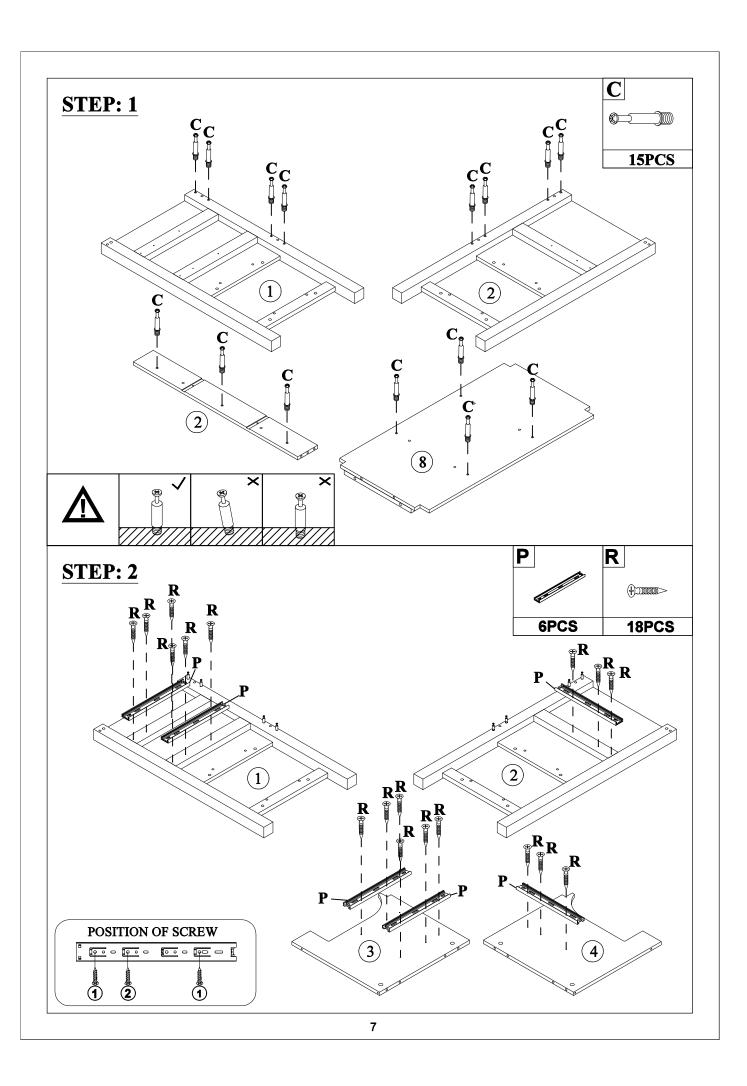


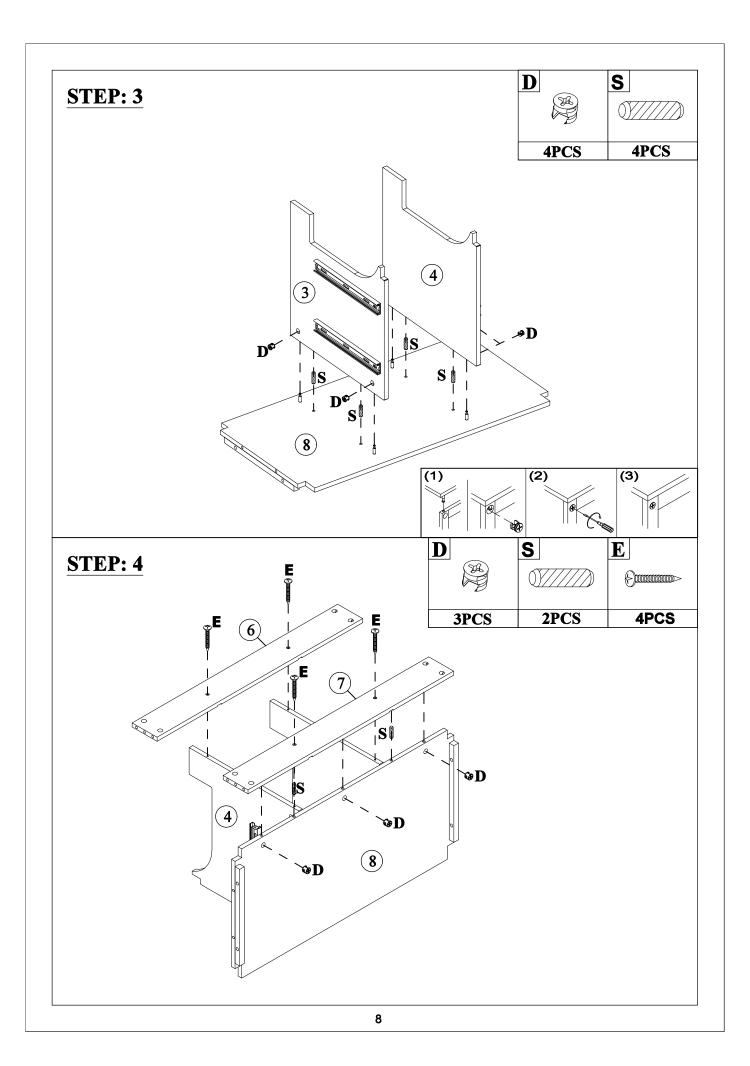


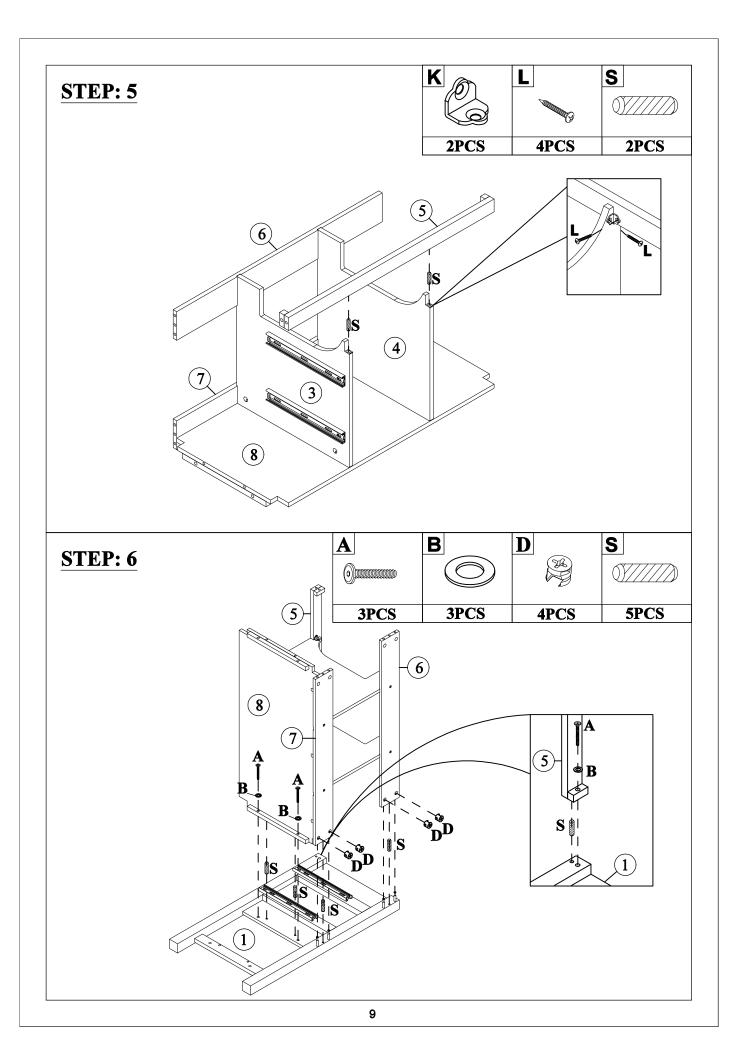

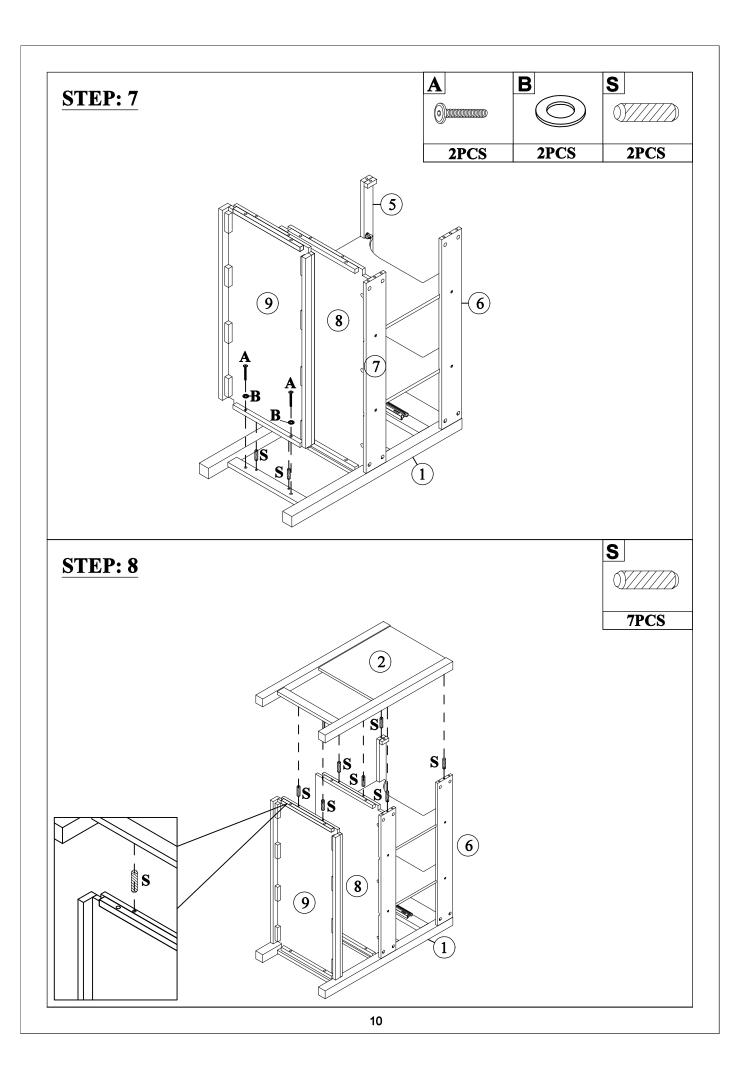


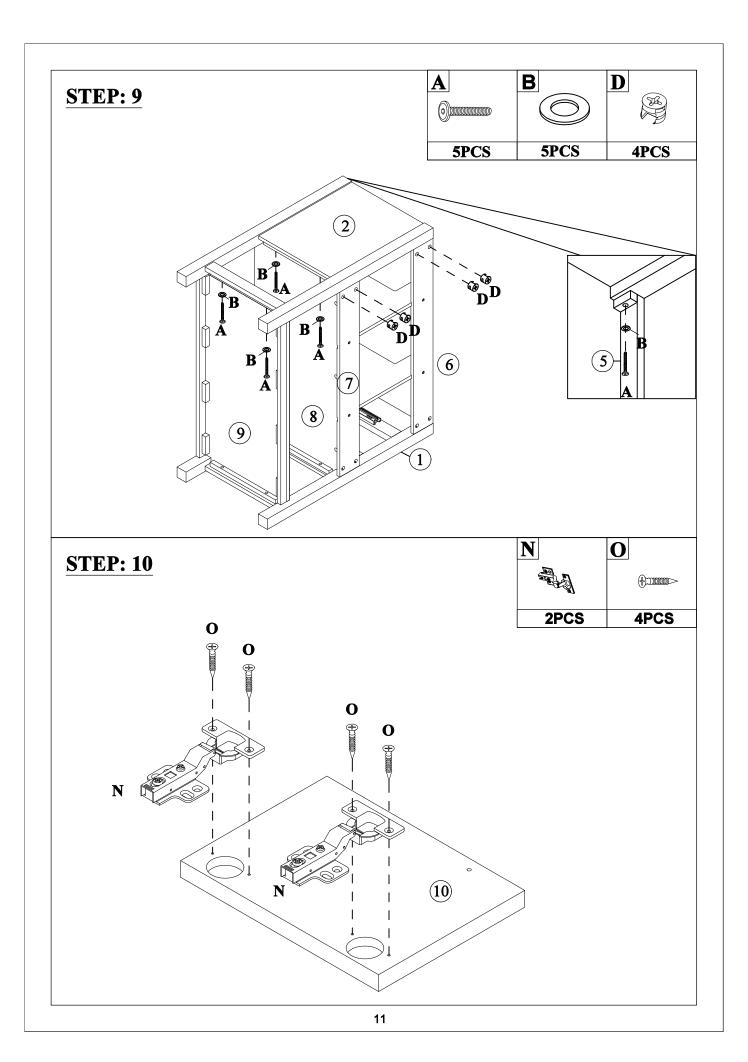


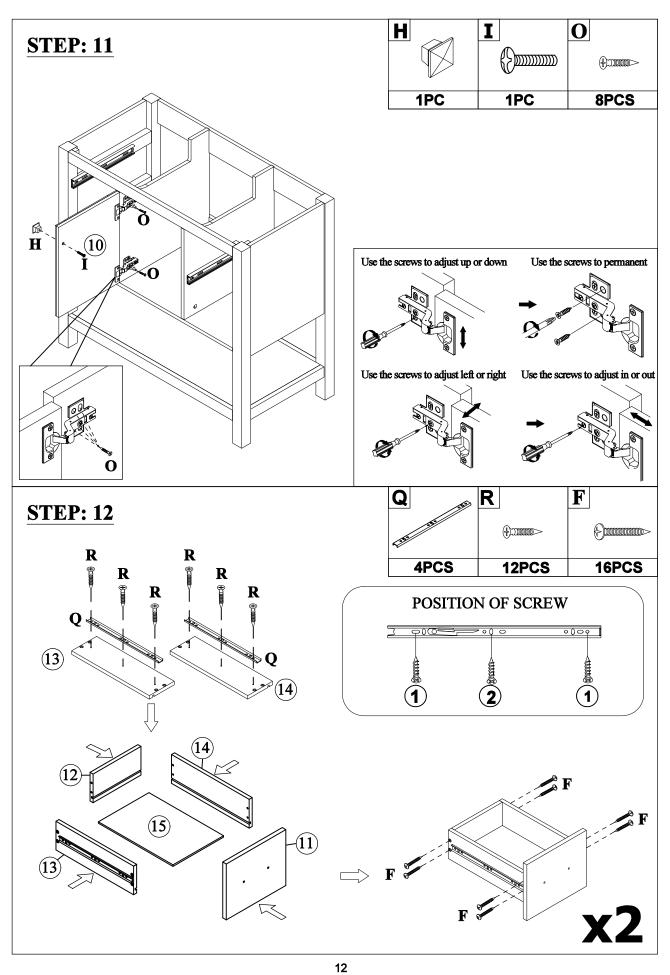


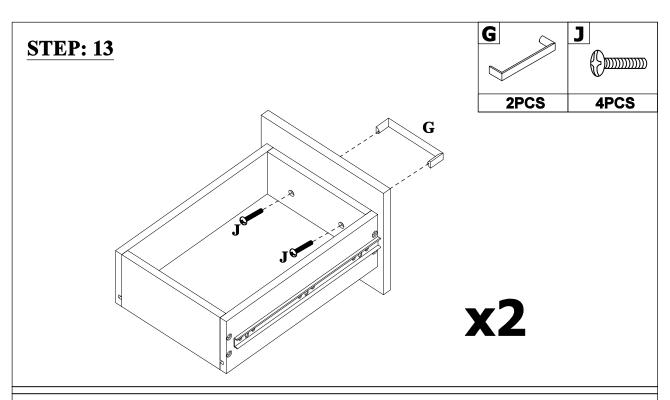


- 14(a)~16(a) Install drawers and add circular storage boards, which are convenient for placing hair dryers and other electrical appliances
- 14(b)~16(b) You can choose not to install a round shelf when installing drawers, which increases the storage space inside the drawer and makes storage more convenient

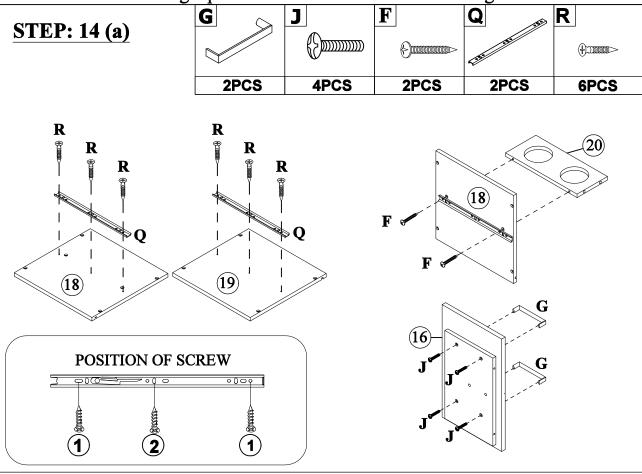


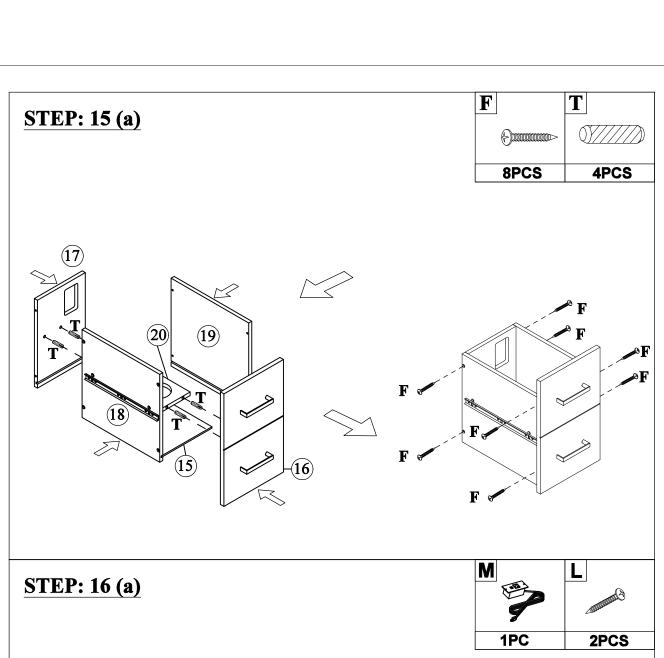

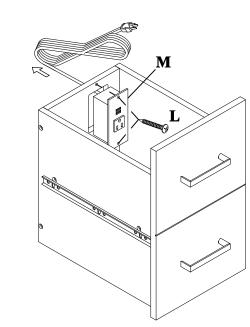

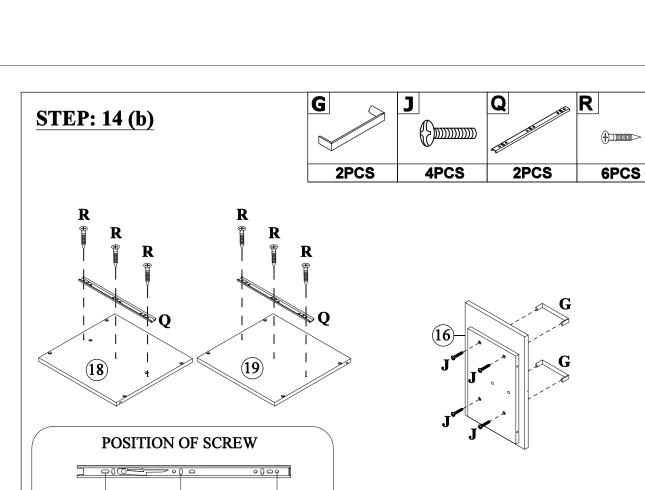


STEP: 15 (b)

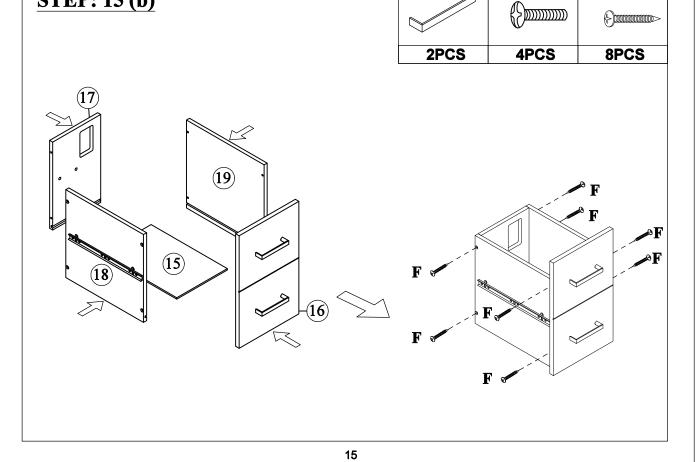


G


F

 J

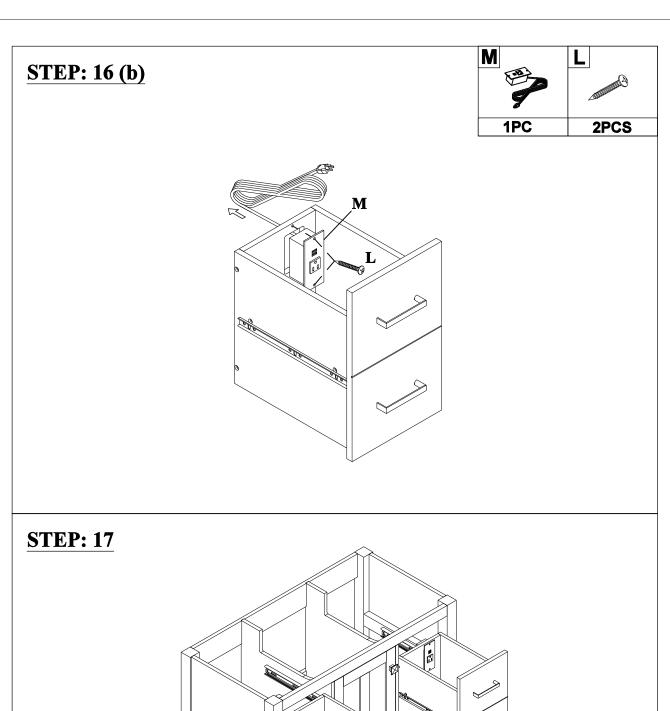







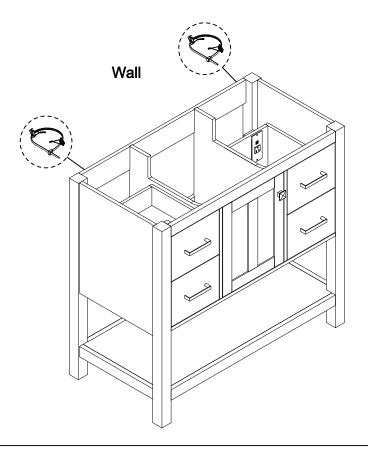

STEP: 19

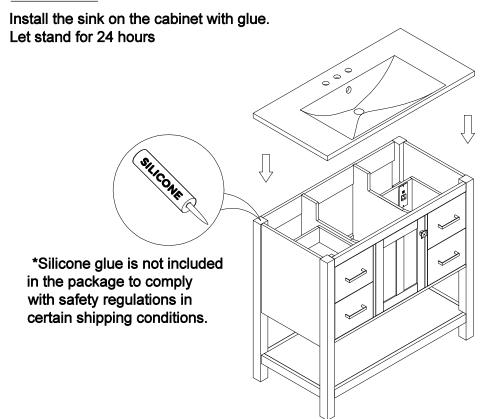


STEP: 20

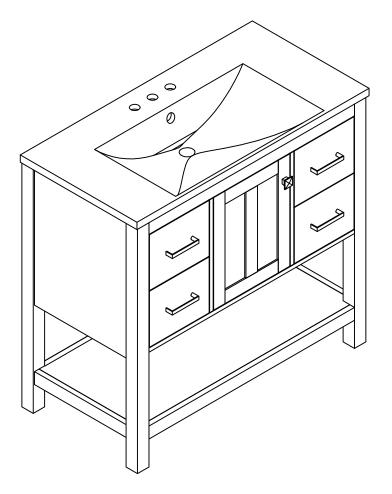




HINGE ADJUSTMENTS

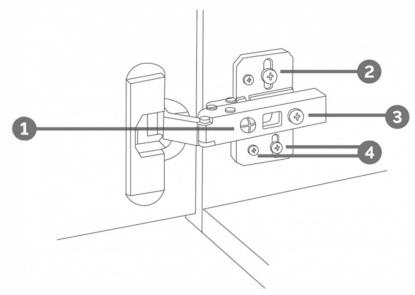

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

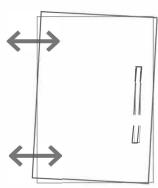

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

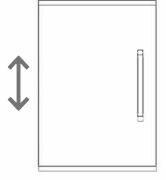

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

