
SMART TOILET

INSTRUCTIONS FOR USE AND INSTALLATION

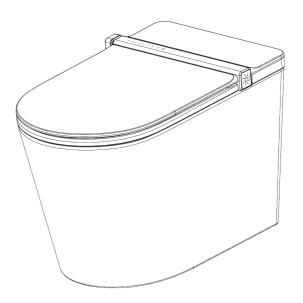

PRE-READING INSTRUCTIONS


- 1. Please read this manual carefully before installation and use;
- 2. The appearance of the product is subject to the actual..
- 3. For product functions, please refer to the configuration of the model actually purchased.
- 4. Please keep the instruction manual properly and take it out to read when necessary.

The company reserves the right to interpret this instruction manual. If there are changes to products and technical parameters without further notice, please refer to the latest version of the instruction manual.


PTABLE OF CONTENTS

1. Accessories List	2
2. Tools Preparation	2
3. Product Introduction	3
4. Safety Precautions	4~6
5. Precautions before Installation	7~8
6. Installation Steps	9~10
7. Remote Control Operating Instructions	11~12
8. Knob Operation Instructions	13
9. Troubleshooting	14
10. Maintenance	15~16
11.Product Specifications	17


1 - ACCESSORIES LIST

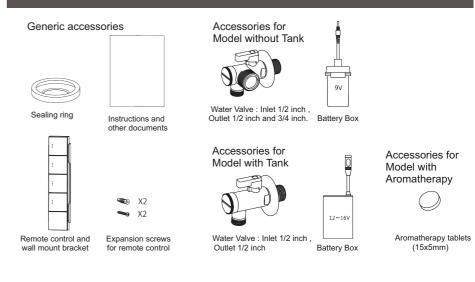

2 - TOOLS PREPARATION

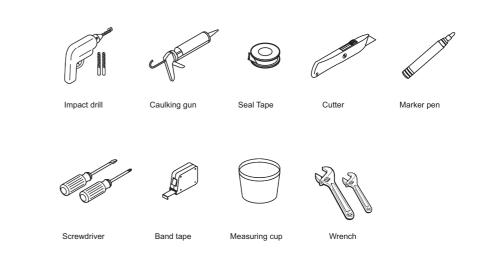

3 - PRODUCT INTRODUCTION

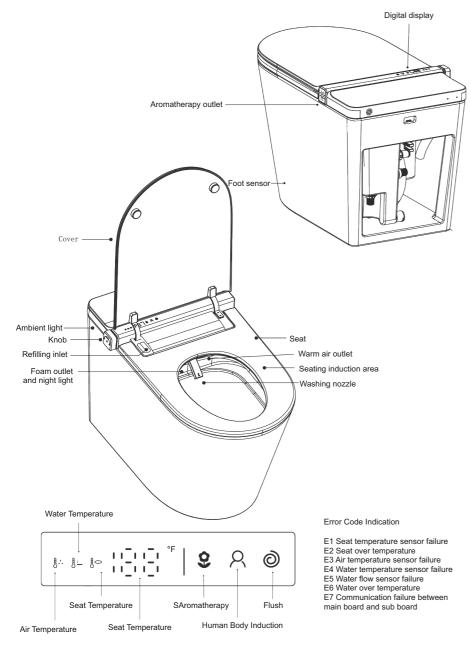

Note: Above parts are just one of the appearance for smart toilet. Different models may have slightly different appearance and functions. Please refer to the actual product.

4 - SAFETY PRECAUTIONS

Precautions before installation (for safety purpose, please be sure to follow them)

The following precautions are closely related to safety and may have major consequences depending on the situation, so please be sure to abide by them.

Warning	Means that if you ignore this sign and operate incorrectly, Person injury or death may occur.	
CAUTION	Means that if you ignore this sign and operate incorrectly, Person injury or property damage may occur.	
	 The Power socket should be used within the prescribed range. If over the specified range, it will cause the socket heat up and cause a fire. 	
	 The power socket must be equipped with earth wire. Please leave wiring installation to the electrical installation company. Do not plug in power cord into the socket before installation is completed 	

to avoid error.

Warning

- Danger! There is a risk of electric shock. Cut off the power supply before operation.
- Caution! Before installing the product, please close the main water inlet valve to avoid water leakage and property damage.
- Caution! There is a risk of harmful gases. If the smart toilet cannot be installed immediately, you can temporarily cover the sewage outlet on the ground with an cloth.
- Comply with all local plumbing and electrical codes. Power and water pipes should be wall mounted.
- The length of power cord is approximately 1.5 meters. Install the power socket within the reach area of power cord. Socket should be higher than floor where it will not be easily wet by water.



- Inspect the smart toilet carefully to check is there any damage.
- In winter, when the product is transported over long distances or stored for a long time, the remaining water in the product may freeze. In order to prevent damage caused by freezing, the product must be placed in a warm room for 30 minutes to allow it to defrost naturally before installation as well as water and electricity connection.

4 - SAFETY PRECAUTIONS

$\overline{\mathbb{A}}$



- 1. When sitting on the seat for a long time, please setup the seat temperature as normal temperature.
- $2.\ \mbox{When}$ the following people use the product, please setup the seat temperature as normal temperature.

The elderly and children who cannot adjust seat temperature by themselves.

Disabled or patients who are limited mobility.

People with drowsiness who have taken sleep-promoting drugs (such as sleeping pills, cold medicine, etc.), drank heavily and were overtired

- Make sure the power plug is inserted in place. If it is no t fully inserted, it may cause electric shock or heat and cause a fire.
- Be sure to disconnect the power supply when cleaning.
- Do not plug or unplug the power plug with wet hands, otherwise it may cause electric shock.



- Do not continue to use the product if it malfunctions In the following situations, please unplug the power plug and close the water inlet valve.
- Do not damage or replace the power cord, power plug and connecting cable without permission.
- 1. If it is still used if it is damaged, it may cause electric shock, short circuit, or fire.
 2. The power cord of this product adopts Y-shaped connection. If the power cord is damaged, it must be replaced by our company or professional service person authorized by our company.
- \bigcirc

Must be

obeyed

Forbidden

- Do not use other water sources other than tap water
- 1. Otherwise it will cause problems such as dermatitis.
- 2. If foreign matter is mixed in and accumulated inside it, which may cause malfunction.
- Patients with pacemakers should not use this product.
 Otherwise, electromagnetic interference will be generated, which may damage the function of the pacemaker and cause life-threatening consequences.
- Do not put lit cigarettes into the toilet or place hot or flammable objects near the toilet.
 Otherwise it may cause fire.





• This product should not be used by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge(included children). Unless they have been supervised or instructed in the use of the product by a person responsible for safety. Do not let children play on the seat or cover. Do not step on or sit on the cover.

Otherwise, it may cause malfunction and safety accident.

4 - SAFETY PRECAUTIONS

Notice

 Do not sit on cover, otherwise the cover may be damaged.



 Do not leave the product under strong light or direct exposure to sunlight for a long time, otherwise it will cause discoloration of plastic parts and unstable seat temperature.



Forbidden

- Please do not impact the ceramic bowl to prevent damage and leakage.
- Do not bend or twist the water supply pipe, otherwise water leakage may occur due to loose connections
- Do not flush other things other than excrement and toilet paper, otherwise it will cause the toilet to become clogged, sewage to flow out, and indoor water leakage.
- When closing the cover or seat, do not use excessive force otherwise the product may be damaged.
- Before taking out the filter inside the water valve, the water valve must be closed first, otherwise
 it will cause water leakage.
- Once the filter of valve is taken out, it must be tightened when reinstalling it, otherwise it will cause water leakage.
- When the toilet is clogged, firstly cut off the power, and then use pipe dredger to clear it. (If the
 power is not cut off, the automatic flushing will continue to work, which causes sewage overflow,
 indoor water leakage, etc.)
- When the room temperature is low (zero Celsius degrees and below), please increase the room temperature. Otherwise, the water pipes and products will be damaged due to freezing, resulting in water leakage.
- Must be obeyed
- Do not wipe the product body with dry cloth or toilet paper, otherwise it may cause scratches on the product.
- Do not use it when electric outage or water outage, otherwise the product functions will not be implemented and use will be affected.
- It is strictly prohibited to move the product by the cover, otherwise it may cause mechanical failure
- Do not pour urine on the toilet body and nozzle, otherwise it may cause malfunction or cause pink or brown stains.



 During thunder, please unplug the power plug, otherwise it may cause malfunction



 When traveling or not using it for a long time, please cut off the water and electric, otherwise it may cause safety accidents.





5 - INSTALLATION PRECAUTIONS

Disassembly is prohibited

 Never disassembly or modify the product, otherwise it may cause fire, electric shock, and damage by abnormal movement.



No water splashing

 Do not pour water on the product and plug, otherwise it may cause fire or electric shock.



• This product is an electrical product, so please do not place it in a place that is easily splashed by water or has high humidity. When using it in the bathroom, please install a ventilation fan to maintain good air circulation in the bathroom. Otherwise, it may cause fire or electric shock.



Must be obeyed

- Please set the socket for the power cord as follows. Failure to follow the requirements may cause fire or electric shock.
 - 1. The rated power of the socket must be higher than 2KW.
 - 2. The socket should be installed higher than 0.8m above the floor and as far away from the bathtub or shower as possible.



• Do not use loose or faulty sockets, as this may cause fire or electric shock.

For Model without Tank

- 1. The water pressure for flushing should be >0.15MPa (1.5kgf/cm²), and the flow rate should be >17L/min
- 2. The water pressure for cleaning should be >0.075MPa (0.75kgf/cm²). The flow rate should be >1L/min
- If above conditions are not met, the corresponding functions can't be achieved normally:

when other products such as faucets are used at the same time, the conditions must also be met.


For Model with Tank

- 1. The water pressure for flushing should be >0.03MPa (3kaf cm²)
- 2. The water pressure for cleaning should be >0.075MPa (0.75kgf/cm²) and the flow rate should be >1L/min .

If above conditions are not met, the corresponding functions can't be achieved normally:

when other products such as faucets are used at the same time, the conditions must also be met.


- If drain outlet spacing is from 240mm to 280mm, it is recommended trap 250mm toilet;
- If drain outlet spacing is from 290mm to 380mm, it is recommended trap 305mm toilet;
- If drain outlet spacing is from 280mm to 290mm, select the shift flange to install trap 305mm toilet.
- If drain outlet spacing is more than 390mm, it is recommended trap 400mm toilet.
- If drain outlet spacing is from 380mm to 390mm, select the shift flange to install trap 400mm toilet.

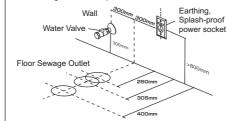



5 - INSTALLATION PRECAUTIONS

PRODUCT DIMENSION

Unit: mm

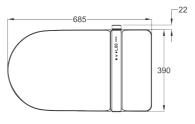

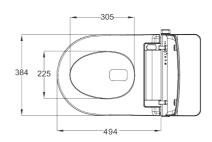

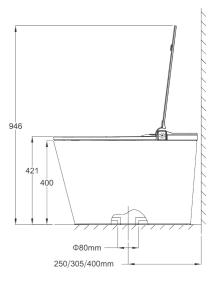

Instruction to install valve filter

- 1. Connect the filter to the valve and make sure to put a flat gasket on it, otherwise water will leak;
- 2. Open valve to pass water, visually check is there water seepage or leakage for each pipe connection. Make sure there is no leakage before test smart toilet.

Note: For first installation , before connecting the first-level filter, it should drain for a few seconds to clear sand, gravel, dirt etc. Inside the pipe. Pay attention to the direction of the three-way valve. The picture shows opening status. (Different batches of valve, it may be slightly different. It is without further notice)

Remote Control Installation



Method 1

(Apply for smooth tiles, glass and smooth wall)

- Choose proper installation location (Not easy to get wet , easy to takeout or operate);
- 2. Clean the dust, oil stains, water droplets etc. on the installation wall:
- 3. Peel off the adhesive tape on the back of the remote control bracket, align the position, and press evenly for 1-2 minutes to make it stick tightly; Placing the remote control after 12 hours;

Method 2


- 1. Choose proper installation location (Not easy to get wet, easy to takeout or operate);
- 2. Fix the bracket on the wall by installation accessories pack:
- 3. Place the remote control on the bracket;

6 - INSTALLATION STEP

1.Install smart toilet

1. Cut off the sewage pipe which is higher than the ground by a cutting machine.


*Keep the sewage pipe approximately 3~5mm higher than the ground.

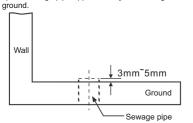

2. Disassembly the old water valve and install the new valve we provided .

*Before disassembly the valve, close the main water valve.

 
*The water outlet direction of the new valve is determined according to the actual situation.



 Clean and dry the floor
 *The cleanliness and dryness of the floor will affect the firmness of product fixation.




4. Use a water-based mark pen to draw a cross mark on the center line of the floor sewage outlet

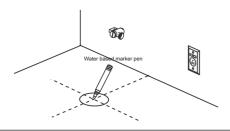


5. Draw lines on the left, right and front surface of toilet, corresponding to the center of the sewage outlet.

*The smart toilet is lay on foam board.

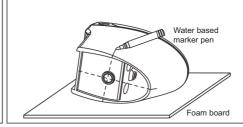


6. Install the seal ring on the drain outlet of toilet. *Pay attention to the tighten connection.

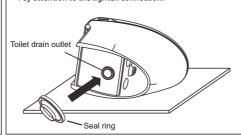

7. Lift up the toilet and place it on the ground so that the two marks coincide. Once coincide, press the toilet down to make the seal ring fully and closely contact the ground.

 
*Do not move the toilet or shake it left and right after the marks coincided, otherwise the sealing may be damaged, resulting in water leakage.



8. Connect the water inlet pipe to the filter.

*The water inlet pipe nut has a built-in sealing gasket. Be sure to install a gasket, otherwise water leakage will occur.

 
*If the water inlet pipe is severely bent or choked, which will seriously affect toilet flushing. The pipe is adjustable by changing the outlet direction of the valve, and ensure that the water inlet pipe is unobstructed.



6 - INSTALLATION STEP

2.Check water supply

 1. Open the water valve to the maximum as shown in the figure.




2. Confirm that there is no water leakage at each connection.

If there is water leakage, please re-tighten the nuts and install again.

3.Connect electric supply

- Plug the power cord into an AC
 volt socket.
- Confirm the power is on. (The machine self-checks after powering on, and the self-check
- ends with a long beep)
 3. Confirm the power is on.

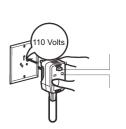

4. Check toilet's flushing effect


- 1. Press the stop button to start flushing. It lasts about 18 seconds per flushing.
- For the first flush, the siphon cannot be fully formed due to lack of water in the main pipe, so it is necessary to flush several times and observe whether the toilet can form siphon every time

If flushing is weak and there is no siphon, please check whether the water inlet pipe is unobstructed.



5.Check no water leakage from the toilet and the floor

Check no water leakage from the contact surface between toilet and floor (shaded area as the picture below).

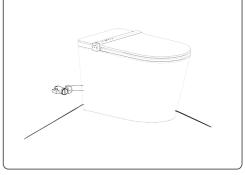

6.Fix Smart Toilet

- 1. After finished the function testing, fill uneven parts on the floor with filler to prevent the toilet from shaking.
- 2. Clean the contact surface between the toilet and the ground keep the contact surface dry.
- 3. Use a caulking gun to apply a full circle of glass glue along the bottom of the toilet.
- * After applying glass glue, use it after 48 hours .
- *When adjusting the toilet, be careful to adjust it gently and in small increments, Never adjust it too much.



7. Trial Operation


Please follow the actual configuration and function of the product

Operate each function key on the remote control or the knob to check whether the product function is normal.

09/page 10/page


7 - REMOTE CONTROL OPERATING

REMOTE CONTROL FOR MANUAL MODEL

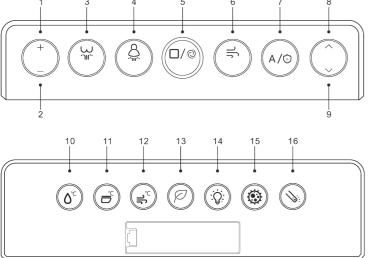

- 1 Increase washing intensity
- 2 Decrease washing intensity. 3 Buttock washing/One-touch
- washing.
- 4 Female washing/One-touch washing.
- 5 Stop/Flush/Shutdown.
- 6 Warm air drying/Air powei
- adjustment/Five-speeds air drving. 7 Foam Shield/Four Seasons
- Temperature Sensing.
- 8 Washing position forward.
- 9 Increase washing intensity,
- Washing position backward.
- 10 Water temperature adjustment
- 11 Seat temperature adjustment
- 12 Air temperature adjustment
- 13 Aromatherapy/Scheduled
- Aromatherapy.
- 14 Night light/Ambience lights
- 15 UV sterilization
- 16 Massage washing mode/Self-cleaning.

REMOTE CONTROL FOR AUTOMATIC MODEL

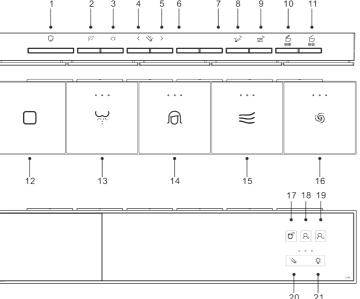

- 1 Foam Shield/Infrared Therapy
- 2 Manual aromatherapy/automatic aromatherapy/timer aromatherapy 3 Ambient light/Automatic ambient
- 4 Washing position backward
- 5 Washing position forward
- 6 Increase washing intensity
- 7 Decrease washing intensity 8 Water temperature adjustment
- 9 Air temperature adjustment
- 10 Open/close the seat
- 11 Open/close the cover
- 12 Stop/Shutdown
- 13 Buttocks washing/One-touch
- washing
- 14 Female washing/One-touch
- washing 15 Drying/Air strength
- adjustment/Five-level foam shield/Infrared physiotherapy
- Air drying 16 Flush
- 17 Seat temperature adjustment/Four-season temperature sensing
- 18 User memory
- 19 User memory
- 20 Massage washing/Self-cleaning/Automatic
- UV sterilization
- 21 Night light
- Functions are only available for products with this function. If there is no such function, only the prompt tone will not function after pressing the button. (e.g. Foam Shield/Infrared Therapy, UV sterilization)

REMOTE CONTROL FUNCTION INSTRUCTION

FUNCTION DESCRIPTION

Remote control code matching: Within 10 seconds after the toilet is powered on, long press the "Buttocks Wash" button, the toilet beeps once, indicating that the code is successfully matched. (% only for manual model)
After the toilet is powered off for 10 seconds, long press the "Butt Wash" and "Foam Shield" buttons at the same time until the indicator light flashes. Then

power on within 10 seconds, the remote control indicator light stops flashing, and the toilet beeps, indicating that the code is successfully matched. (only for

Stop:When toilet is working, short press the "Stop" button to stop the current function (Except open the cover/seat and flushing); long press the "Stop" button to shut down (Once shutdown, lighting, display, and seat heating are turned off), all functions disabled).

Flush: When no other functions are running, short press the "flush" button to start the flushing function.

Buttocks washing/Mobile buttocks washing/One-touch washing:

While seated, short press "Buttock Wash" button to start the buttock washing function; Press it again to start mobile washing.

While seated, long press "Buttock Wash" button to start the one-touch washing function. Washing → Drying → end.

Female washing/Mobile washing/one-touch washing:

While seated, short press the "Female Wash" button to start the female washing function: Press it again to start the mobile washing

While seated, long press the "Female Wash" button to start the one-touch washing function. Washing → Drving → end.

Massage Washing:During washing, short press the "Massage" button to turn on/off massage washing.

Warm air drying/Air strength adjustment/Five air speeds:

While seated, short press the "Drying" button to start the drying function;

While drying, short press the "Drying" button to select the air speed from first /second /third/fourth/fifth grades;

While seated, long press the "Drying" button to start the fifth gear speed air drying.

Water Temperature Adjustment

During washing status or non Four-Season temperature sensing mode, short press the "Water Temperature" button, the water temperature will be selected between normal /low /medium /high grade.

Air temperature adjustment:

During drying or non-Four-season temperature sensing mode, short press the "Air temperature" button, the air temperature will be selected between normal /low /medium/high grade.

Seat temperature adjustment:

While seated or non-Four-season temperature sensing mode, short press the "Seat temperature" button ,the seat temperature will be selected between normal /low /medium /high grade.

Washing position adjustment:

During washing status, short press the "<" key, the washing position moves backward; short press the ">" key. The washing position moves forward (there are 5 positions grades).

Washing intensity adjustment:

During washing status, short press the "+" key to increase the washing intensity; short press the "-" key to decrease the washing intensity: (there are 5 washing intensity grades).

Flip cover/seat

While not seated, press the "Flip" button to open/close the cover/seat; (only for automatic models).

When no functions are running, short press the "Foam Shield" button to start the foaming function: (only for models with this configuration).

While seated, long press the "Infrared therapy" button to activate the physiotherapy function; (only for models with this configuration)

When not seated, long press the "Sterilization" button to start the LIV sterilization function, which will automatically end in about 2 minutes or when other functions are operated or human body is sensed; (*Only for models with this configuration and the manual model) (Note: Make sure the cover is close before starting! If you want to open the cover during sterilization, please stop the sterilization function first!),

Automatic UV sterilization:

Long press the "Sterilization" button to turn on/off the automatic UV sterilization function. When the automatic UV sterilization starts, the UV sterilization function will automatically turn on when the cover is close, and it will automatically end after about 2 minutes or when other functions are operated or human body is sensed; (* only for models with this configuration).

Four seasons temperature sensing mode

Long press the "Four Seasons Temperature Sensing" button to turn on/off the four seasons temperature sensing mode. Four Seasons Temperature Sensing Mode: Water temperature, air temperature, and seat temperature are automatically adjusted according to the ambient temperature. (While seated, the temperature can be adjusted manually. Corresponding to high-range in winter, mid-range in spring and autumn, and low-range in summer.Return to sensing temperature mode after the function ends: the temperature cannot be adjusted when not seated.)

Manual aromatherapy/automatic aromatherapy/timer aromatherapy:

Manual aromatherapy: Short press the "Aromatherapy" button to turn on or stop the aromatherapy function, and it will automatically turn off after 5 minutes. Automatic aromatherapy: Automatically start the aromatherapy when seated, and automatically turn off after 5 minutes or when leave seat. You also can

Timer aromatherapy: Long press "Aromatherapy" button, start/stop the automatic aromatherapy mode (it starts automatically every 2 hours and turns off after 10 minutes)

Ambient Light:

Long press the "Ambient Light" button to switch the ambient light modes. ("Only for models equipped with remote control model SH171). Short press the "Ambient Light" button to switch the ambient light mode; long press the "Ambient Light" button to enter the automatic ambient light mode. ("Only for automatic models)

Night light:

Short press the "Night Light" button to turn on/off the night light.

While seated, long press the "User 1'/"User 2' button to memorize the corresponding water temperature, air temperature, seat temperature, water pressure, position, and air speed; short press the "User 11/"User 2' button, adjust the function gear to the parameters set by the user; (*Only for models with this configuration).

Self-cleaning:

While non-seated, short press "Self-Clean" to start automatic cleaning of the spray boom and nozzle. (Short press again to turn on/off the reciprocating movement of the boom).

8 - KNOB OPERATION INSTRUCTIONS



KNOB OPERATION INSTRUCTIONS		
BUTTON / FUNCTION	FUNCTION DESCRIPTION	
יוור.	While seated, short counterclockwise rotate to start buttock washing function; During the washing, short counterclockwise rotate to move nozzle backwards; During the washing, long counterclockwise rotate to turn on/off the mobile washing function.	
	While seated, short clockwise rotate to start female washing function; During the washing, short clockwise rotate to move nozzle backwards; During the washing, long clockwise rotate to turn on/off the mobile washing function.	
₹/□ ©	In the state of non-functional operation, short press the knob to flush; in the state of functional operation, short press to stop the current function. In non-seated state, long press to turn on the atmosphere light; in the seated state, long press to start the drying function.	

OTHER FUNCTIONS DESCRIPTION		
BUTTON / FUNCTION	FUNCTION DESCRIPTION	
(* Only for manual model) In the state of non seated, short touch the foot switch to start flushing; (* Only for automatic model) In the state of non seated, short touch the foot switch: a) Open the cover →, open the seat (less than 6 seconds) → close the seat. b) Open the cover →, open the seat (more than 6 seconds) → close the seat and flushing. In the state of non -seated, long touch foot switch: Open the seat and cover at the same time.		
Wet the toilet bowl after seated		
Automatic flushing after leaving seat		
Automatic deodorization	Once human seated, it automatically starts the foaming device, the foam outlet discharge the foam to prevent splashing and isolate odor. Foam covers the whole water surface; (this function is closed as default) (Automatic Foam Shield Starting Conditions: 1. Seating again in 30 seconds since last seat leaving. 2. The interval since the last foaming is more than 1 hour and there is no flushing.)	
Automatic foam shield function		
Automatic Open Cover	When human body is close to the toilet, it opens the cover automatically. When there is no operation or no human body approaching, it close the cover for about 2 minutes (if the seat is opened more than 6 seconds and no flushing during this period,it closes the cover and flush) (* Only limited to this configuration model)	
Flush without electric power	In the state of power outages, shore press the knob to start the flushing function.	
Electrolytic water sterilization	Washing system automatic electrolysis bacteria. (* Only limited to this configuration model).	

9 - TROUBLESHOOTING

Items	Fault phenomenon	Fault analysis	Fault treatment
			Check Electric connection
Power supply	Product does not work	Check the leakage protector cut off or not (the indicator light of the protector does not light)	Press the reset button of the leakage protector. If it cannot operate or trips frequently, You must unplug the power plug and stop using the product, Contact the seller or after-sales service center.
		Check the product is powered on or not (No display on panel)	Long press the stop button on the remote control and the display panel will light up.
		Check the Seating sensor is workable or not ?	Adjust your sitting posture.
		Check the water or power is cut off or not?	Waiting for water and power to be restored.
	Nozzle can't spray	Check the valve is open or not ?	Open valve
	. ,	Check the filter device is clogged or not ?	Clean filter or replace filter
Washing function		Check the water supply pipe is broken or not ?	Check the water supply pipes is broken or not
Idilodon	Washing	Check the filter device is clogged or not ?	Clean filter or replace filter
	water is weak	Check the water pressure is at low level or not ?	Adjust the water pressure grade or turn on massage washing mode.
		Check the washing cycle stop automatically ?	Restart the function
	Nozzle stop	Check the Seating sensor is workable or not ?	Adjust your sitting position and restart the function.
	output water	Check the water is outage or a sudden drop in water pressure?	Wait until the water supply is restored or the water pressure meets the product usage requirements before using it.
	Air temperature is low	Check the air temperature was set at normal temperature or the low grade?	Adjust the air temperature grade.
Warm air function	No air drying	Check the seating sensor is workable or not ?	Adjust your sitting position and restart the function.
lanouon		Check the drying cycle stop automatically ?	Restart the function
	Seat temperature is low	Check the seat temperature was set at normal temperature or the low grade ?	Adjust seat temperature
Seat heating		Check if the product has just been powered on (the product needs a short time to warm up after powered on)	Wait for product to heat up.
		The Four-season temperature sensing mode is ON and the product is on the Summer mode.	Turn off the temperature sensing mode and adjust the seat temperature grade.
	Remote control cannot work	TCheck the battery is discharged fully or not?	Replace battery
Remote control		Check the positive and negative poles of the battery was set correctly?	Install the battery correctly according to the markings
	Button cannot work	Check the Battery is low or not ?	Replace battery
		Check the filter is clogged or not ?	Clean valve's filter.
	Unable to flush water normally	Check the water supply pipe is broken or not ?	Eliminate water supply pipes is broken.
Flushina		Check whether the interval between two flushes is more than 30 seconds (the model with tank)	The flush function is activated when the interval time between two flushes is more than 30s.
function	Siphon flushing cannot work well	Check the filter is clogged or not (the model without tank)	Clean valve's filter
		Check whether the water supply pipe is bent (the model without tank)	Eliminate water supply pipes is broken
		Check the water supply pressure is low and does not meet the product requirements (the model without tank)	Wait for the water supply is recovery or improvement of water pressure to the required range.
		Check the sewage pipe is blocked or not?	Unclog pipes
		·	

13/page

10 - MAINTENANCE

In order to ensure the normal use of the product, please clean and maintain the product regularly.

Note that when performing cleaning and maintenance, be sure to unplug the power plug from the socket, close the water supply valve and stop the water supply.

Cleaning and maintenance methods for covers, seats and other plastic parts.

Please use a soft damp cloth to wipe the product. If the dirt is not removed in time, it will become difficult to clean. Please wipe it with water frequently. In addition, wiping with water can prevent the generation of static electricity, which can absorb dust and cause the product to become black and dirty.



Cleaning and maintenance methods for ceramic area

 
Please wipe the ceramic area of the product with a soft damp cloth. soft brush, or sponge to clean it with a neutral detergent and cold or warm water. Do not use inappropriate cleaning agents, such as: toilet cleaners, bleach, alcohol, deodorizing powder, gasoline etc.




Valve filter maintenance Three-way valve Filter net 1. Turn the switch clockwise to the off position; 2. Use a flat-blade screwdriver or a coin to counterclockwise unscrew the filter net

- 3. Use a brush to clean the dirt and impurities on the filter.
- 4. Clockwise screw the cleaning filter into the three-way valve, and check to ensure that the filter is installed in place.
- 5. Turn the switch counterclockwise to the fully open position.

Warning



 electrical part of the smart toilet or inside of the remote control. Do not get the electrical parts and power plug wet with water or detergent. Otherwise there may be a risk of electric shock and fire.



/ Notice

When cleaning and maintaining plastic parts, do not use unsuitable cleaners (toilet cleaner, alcohol, cresol, benzene, detergent powder, bleach, tinas, paint thinner, residential cleaner, gasoline, etc.) otherwise the plastic parts cracking may result in personal injury, electric shock, or



Nozzle cleaning and maintenance methods

When not seated, press and hold the side knob to start the nozzle self-cleaning. (Short press again to start/stop nozzle moving).

If the nozzle is dirty, clean it with a toothbrush. Do not use too much force when brushing the nozzle, otherwise it will damage the nozzle, When not seated, press the "self-cleaning" button on the remote control to start self-cleaning. (Short press again to start/stop nozzle moving.)

 
If the nozzle is dirty, clean it with a toothbrush. Do not use too much force when scrubbing the nozzle, otherwise it will damage the washer.




Aromatherapy tablet replacement and Foam liquid addition

Replacement of scented tablets

- 1. Press the aromatherapy box with your finger, the aromatherapy box will pop out, and remove the old one.
- 2. Put 2 pieces of aromatherapy into the aromatherapy box (Diameter less than 20mm),



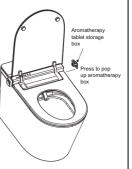

15/page 16/page

11 - PRODUCT SPECIFICATIONS

F	Rated voltage	AC110V/60Hz
ļ	Rated power	1050W
Maximum input		1450W
1	Use ambient	38-104°F
Water	supply temperature	39-95°F
W	/aterproof level	IPX4
Nomina	l water consumption	1.28gpm(4.8Lpm)
Nominal water	Clean the toilet	0. 03Mpa∼0. 75Mpa (model with tank) 0. 15Mpa~0. 75Mpa (model without tank)
consumption	Body washing	0. 08Mpa∼0. 75Mpa
	Heating and safety	Instant heating 1400W, Over temperature and flame retardant
	Buttock washing	450ml~650ml
	Female washing	450ml~650ml
	One-touch washing	Wash, Flush, Dry
Body washing	Mobile washing	Swing width is about
	Bubble massage	Pulse (model without tank)
	Water pressure	3 grades settings, 450ml~650ml
	Position	5 grades settings
	Temperature adjustment	Normal temperature / low grade / mid grade / high grade, normal temperature ~ 102°I
0 11 "	Heating and safety	About 50W, over-temperature and flame retardant protection
Seat heating	Surface temperature	Normal temperature / low grade / mid grade / high grade, normal temperature ~ 102°I
	Heating and safety	About 250W, over-temperature and flame retardant protection
Warm air drying	Warm air temperature	Normal temperature/low grade/medium grade/high grade, normal temperature 131°F
	Air speed adjustment	Five-grades adjustment
Cover/seat open	Automatic open and	Microwave induction, motor drive; can be turned on/off
and close	Manual open and close	Hydraulic descent device
	Deodorize	Chemical catalyst
	Aromatherapy	Aromatherapy table
	Foam shield	Foam is for odor-isolation and splashing-proof. The capacity of container is 450ml it can be opened/closed.
	Self-cleaning	Cleaning before use /Maintenance cleaning
	Soft night light	White, can be turned on/off
Comfort	Ambient Light	Multiple modes optional
assistance	HD digital display	Status, Temperature, Error display
	Moistening the bowl after seated	Can be turned on/off
	Flush after leaving seat	Can be turned on/off
	Flush during power	12~16V battery pack (model with tank)/9V battery pack (model without tank)
	Four seasons temperature sensing	Automatic temperature adjustment mode, can be turned on/off
	User memory	User mode, memory water temperature, air temperature, seat temperature, water pressure, position, air speed
	remote control	2. 4G, Powered by two AA batteries
Convenient control	Knob	Washing/Drying/Flushing/Function settings
55/10/01	Foot touching button	Open and close /Flushing
Leakage Protector		Maximum load 15A, leakage protection current ≥10mA; power cord length approximately 1.5m
		mpp
	Product Size	685x390x436 (mm)