

Contents


2. Install the auxiliary tool . 3. Packing list

6. Repair and maintenance . . .

impact drill tape measure Goggles impact dell tope measure
screed-iner less agent worsch
scalant raw material belt
piter piter hammer

movable wench pencil

The following figure and table appearance may be difficult or

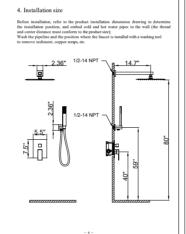

4. The working water pressure of the faucet is 0.05MPa \le or less, and the water in let pressure is \le 0.5MPa or less. When installing and using the faucet, please use normal torque to prevent the handle and bent foot from breaking. When using, please turn on cold water first, and then turn on hot water to adjust the temperature, so as not to burn.

