



## Instructions for LED bathroom mirror (Applicable to touch sensor switch)

Notes: to ensure the normal use of products. It is required set out wires as per the regulations of IEE at the installation places. The products are only applicable to being installed on the indoor solid wall, etc. The installation must be executed by a professional electrician, and wrong installation may lead to product damage and personal injury.


### Installation tools(as shown below)

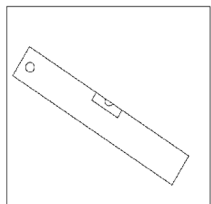


Leveling instrument

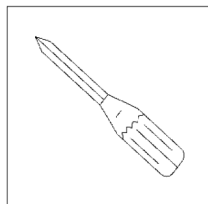


Screwdriver

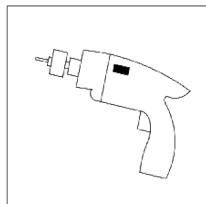

Churn drill

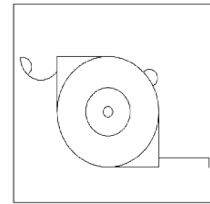

Flexible rule

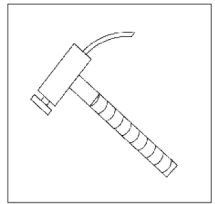

Hammer

### Installation instruction:

1. Make certain the wall is solid.
2. Use the flexible rule to measure the centre distance between holes on the wall and mark them out with a pencil.
3. Choose the churn drill with a appropriate drill bit to make hole at the marked places, and use a special ceramic drill if the wall surface is made of ceramic tiles.
4. Use the hammer to strike the expansion rubber plug in accessory bag into the holes on the wall, and then use the screwdriver to tighten the screws into the holes (exposure for 8-12mm).
5. Switch off the power, and then use a terminal block to connect the three-core exposed wires with those reserved on the wall (see details in Fig.3)
6. Hang the product on the screw crossing two handy holes to fix it.
7. Finally, switch on the power, then press the "Touch switch" (Fig.1) with a finger to test the products.

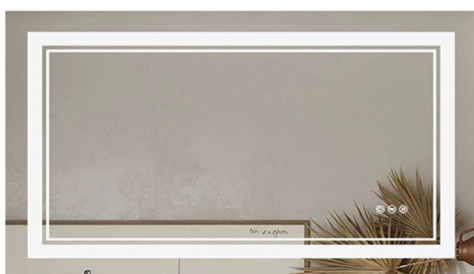


Fig. 1

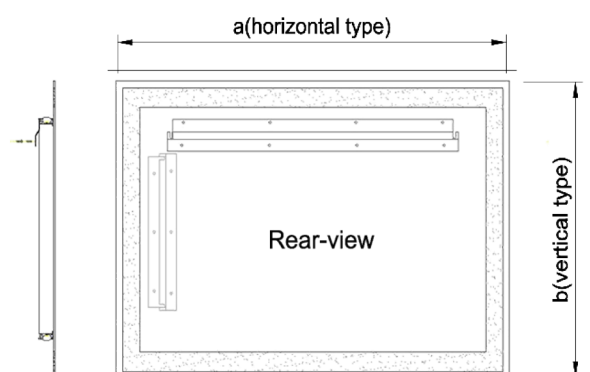
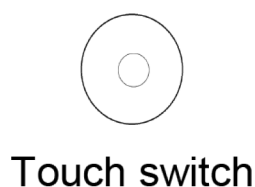


Fig. 2

# Wiring diagram for input terminal


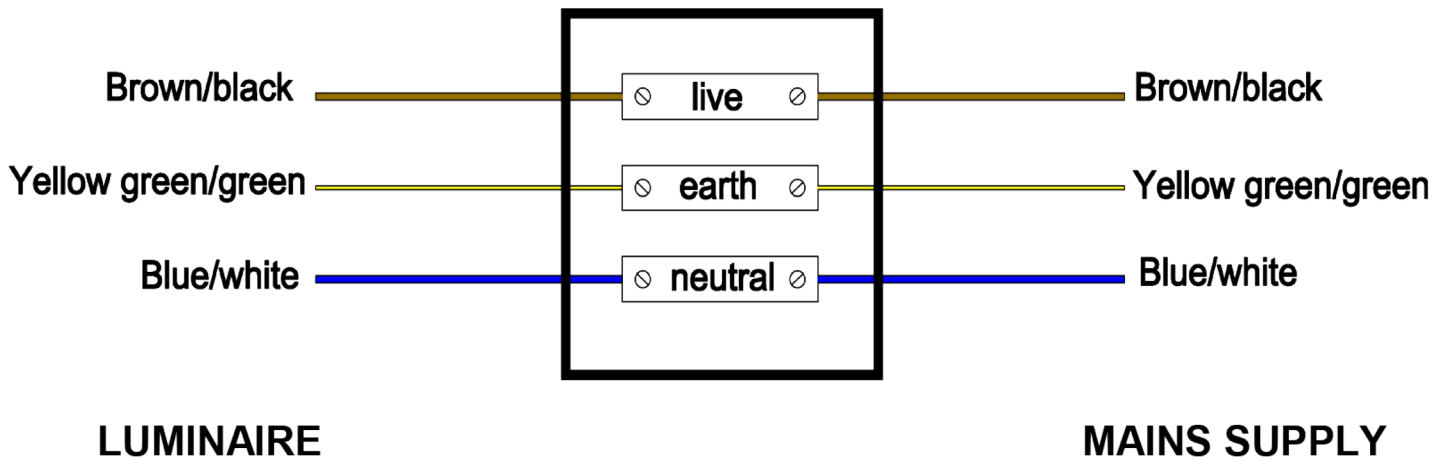


Fig. 3

## Schematic diagram

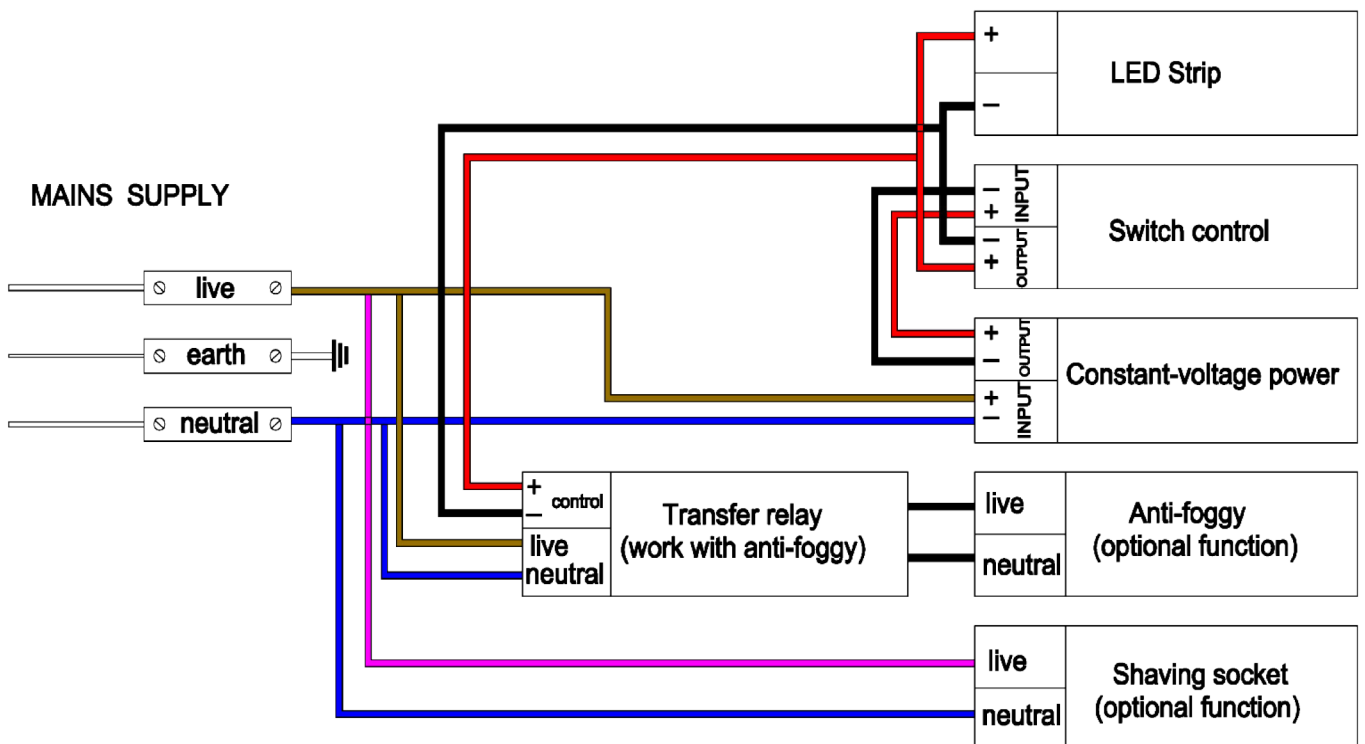

## Warm tips:

1. During operation, never put hard and sharp materials directly against the mirror surface, or otherwise, it may result in current leakage and even personal injury accident.
2. Never forget to turn off the power switch in storm days, or otherwise, lighting may damage electric elements of the product.
3. During normal operation, never forcibly pull out the power plug to stop the product, or otherwise, electric elements of the product may be damaged.
4. Please pull out the power plug if the product is not used for a long time.


# Installation Instruction

## Light Mirror

ASSEMBLY, CARE & USE




### Package contents:

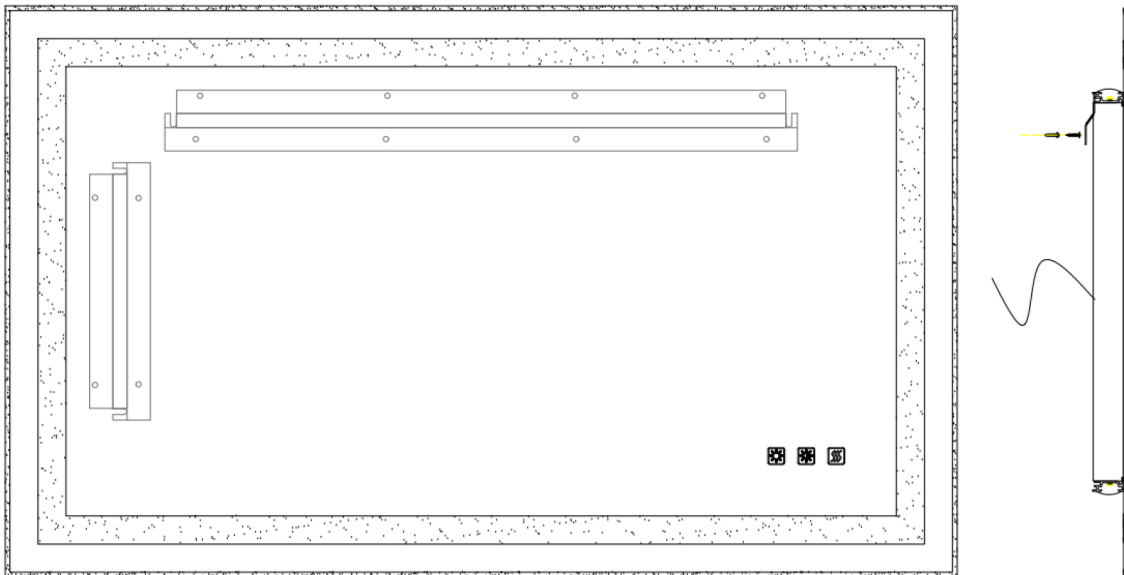

PART	DESCRIPTION	QUANTITY
A	Mirror	1
B	Main Body	1

**HARDWARE CONTENTS:**

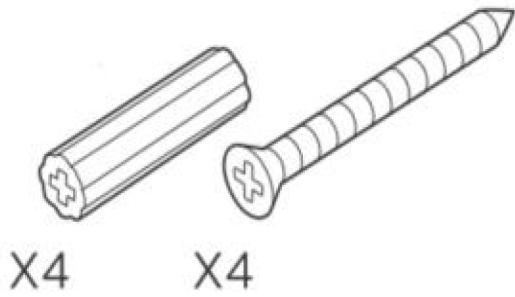

PART	DESCRIPTION	QUANTITY
AA	Wall Mount Screw	4
BB	Drywall Anchor	4
DD	Screw	1



**PRODUCT SPECIFICATION:**

Power Input: 110V AC, 50/60Hz


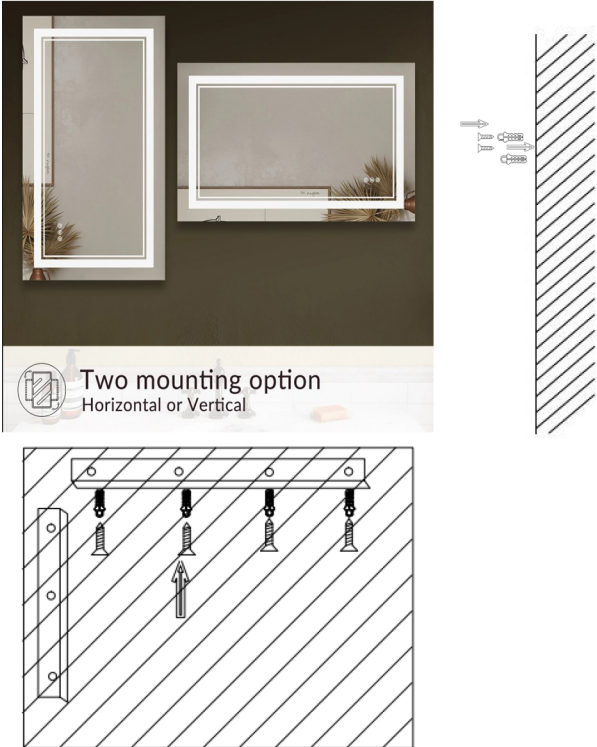
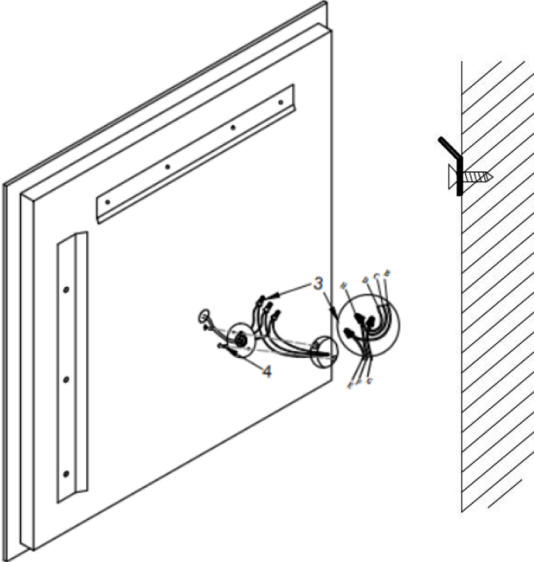
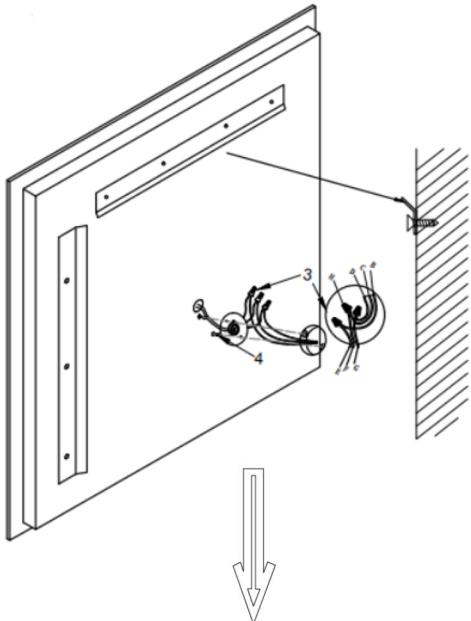
Wattage: 24W

Output: DC24v

LED light Color: White, Natural, Warm

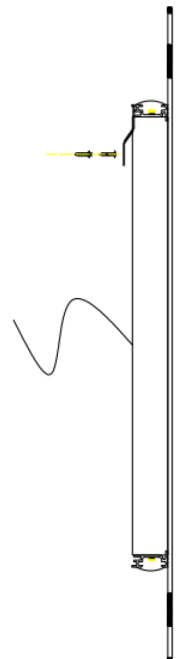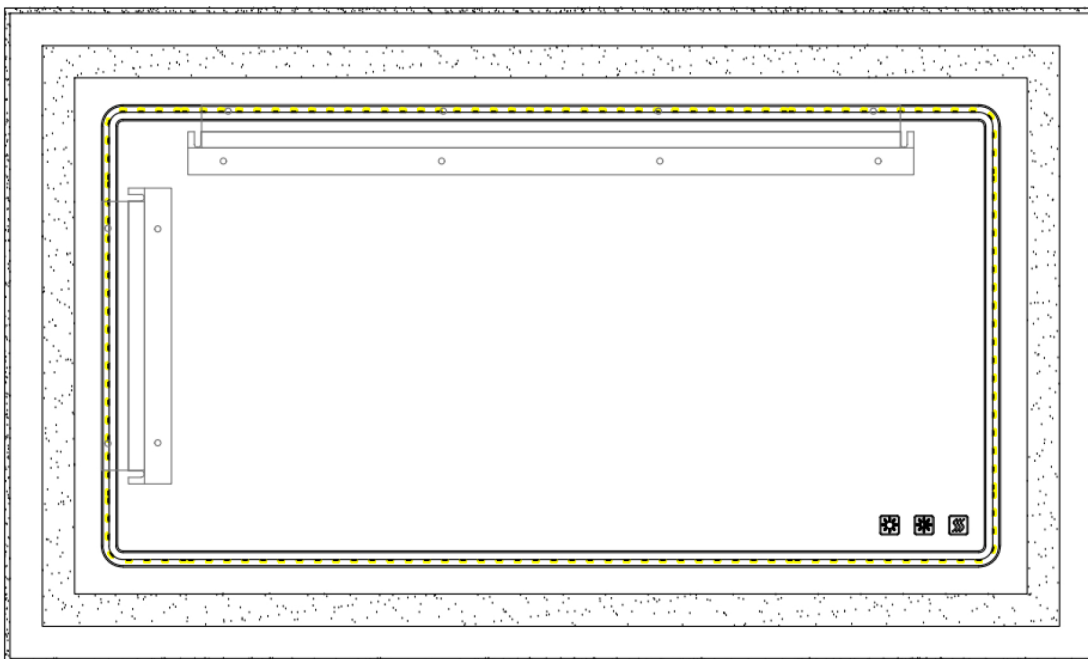

# INSTALLATION PROCESS:

	<p>①</p>  <p>Two mounting option Horizontal or Vertical</p>
<p>②</p> 	<p>③</p>  <p>Hang the mirror on screws into the wall</p>

## **SAFETY INFORMATION:**

Please read and understand this entire manual before attempting to assemble, operate or install the product.

This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

## **IMPORTANT SAFETY INSTRUCTIONS:**

When using an electrical furnishing, basic precautions should always be followed, including the following:

Read all instructions before using this mirror.

**DANGER** – To reduce the risk of electric shock:

1. Always unplug the power cord before cleaning around the electrical components.


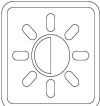

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments/accessories not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.

5. Never drop or insert any object into any opening.
6. For household and dry locations use only.
7. Do not use outdoors.
8. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.
11. **WARNING: Risk of Electric Shock – Connect this furnishing to a properly grounded outlet only. See Grounding Instructions.**
12. Keep the cord away from heated surfaces.

## FUNCTION INTRODUCTION:

1. Button Function : Anti-fog Switch ,Power Switch & Brightness Dimmer,CCT Dimmer.

2.  Power Switch: Short press to control the light switch; Long press to adjust the brightness of the two-color lamp.
3.  Brightness Dimmer Switch: When the two-color temperature is turned on by the button, short press to adjust the different color temperature, long press to cyclic color selection.
4.  Anti-fog Switch: Short press to control the Anti-fog switch.

## WARRANTY:

The manufacturer warrants this item against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. This warranty applies only to the original purchaser. This warranty does not apply to any damage on the product by accident, misuse, or modified, improper installation or by affixing accessories not produced by the manufacturer. The manufacturer is not accountable whatsoever for product installation during the warranty period. There is no further expressed warranty. The manufacturer shall not be legally responsible for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. The manufacturer disclaims any and all implied warranties.