

Womier

Womier SK65

A 65% Gasket Mounted Wireless Aluminum Keyboard

USER MANUAL

1.Keyboard Features

- A 65% Gasket Mounted Wireless Aluminum Keyboard with Knob
- CNC machined aluminum body with elegant design
- Tri-mode Universal Connectivity & Multimedia Knob
- Gasket mounting style and multi-layered sound absorbing foam included
- Support customization for keymapping, macros and backlight via software
(Software Downloading: <https://womierkeyboard.com/pages/software>)

2.Mode Setting and Repairing



2.4G mode: switch to "ON"

Plug the 2.4G adapter into the USB-A port of the device, and press FN+R briefly to use it.

Re-coding: Long press FN+R to switch to 2.4G coding mode, the R key blinks rapidly, plug in the 2.4G adapter, and stop blinking after successful coding.

Bluetooth mode: switch to "ON"

1) Long press FN+Q, W, E to switch to BT1,2,3, the corresponding key will flash rapidly, stop flashing after successful code pairing.

2) Short press FN+Q,W,E to switch to Bluetooth channel, the corresponding Bluetooth channel will be connected back, the corresponding indicator light will blink slowly, and stop blinking after successful connection back.

Wired mode: switch to "OFF"

Connect the keyboard to the computer with the USB-C cable.

If you want to switch to wired connection when the keyboard is in other modes, you need to connect the computer and keyboard with USB-C cable and then press FN+TAB briefly to switch to wired mode.

Power saving instructions:

In wireless mode, if no key was pressed for 2 minutes, the keyboard enters standby mode and the keyboard backlight will turn off automatically;

 
30 minutes without operation, the keyboard will enter deep hibernation, at the same time disconnect 2.4G or Bluetooth, turn off all LEDs, press any key to exit hibernation;

Wired mode never hibernate.


3. Indicator Lights

- Caps Lock light is at Caps key, which lights up white when turned on.
- Win Lock light at Win key, the key lights up white when turned on.
- Charging light is at FN, it lights red when charging, green when fully charged, and flashes red when low voltage.
- Wireless code pairing light is at Q/W/E/R key, these key flash white light fast when code pairing.

4. Light Settings



Switch backlight mode

 

Switch backlight color



Switch backlight speed



Switch backlight brightness

Game lighting and customized lighting settings	FN+ Right shift+1	Customized Lighting 1
	FN+ Right shift+2	Customized Lighting 2
	FN+ Right shift+3	Game Lighting 3
	FN+ Right shift+4	Game Lighting 4
	FN+ Right shift+5	Game Lighting 5
	FN+ Right shift+6	Game Lighting 6
FN+N: Light Recording/ Saving	First select the lighting mode you want to customize, then press FN+N to start recording. Press the key you want to customize to change the color, then press FN+N to save.	

5. Knob Multimedia Function

- Press and hold the knob until the Del indicator flashes white three times, and press the knob briefly to select the light mode. Turn the knob clockwise to increase the brightness of the backlight, and counterclockwise to decrease the brightness of the backlight.
- Press and hold the knob until the Del indicator flashes white three times, rotate the knob to adjust the volume. Turn the knob clockwise to increase the volume and counterclockwise to decrease the volume. Short press the knob to turn on the sound and mute.

6.Other Fn Key Combinations

FN+ESC=`~	FN+DEL=INS	FN+L=Page Up
FN+ 1~ =+ = F1~ F12	FN+U=Print Screen	FN+.>=Page Down
FN+A= Switch to WIN system	FN+I=Scroll Lock	FN+PGUP=HOME
FN+Space= Turn on/off backlight	FN+O=Pause Break	FN+PGDN=END
FN+ESC= Hold 3 seconds to restore factory setting	FN+J=Insert	FN+,<=End
FN+Left Ctrl= Switch between F keys and Numerical zone	FN+K=Home	FN+M=Delete
FN+Z=Turn off/on composite indicator lights (Charging indicator FN, Lock Win key, Caps Lock key, etc.). Follows the backlight change when off.		
FN+X=Power indicator mode (valid in wireless mode and not charging). Number 1-0 will light up red, and a full charge will light up all the numbers.		
FN+S=Switch to macOS (S key light up), left ALT and left WIN swap positions		
FN+WIN=Lock/unlock WIN key (WIN key light up)		

FN combination key	Windows	macOS
FN+F1	My computer	Screen brightness-
FN+F2	Home	Screen brightness+
FN+F3	Mail	\
FN+F4	Calculator	\
FN+F5	Player	\
FN+F6	Pause	\
FN+F7	Previous song	Previous song
FN+F8	Play/Pause	Play/Pause
FN+F9	Nest song	Nest song
FN+F10	Mute	Mute
FN+F11	Volume-	Volume-
FN+F12	Volume+	Volume+

www.womierkeyboard.com



www.instagram.com/womier_keyboard



www.facebook.com/WomierKeyboard



Womier Keyboard