

How to clean the strainer filter

1



① Disconnect the strainer filter from the hose and valve.

2



② Open the white cap.

3



③ Brush the filter

4



④ Close the white cap

5



⑤ Connect to the hose and valve