



## Disassemble the bidet part from the toilet

1-1. Disassemble the bidet part

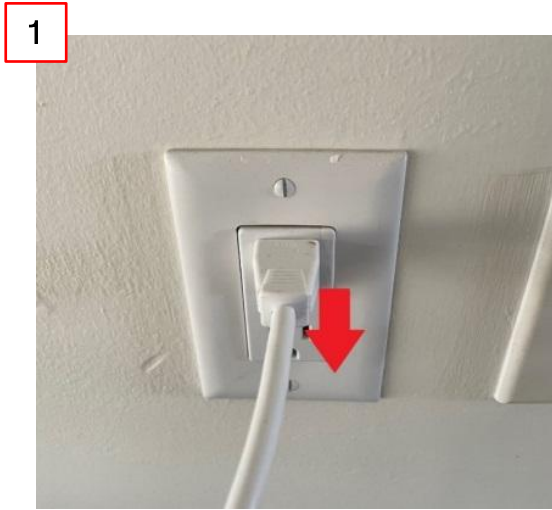

① Unplug the power cord

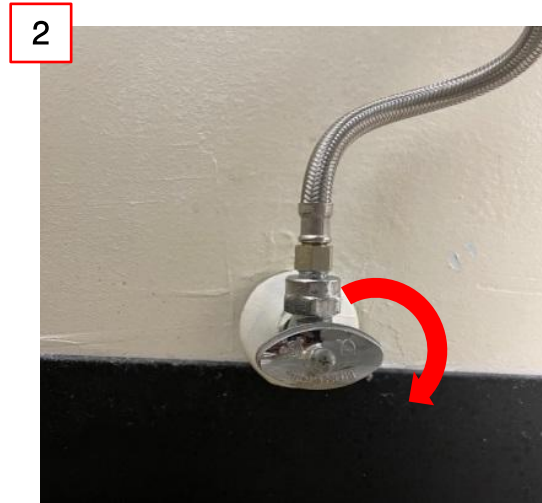


② Close the water valve and press the flushing manual button to remove the pressure.



## Disassemble the bidet part from the toilet

1-2. Disassemble the bidet part

3

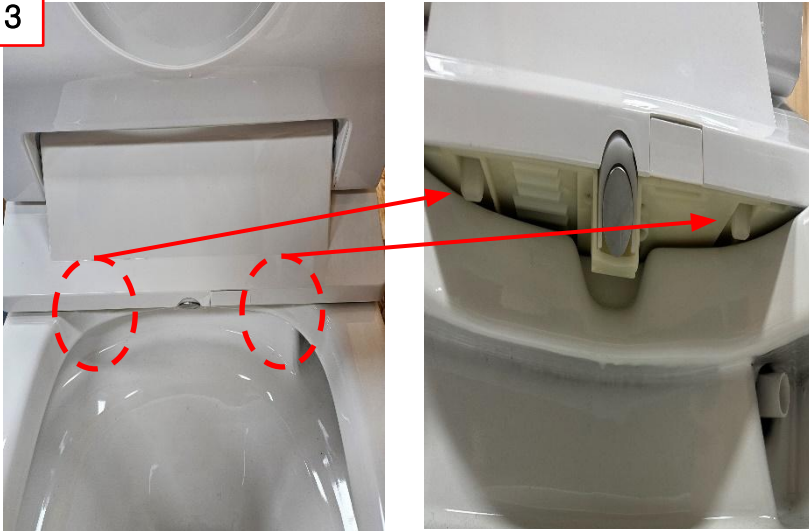

③ Pull both latches under the bidet and pull up the

4



④ Pull up the bidet part to disassemble the bidet from the



## Disassemble the bidet part from the toilet

### 2-1. Disconnect the hose

1



2

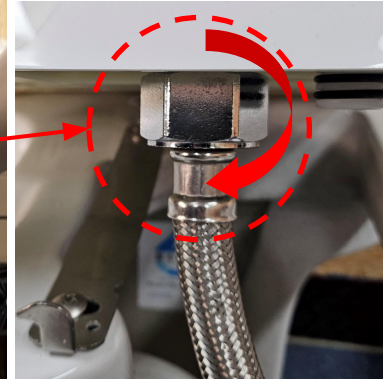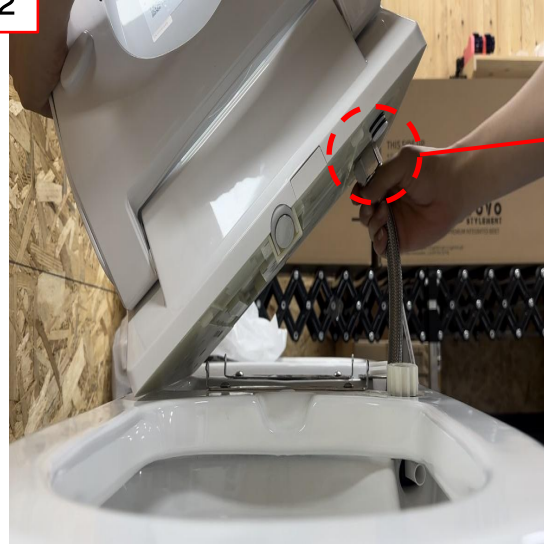

① Hold the product diagonally.

② Turn the nut counterclockwise to untighten.

## Disassemble the bidet part from the toilet

### 2-2. Disconnect the hose

3



③ Pull the hose down to completely disconnect it.

4



④ After disconnecting the hose, do not place the product as above as water can flow inside the unit.