



HOW TO RESOLVE HEATED SEAT MALFUNCTIONING-BIDET TOILET

How to resolve heated seat malfunctioning


1. Open the cover base

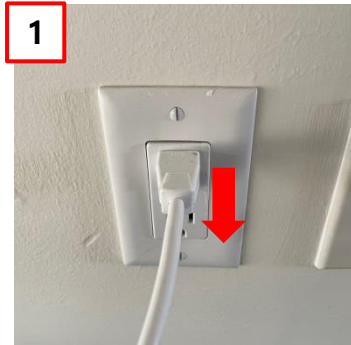

① Unplug the cord

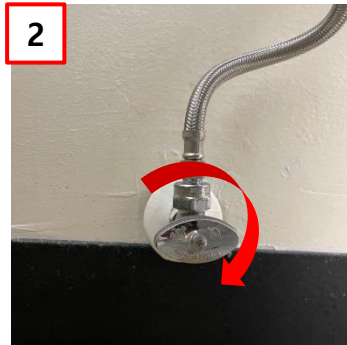


② Close the water valve clockwise

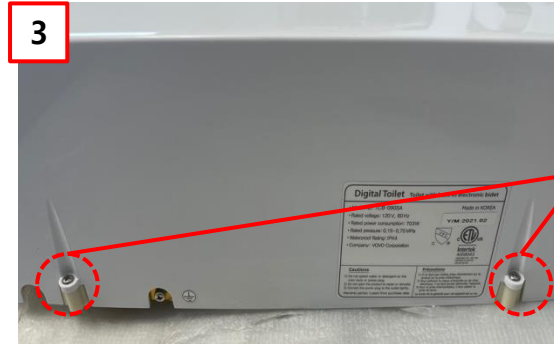

③ Unscrew the 2 screws at the back using a Philips head driver.



④ Detach the cover base by pulling it to the arrow direction as above.

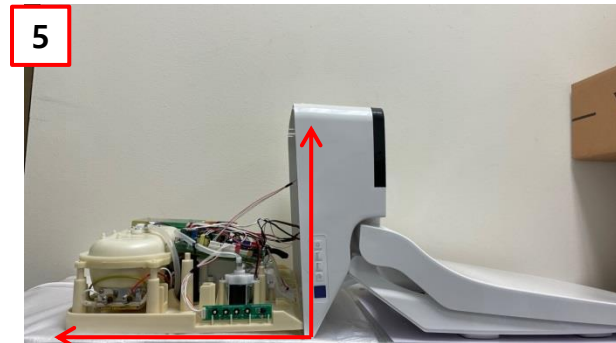


⑤ Make sure that the degree between the ground and the cover base is shown as in the above picture to avoid any wire damage.



[Click for the Video Guide](#)

How to resolve heated seat malfunctioning


2. Check the seat harness

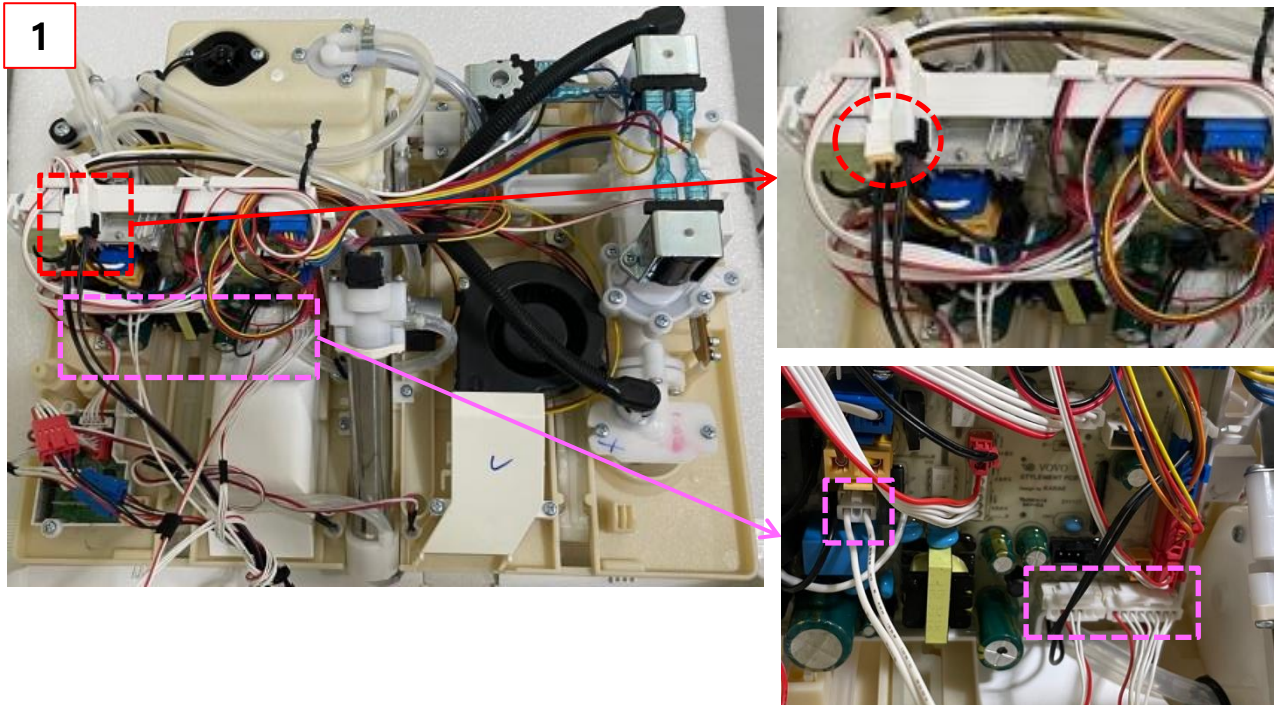

① Check the connection between MAIN PCB and the seat wire harness.

How to resolve heated seat malfunctioning

5. Close the Cover Base

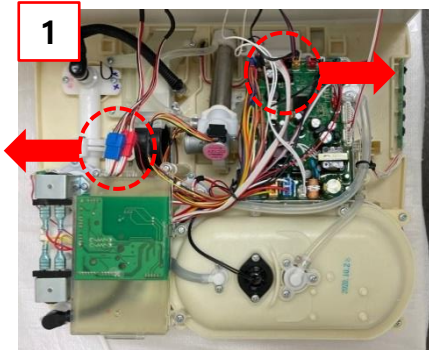


① Organize all the wires in the directions as above not to interfere the nozzle movement.





② Close the cover base in the arrow direction as above.



③ Push down using your palms as above to hear clicks.

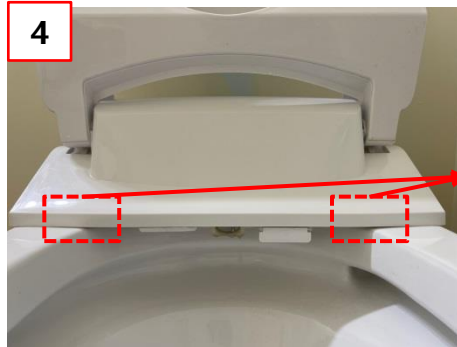

④ Check whether the cover base is assembled perfectly. If you heard clicks, it's perfectly done.

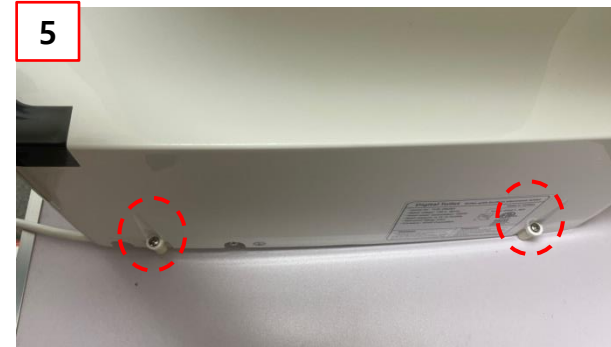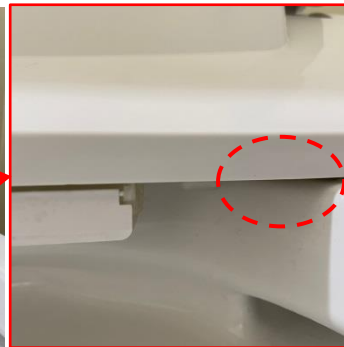

⑤ Screw the 2 screws back using a Phillips head driver.



[Click for the Video Guide](#)