


HOW TO CHANGE THE AIR VENT VALVE FOR BIDET TOILET

[Click for the Video Guide](#)




How to change the AIR VENT VALVE

1. Open the cover base

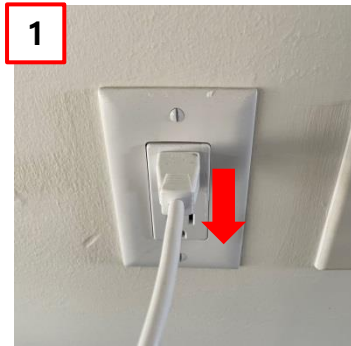

① Unplug the cord

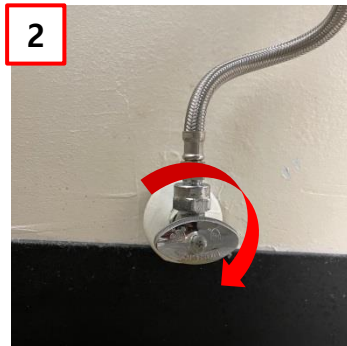


② Close the water valve clockwise



③ Unscrew the 2 screws at the back using a Philips head driver.



④ Detach the cover base by pulling it to the arrow direction as above.

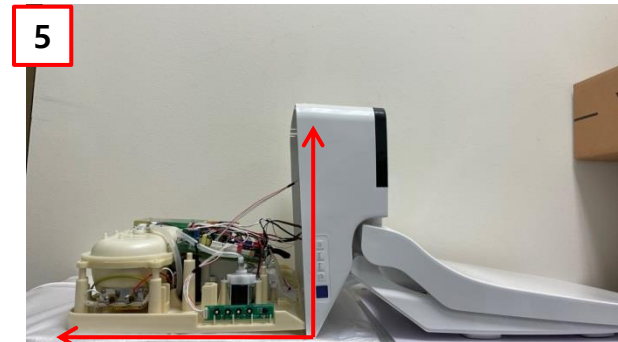


⑤ Make sure that the degree between the ground and the cover base is shown as in the above picture to avoid any wire damage.



[Click for the Video Guide](#)

How to change the AIR VENT VALVE


2-1. Replace the AIR VENT VALVE

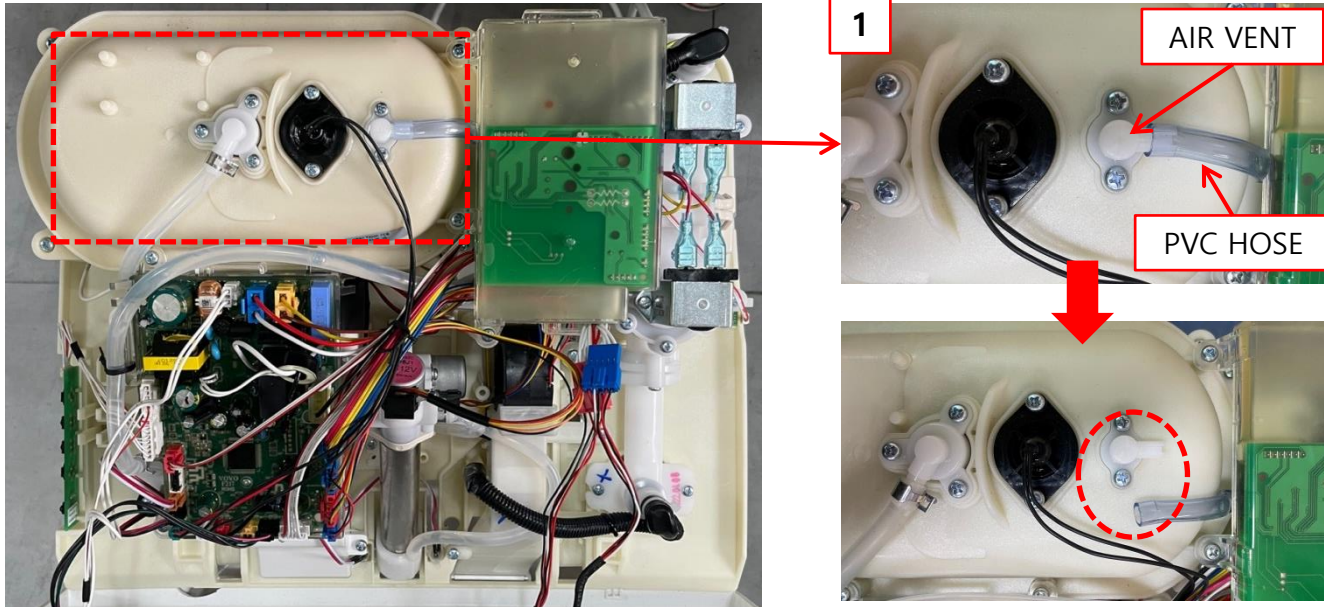

① Detach the PVC HOSE that is connected with the AIR VENT

How to change the AIR VENT VALVE


2-2. Replace the AIR VENT VALVE

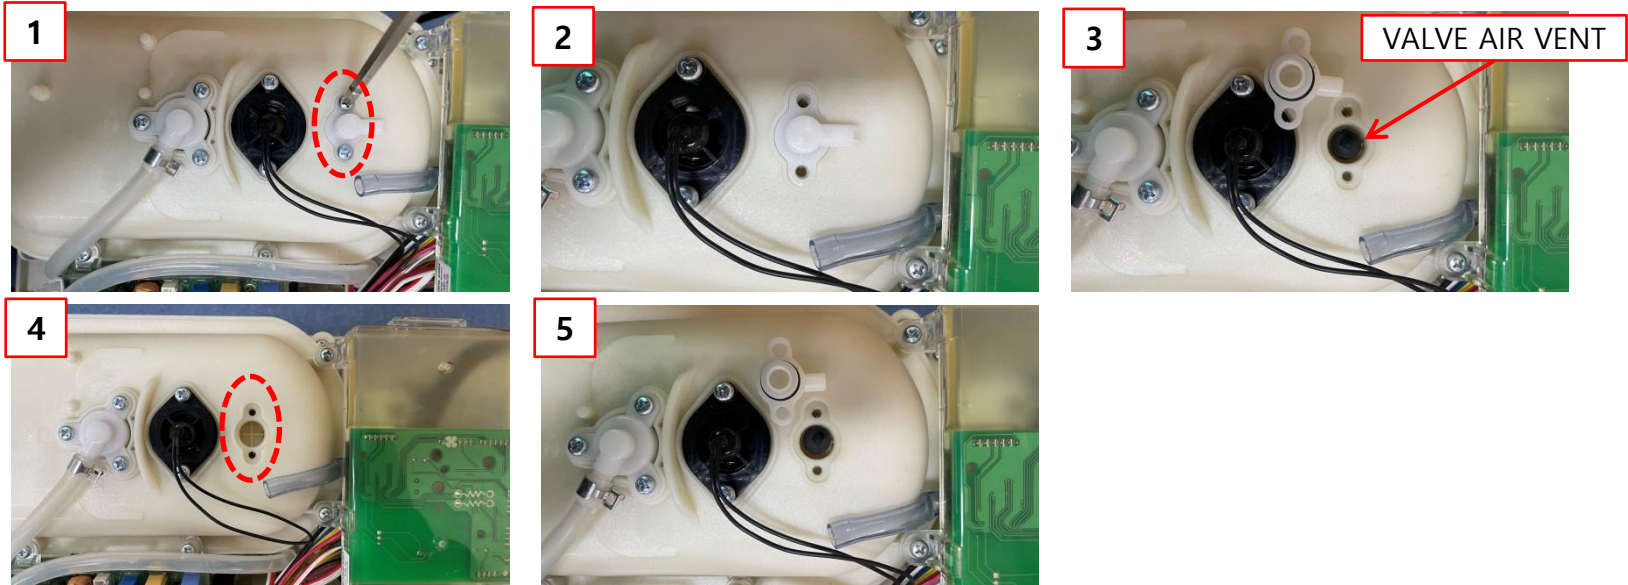

- ① Detach the 2 screws that is connected with AIR VENT
- ② Detach the AIR VENT
- ③ Remove the AIR VENT VALVE
- ④ Clean the Tank near are to see if there is any debris or particles, if so, please remove them.
- ⑤ Insert the VALVE AIR VENT

How to change the AIR VENT VALVE


2-3. Replace the AIR VENT VALVE

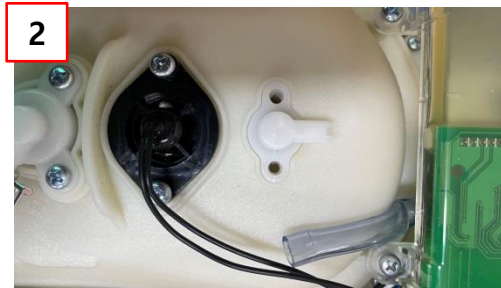

- ① Reattach the AIR VENT (Make sure that the AIR VENT VALVE is not pressed)
- ② Check the reattached AIR VENT
- ③ Screw the 2 screws back to the AIR VENT
- ④ Reattach the PVC HOSE to the AIR VENT

How to change the AIR VENT VALVE

3. Close the cover base

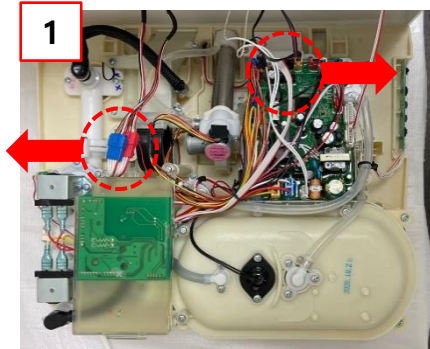


① Organize all the wires in the directions as above not to interfere the nozzle movement.



② Close the cover base in the arrow direction as above.



③ Push down using your palms as above to hear clicks.

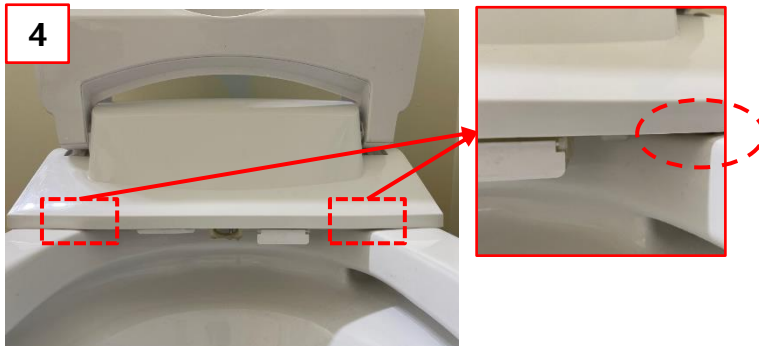

④ Check whether the cover base is assembled perfectly. If you heard clicks, it's perfectly done.



⑤ Screw the 2 screws back using a Phillips head driver.



[Click for the Video Guide](#)

How to change the AIR VENT VALVE

4. Turn on the Water shutoff valve and plug the cord



① Fully open the water valve in counterclockwise.

If the supply water pressure is too high, it may cause malfunction.
Please check the supply water pressure and adjust the valve just enough to flush.

② Plug the cord back in

! Please test the function again at this stage. If the problem is not resolved, please contact our customer support team so that we can provide a replacement unit with a prepaid return label.