


How to remove water inside the hot water tank

1. Remove residual water pressure in the bidet seat and water hose

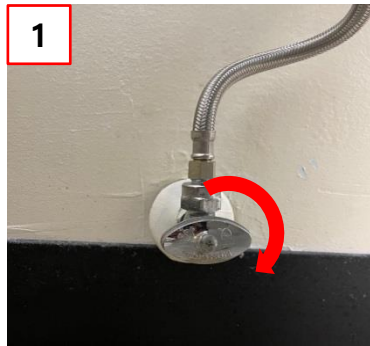


Close the water valve




Check the seat sensor location




Press the entire seat sensor label.

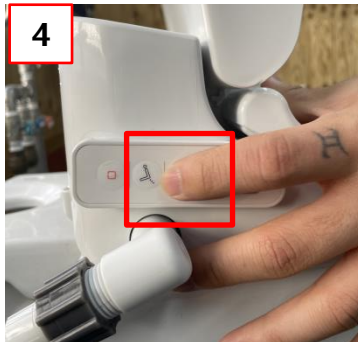

Press the feminine button while pressing the seat sensor

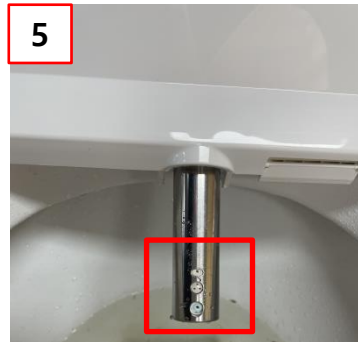

Wait for the water to come out of the nozzle and stop.

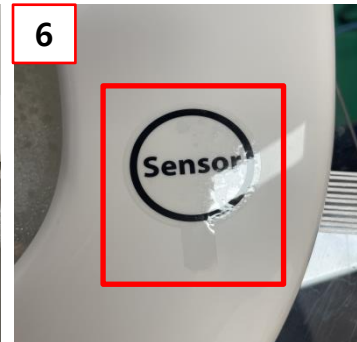


Remove the hand from the seat sensor. (Nozzle goes in)



Nozzle fully retracted.

How to remove water inside the hot water tank


2. Removes water inside the hot water tank

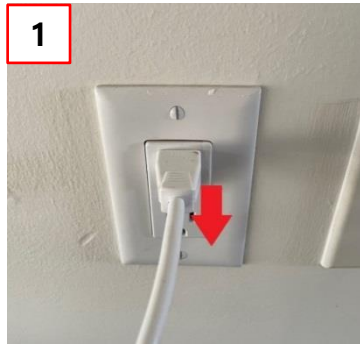

1 Unplug the power cord



2 Loose the hose from the bidet toilet seat

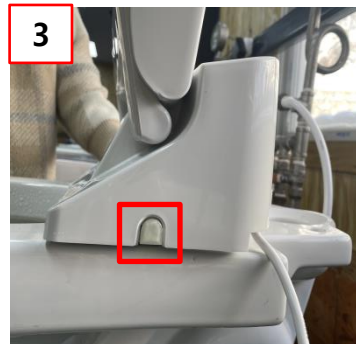


3 Press the button located on the side of the bidet



4 Slide to arrow direction while pressing the button



5 Push the bidet back so that the bottom of the bidet is visible. (Angle: 45 degrees)

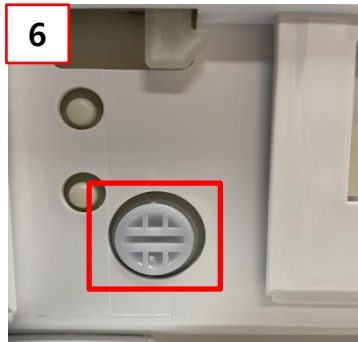

6 Check the drain cap



7 Cap drain groove (13mm*2mm)
Please use coin or flat screwdriver to unscrew the cap



8 Wait until the water inside the tank is completely removed.



9 Tighten the drain cap by turning it in the direction of the arrow.