

Please register your product at www.vovo-eu.com to receive full warranty benefit.



VOVO STYLEMENT USER MANUAL

- **VB-6000SE (elongated)**
VB-6100SR (round)
- **VB-4000SE (elongated)**
VB-4100SR (round)

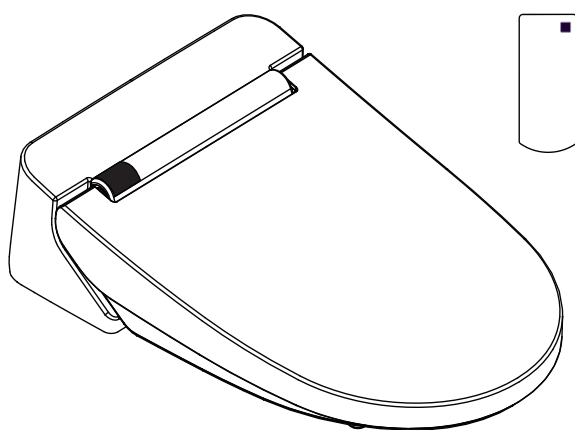
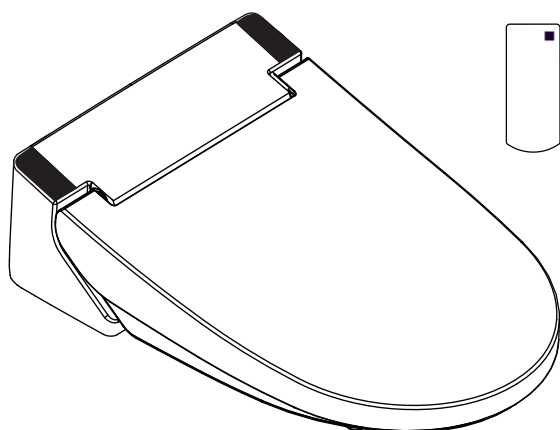


TABLE OF CONTENTS


| | |
|------------------------|----|
| Product Characteristic | 2 |
| Safety Precautions | 3 |
| Name of Parts | 6 |
| Installation Method | 8 |
| How to Use | 10 |
| Maintenance | 15 |
| Troubleshooting | 16 |
| Specifications | 19 |
| Limited Warranty | 20 |
| VOVO Warranty | 21 |

- ※ Thank you for choosing our bidet.
- ※ This manual includes the warranty. Keep the manual to receive customer service.
- ※ Read this manual carefully before use.

To Our Customers

- Thank you for choosing our bidet.
- For your own safety, please read this manual carefully.
- Please refer to this manual if you have any questions while using the product.
- We are not responsible for damages caused by misuse.
- Product warranty is included in this manual. Please do not lose it.

Product Characteristic

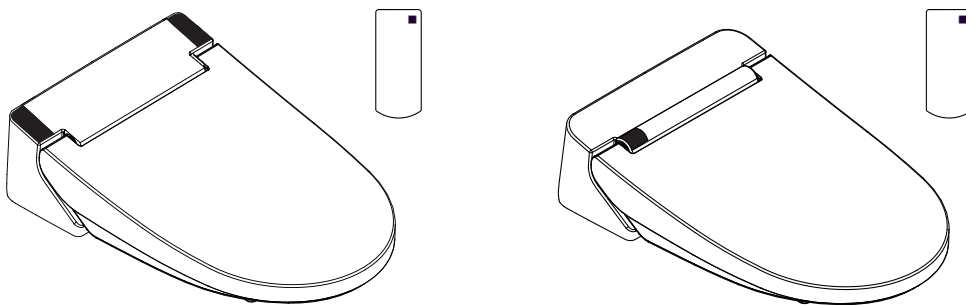

VB-6000SE (elongated)

VB-6100SR (round)

Posterior wash / Feminine wash /
Turbo wash / Dry / UV LED Sterilization

VB-4000SE (elongated)







VB-4100SR (round)

Posterior wash / Feminine wash /
Turbo wash / Dry / Deodorization /
UV LED Sterilization

Safety Precautions

- Follow all safety precautions in this manual for your safety.
- Caution: In order to avoid hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by utility.

※ The following terms are used in this manual to indicate hazards of varying degree of severity.


| | |
|---|--|
|  Danger | Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. |
|  Caution | Indicates a dangerous situation where the user could suffer death or serious injury if this product is used incorrectly. |
|  Prohibited |  Indicates prohibited. |
|  Observe strictly |  Indicates to observe the following precautions before using this product. |

Danger


- Do not open the product to repair or remodel.



- Do not touch the power cord with wet hands.

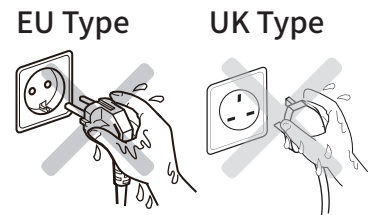

- Do not exceed the rated voltage of the outlet or the distributor.
- Connecting too many plugs will exceed the rated power and can cause fire by overheat.

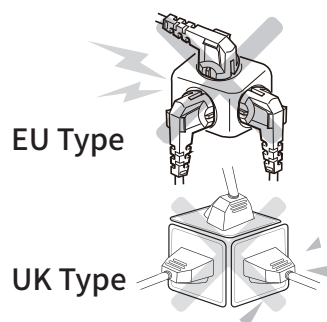


- Do not place fire such as cigarettes near the product.



- Do not splash water or detergent on the main body or power plug.



- Do not use damaged power cord, plug, or loose outlet, and do not supply power to the product which is not installed on toilet or not connected to water supply hose.

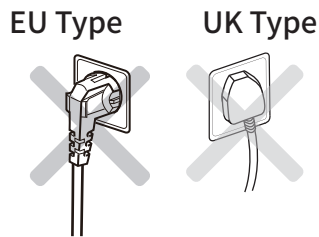


Use tap water.



- Do not connect with industrial water or gray water.

- Unplug when to repair the product.

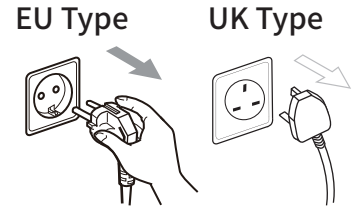

- When cleaning, use mild detergent and soft cloth.
 - Do not use the following. <household detergent, benzene, paint thinner, nylon scrubber>



Make sure the product is properly grounded.



- If the product is not grounded, it can cause electric short or electric leakage.
 - For grounding work, consult an electric technician nearby.

One of the following persons needs to have someone to turn off the temperature controller of the seat and warm air blower when using heated seat.



- Children or elderly persons who can not control the temperature appropriately by himself.
- Patients or sick persons who can not move her or his body by oneself.
- Persons on medication that make them drowsy, and fatigued and intoxicated persons.

 **Warning**

※ Do not use this product other than for purposes listed in this manual.


- Do not step on, shock, or place heavy objects on the seat, cover, or main body.



- Do not place hand or clothes on the warm air outlet.



- Unplug the main power cable when not using the product for a long time and drain water from the tank.

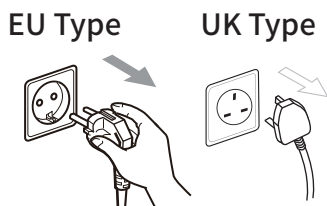


- Do not put anything else except toilet paper into the toilet.



Handle power cord carefully and do not break the cord

- Do not fabricate or assemble at user's own discretion.
- Do not bend, twist, or pull it forcibly.
- Do not place heavy objects on the cord.

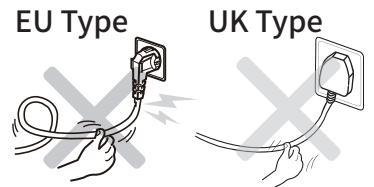


Do not continue to use the product with faults.

Unplug the power plug in the following case and call the distributor or customer service representative.

- Water leakage
- Strange odor
- Hot main body
- Smoke

Name of Parts

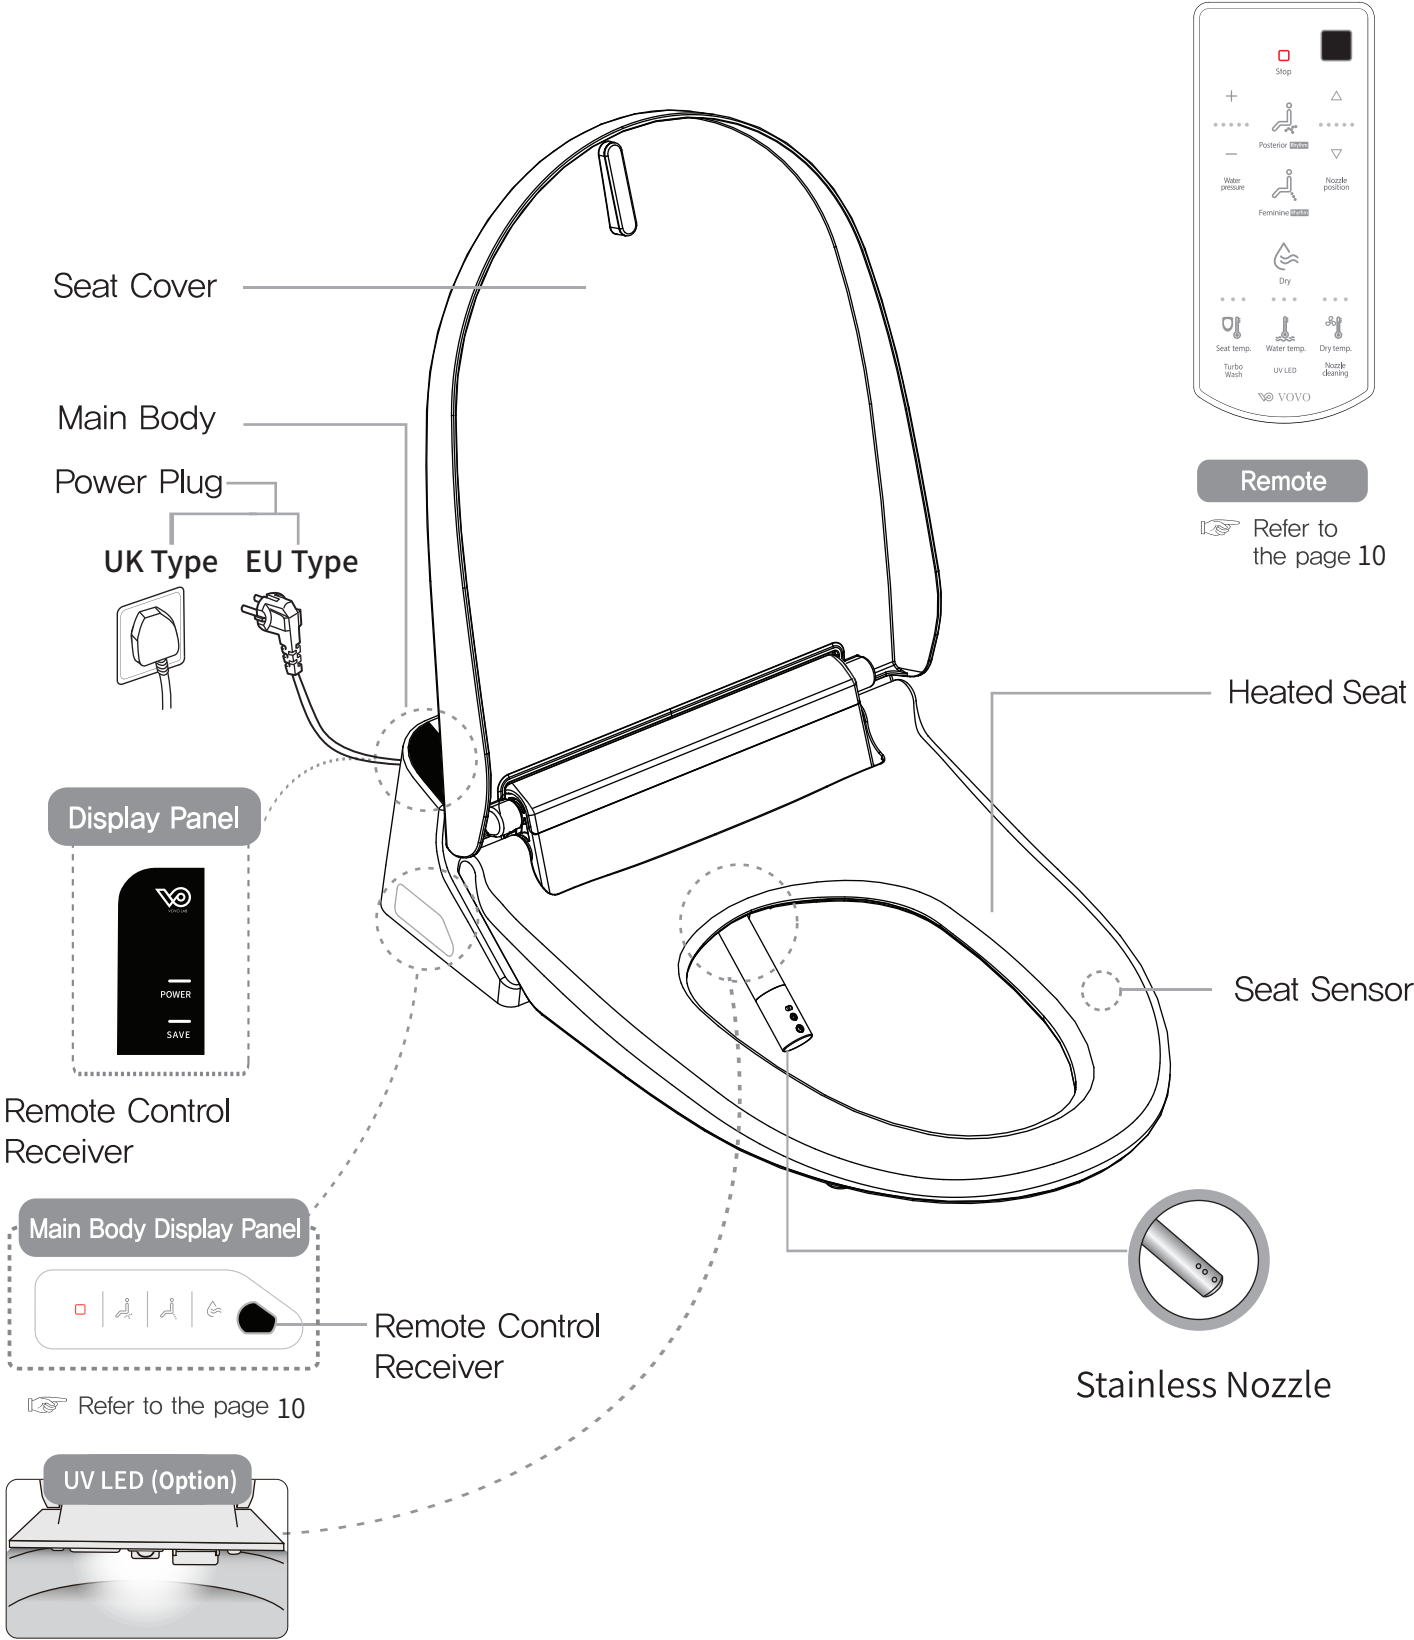

VB-400SE (elongated)
VB-4100SR (round)



Remote


Refer to the page 10

Seat Cover

Main Body

Power Plug

UK Type EU Type

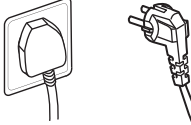

Display Panel



Remote Control Receiver


Main Body Display Panel



Remote Control Receiver


Refer to the page 10

UV LED (Option)

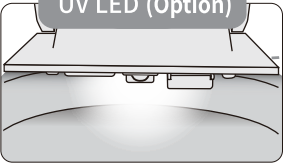

Heated Seat

Seat Sensor

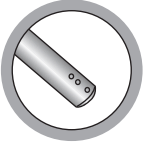







Stainless Nozzle







Installation Method

Accessories

 ※ Options may vary by country.

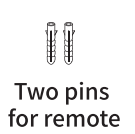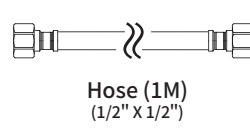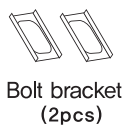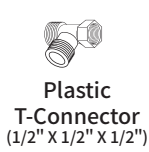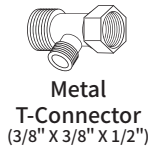


For this type of toilet

 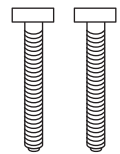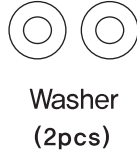
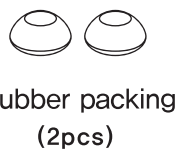


Fixing bolt (2pcs)

Fixing nut (2pcs)

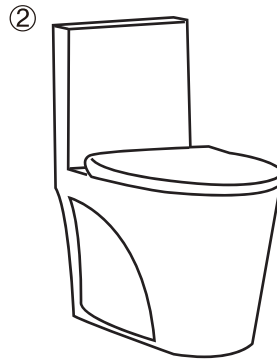

For this type of toilet

  


Insert rubber nut (2pcs)

Before Installation

- Read the instructions carefully before installing.
- Plug in only after complete installation then supply water.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


Installation Procedure

1 How to install bidet seat on basin with water flushing system.

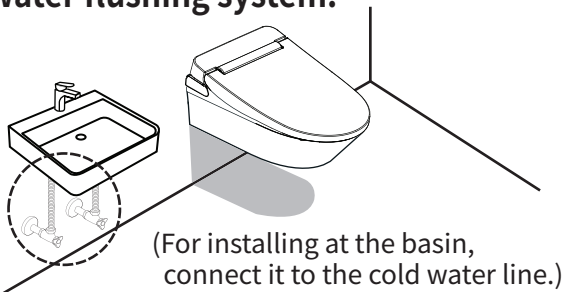


2 Connect the T-connector to the basin hose.

- Turn off the cold waterline supply valve clockwise, and disconnect the basin hose using a spanner.
- Install the T-connector between the valve and the basin hose.

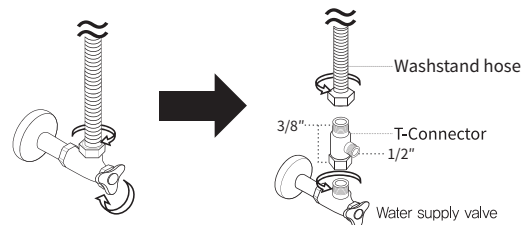


1-1 How to install bidet seat on general tank toilet.

- Turn the water supply valve clockwise to lock, and separate the toilet hose using a spanner

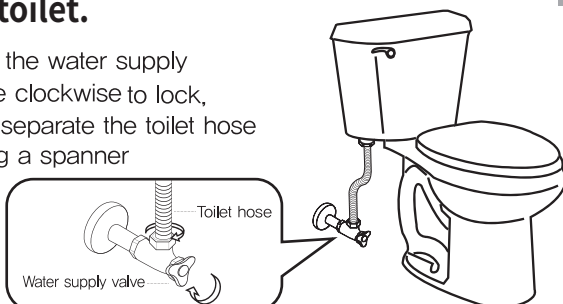


2-1 Connect the T-valve to the toilet and toilet hose

- Place the T-Connector between the toilet and the toilet hose

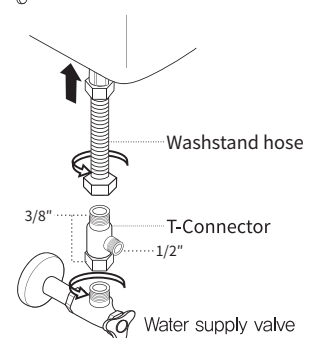


3 Remove the existing toilet seat.

- Unfasten the nut and remove the toilet seat.
- Save the old toilet seat lid and nuts for reinstallation later.
- Place the template on the toilet after removing the toilet seat cover.

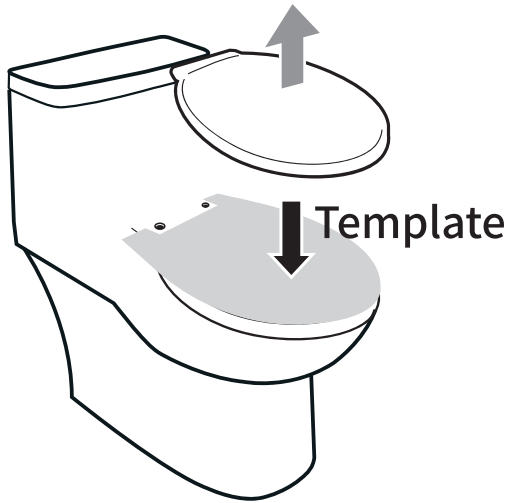


4 Install the base bracket.

- Place the fixing bolt on the base bracket.
- Align the front of the bidet body and the front of the toilet before fastening the nuts.

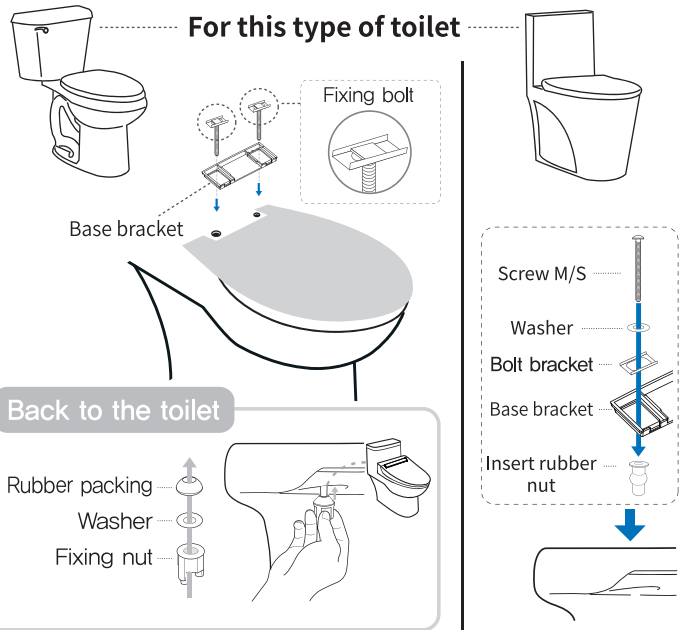

5 Install the bidet and secure the remote control holder

- Slide the bidet and install it.

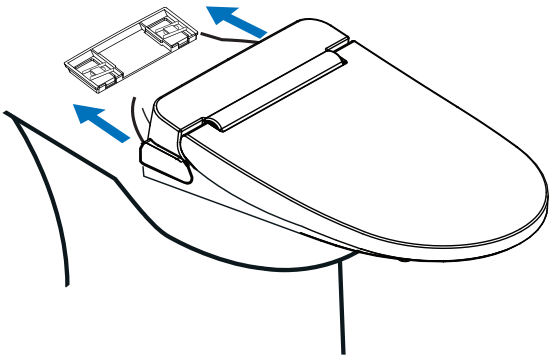


- Secure the remote control holder to the wall with screws or peel off the double-sided tape sticker on the back of the remote

Open the water valve first and then plug-in the power.

6 Connect the hose and turn on the water

- Connect the hose to the T-Connector and the bidet.
- Turn the water supply valve counterclockwise to allow water flow.
- Connect the outlet.

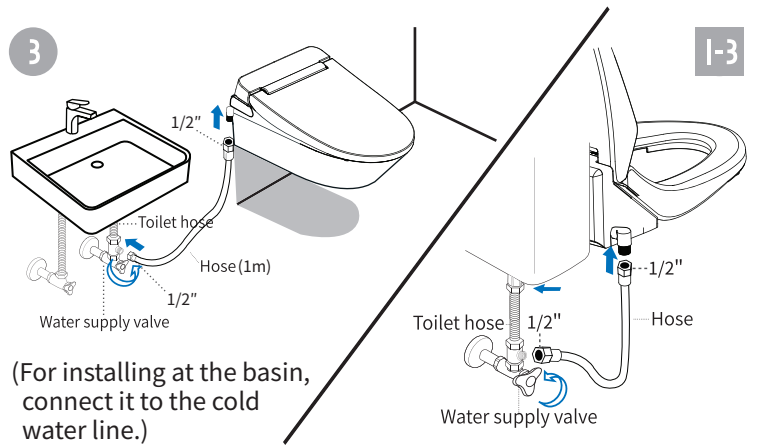

Operation Check

1. Turn the water supply valve counterclockwise to check for water leakage.
2. Connect the power plug into electrical outlet.
3. Pressing the Posterior button will make water flow into the water tank.
4. Check the functions of ter each use.

How to Use

VB-6000SE (elongated) VB-6100SR (round)

VB-4000SE (elongated) VB-4100SR (round)

Stop

Press the Stop button when you want to stop the function.

Dry

Use this after using wash function

- Wipe off the water with toilet pap before using dry function for pleasant using.

Water Pressure, Nozzle Position

- Can control in 5 levels of water pressure and nozzle position.

Water Pressure and Nozzle Position Adjustment

- Water pressure and nozzle position can be adjusted in 5 levels.




UV LED Light (Option)

- UV LED eliminates germs and bacterias as well as sterilizing the bowl.
- When UV LED function is activated, UV LED will turn on and it will automatically turn off while seated.

※ Power save ※

- Power save mode will set the water/seat temperature to 30°C, saving energy when not in use.
- The temperature will go back up to the setted mode once it detects movement on the sensor.

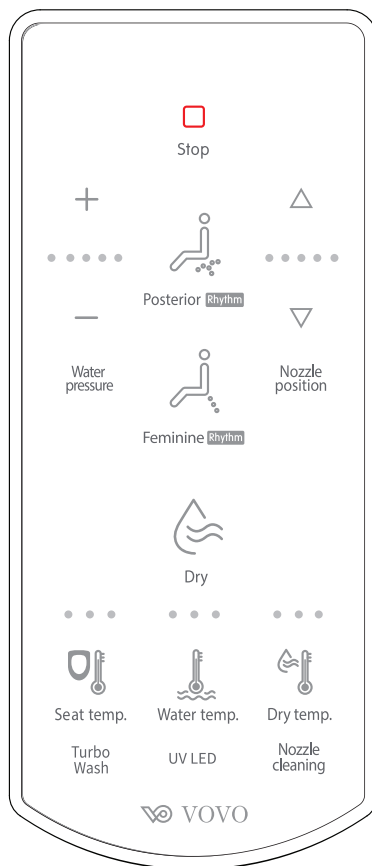

Posterior/Rhythm

- Press Posterior/Rhythm button, to operate washing function.
- Press Posterior/Rhythm button again during using this function. Rhythm(Pulsating) function will work.

Feminine/Rhythm

- Press Feminine/Rhythm button, to operate Feminine function.
- Press Feminine/Rhythm button again when during using this function, Rhythm(Pulsating) function will work.

Turbo Wash

- Press Turbo button, Turbo wash will operate.
- It starts from the lowest water pressure.

Water Temperature, Seat Temperature, Dry Temperature

- 3 levels of Water Temperature / Seat Temperature / Dry Temperature



Nozzle Cleaning

- You can clean the nozzle by pressing the Nozzle cleaning button.

Auto Deodorization

(VB-4000SE, VB-4100SR)

- The default product setting is always ON on automatic deodorization.
- While someone sits on the seat (detects by the seat sensor) auto deodorization turns on and activates. If a person stands up after using the bidet (if it is not detected by the seat sensor), it will be turned off after 1 minute of operation.

※ Auto Deodorization on/off ※

(VB-4000SE, VB-4100SR)

Without a person seating on the seat, the side panel has a feature of turning on/off using the dry button.

Side Panel

Power

Press the button for 3 seconds if you wish to turn off the bidet. Press the button if you wish to stop posterior, feminine or dry function.

Power save Setting


Press the STOP button once on the side control panel of the product without seating to operate power save mode. Press the STOP button once more without seating to turn off the power save mode.

Dry

Press the button to operate the functions. The operations will stop if you press the button again.

Posterior Wash / Feminine Wash

Press the button to operate the functions. The operations will stop if you press the button again.

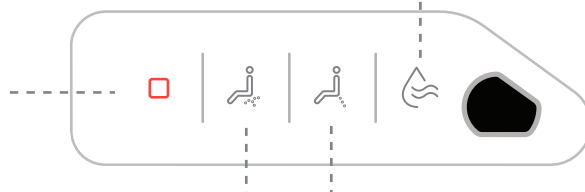

Manuel de l'utilisateur

FRENCH

VB-6000SE (modèle allongé) VB-6100SR (modèle rond)
VB-4000SE (modèle allongé) VB-4100SR (modèle rond)

Stop

Appuyez sur le bouton « Stop » pour stopper le fonctionnement en cours.

Séchage (Dry)

Utilisez le séchage après avoir utilisé la fonction de lavage

- Essuyez l'eau avec du papier toilette avant d'utiliser la fonction de séchage pour un usage agréable.

Pression de l'eau, Position de la buse

- La pression de l'eau (Water Pressure) et la position de la buse (Nozzle Position) sont réglables sur 5 niveaux.

Réglages de la pression de l'eau et de la position de la buse

- La pression de l'eau (Water pressure) et la position de la buse (Nozzle position) sont réglables sur 5 niveaux.
- Plus faible ● ● ● ● Plus fort



Lumière LED UV (Option)

- La LED UV tue les germes et les bactéries et stérilise le bol.
- Lorsque les fonctions de la lumière LED d'UV est activée, celle-ci va être allumée et s'éteint automatiquement lorsqu'on s'assoit.

Tableau latéral


Alimentation (marche)

Appuyez sur le bouton pendant 3 secondes si vous souhaitez éteindre les toilettes.

Appuyez sur le bouton si vous souhaitez arrêter les fonctions de nettoyage « Postérieur » et « Zone intime de la femme », ainsi que la fonction de séchage.

Mode d'économie d'énergie

Sans vous asseoir sur les toilettes, appuyez une fois sur le bouton « Stop », situé sur le tableau de commande latéral, afin d'activer le mode d'économie d'énergie. Toujours sans vous asseoir, appuyez une fois de plus sur le bouton « Stop » pour éteindre le mode d'économie d'énergie.

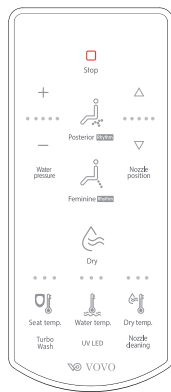

Désodorisation automatique

(VB-4000SE, VB-4100SR)

- Le réglage par défaut du produit désodorisant est toujours activé sur la désodorisation automatique.
- Lorsque l'utilisateur s'assoit sur le siège (détection par le capteur du siège), la désodorisation automatique s'active et se met en marche. Si l'utilisateur se lève après avoir utilisé les toilettes (s'il n'est pas détecté par le capteur du siège), cette fonction sera automatiquement désactivée après 1 minute de fonctionnement.

※ Économie d'énergie ※

Le mode d'économie d'énergie règle la température de l'eau/du siège à 30 °C, ce qui permet d'économiser de l'énergie lorsqu'il n'est pas utilisé. La température remontera au mode réglé une fois qu'elle aura détecté un mouvement sur le capteur.

※ Désodorisation automatique marche/arrêt ※

(VB-4000SE, VB-4100SR)

Sans utilisateur assis sur les toilettes, il est possible d'activer ou de désactiver la désodorisation automatique en appuyant sur bouton « Séchage », qui fait office de mise en marche/arrêt.



Postérieur / Nettoyage à impulsions

- Appuyez sur le bouton « Posterior/Rhythm » pour que la fonction de nettoyage du postérieur s'active.
- Appuyez de nouveau sur ce bouton durant l'utilisation de cette fonction afin d'activer celle du nettoyage à impulsions.

Zone intime de la femme / Nettoyage à impulsions

- Appuyez sur le bouton « Feminine/Rhythm » pour que la fonction de nettoyage intime de la femme s'active.
- Appuyez de nouveau sur ce bouton durant l'utilisation de cette fonction afin d'activer celle du nettoyage à impulsions.

Nettoyage turbo

- Appuyez sur le bouton « Turbo Wash » pour que la fonction de nettoyage turbo s'active.
- Le jet part de la pression d'eau la plus faible.

Température de l'eau, Température du siège, Température de séchage

La température de l'eau (Water temp.), du siège (Seat temp.) et de séchage (Dry temp.) sont réglables sur 3 niveaux.

● basse 36°C ● moyenne 38°C ● haute 40°C

- Il faut du temps pour sécher complètement.

Nettoyage de la buse

- Vous pouvez nettoyer la buse en appuyant sur le bouton « Nozzle Cleaning ».

Séchage (Dry)

- Appuyez sur le bouton pour activer la fonction. Si vous appuyez de nouveau sur le bouton, son fonctionnement s'arrêtera.

Nettoyage du postérieur / Nettoyage de la zone intime de la femme

Appuyez sur les boutons correspondant pour activer les fonctions. Si vous appuyez de nouveau sur les boutons, leur fonctionnement s'arrêtera.

Detener

-Presione el botón Detener cuando desee detener la función.

Secado

-Utilice esta función después de usar la función de lavado.
-Limpie el agua con papel higiénico antes de utilizar la función de secado para un uso agradable.

Presión del agua, Posición de la boquilla

-Puede controlar en 5 niveles la presión del agua y la posición de la boquilla.

Ajuste de la presión del agua y la posición de la boquilla.

-La presión del agua y la posición de la boquilla



Luz LED UV

-La luz LED UV elimina gérmenes y bacterias a la vez que esteriliza la taza.
-Cuando la función LED UV esté activada, el LED UV se encenderá, y se apagará de manera automática mientras esté sentado.


Panel lateral

Encendido

Presione el botón durante 3 segundos si desea apagar el bidé. Presione el botón si desea detener la función de lavado posterior, lavado femenino o función de secado.

Ahorro de energía

Sin estar sentado en el asiento, presione una vez el botón DETENER del panel de control lateral del producto para encender el modo de ahorro de energía. Sin estar sentado en el asiento, presione de nuevo el botón DETENER para apagar el modo de ahorro de energía.

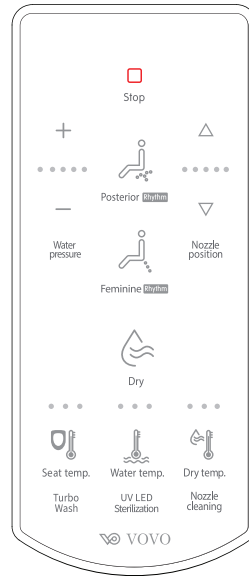

Desodorización automática (VB-4000SE, VB-4100SR)


-La configuración por defecto del producto es tener siempre encendida la desodorización automática.
-Mientras el usuario esté sentado (detectado por el sensor del asiento), se enciende y activa la desodorización automática.
-Si el usuario se levanta después de usar el bidé (si no lo detecta el sensor del asiento), se apagará después de 1 minuto de funcionamiento.

※ Ahorro de energía ※

El modo de ahorro de energía establecerá la temperatura del agua/asiento en 30 °C, ahorrando energía cuando no esté en uso. La temperatura volverá a subir al modo establecido una vez que detecte movimiento en el sensor.

※ Encendido/Apagado de la desodorización automática ※

-Sin estar sentado en el asiento, el panel lateral dispone de una función de encendido y apagado con el uso del botón de secado.

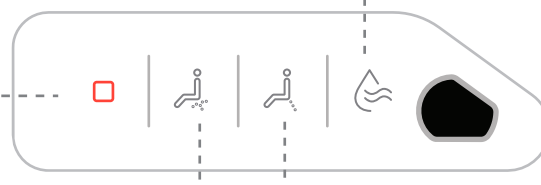

Posterior/Ritmo

-Presione el botón Posterior/Ritmo para activar la función de lavado posterior.
-Presione el botón Posterior/Ritmo de nuevo durante el uso de este modo para activar la función Ritmo (pulsante).

Femenino/Ritmo

-Presione el botón Femenino/Ritmo para activar la función de lavado femenino.
-Presione el botón Femenino/Ritmo de nuevo durante el uso de este modo para iniciar la función Ritmo (pulsante).

Lavado turbo

-Presione el botón turbo para activar el lavado turbo.
-Inicia por la presión de agua más baja.

Temperatura del agua, Temperatura del asiento, Temperatura de secado

-3 niveles de temperatura del agua / Temperatura del asiento / Temperatura de secado



-Requiere tiempo para secar por completo.

Limpieza de la boquilla

-Puede limpiar la boquilla presionando el botón de limpieza de la boquilla.

Secado

Presione el botón para activar las funciones. Las funciones se detendrán si vuelve a presionar el botón.

Lavado posterior / Lavado femenino

Presione el botón para activar las funciones. Las funciones se detendrán si vuelve a presionar el botón.

Benutzungsmethode

GERMAN

VB-6000SE (verlängert) VB-6100SR (rund)
VB-4000SE (verlängert) VB-4100SR (rund)

Stop

Drücken Sie den ‚Stop‘ Knopf wenn Sie eine Funktion abbrechen möchten.

Trocknen

Nach Reinigungsfunktion verwenden
- Wischen Sie jegliches Wasser ab, bevor Sie die Trocken Funktion benutzen, für eine angenehmere Nutzung.

Wasserdruck, Düsenposition

- Kann Wasser in 5 Schritten steuern Druck und Düsenposition.

Wasserdruck und Düsenposition Anpassung

- Wasserdruck und Düsenposition kann in 5 Schritten angemessen werden.



UV LED Licht (Option)

- UV LED vernichtet Keime und Bakterien und sterilisiert Kloschüssel.
- Wenn die UV LED Funktion aktiviert ist, schaltet sich das UV LED automatisch ein- und aus beim Sitzen.


Seitenleiste

Strom

- Knopf 3 Sekundenlang drücken um Bidet auszuschalten. Knopf drücken um Hinter-, Feminin-, oder Trockner Funktion zu stoppen.

Strom Sparen

- Während dem Stehen Stop Knopf auf der Seitenblende einmal drücken, um Stromsparmodus zu aktivieren.
- Während dem Stehen Stop Knopf noch einmal auf der Seitenblende einmal drücken, um Stromsparmodus auszuschalten.

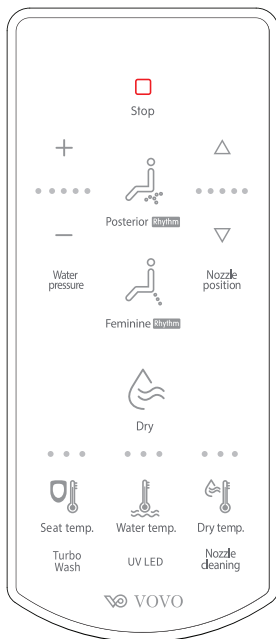

Hinter/Rhythmus

- Hinter/Rhythmus Knopf drücken um Reinigungsfunktion zu verwenden.
- Hinter/Rhythmus Knopf erneut drücken während dieser Funktion. Rhythmus (Pulsieren) Funktion wird aktiviert werden.

Feminin/Rhythmus

- Feminin/Rhythmus Knopf drücken um Feminin Funktion zu verwenden.
- Feminin/Rhythmus Knopf erneut drücken während dieser Funktion und Rhythmus(Pulsieren) wird aktiviert werden.

Turbo Reinigung

- Turbo Reinigung Drücken, Turbo Reinigung wird aktiviert werden
- Es beginnt mit dem schwächsten Wasserdruck

Wassertemperatur, Sitz Temperatur, Trockner Temperatur

- 3 Levels von Wassertemperatur / Sitz Temperatur / Trockner Temperatur



Düsenreinigung

- Sie können die Düse reinigen, in dem Sie den Düsenreinigungsknopf drücken

Trocknen

Um Funktionen zu benutzen, bitte Knopf drücken.
Funktionen werden gestoppt, wenn Sie den Knopf noch einmal drücken.

Hinter Reinigung / Feminin Reinigung

Um Funktionen zu benutzen, bitte Knopf drücken.
Funktionen werden gestoppt, wenn Sie den Knopf noch einmal drücken.

Auto Deodorisierung (VB-4000SE, VB-4100SR)

- Die Standardeinstellung des Produktes ist immer bei der automatischen Deodorisierung aktiviert. Beim Sitzen (erkannt durch Sitz Sensor) wird die Auto Deodorisierung eingeschaltet und aktiviert. Wenn Sie nach der Verwendung des Bidets aufstehen (und dies nicht vom Sitz Sensor erkannt wird), wird es innerhalb von 1 Minute eingeschalten.

※Energiespar※

Der Energiesparmodus stellt die Wasser-/Sitztemperatur auf 30°C ein und spart so Energie, wenn er nicht verwendet wird. Die Temperatur steigt wieder auf den eingestellten Modus, sobald eine Bewegung am Sensor erkannt wird.

※Auto Deodorisierung Ein/Aus※ (VB-4000SE, VB-4100SR)

Wenn auf dem Sitz nicht gesessen wird, kann die Seitenblende ein- und ausgeschaltet werden, durch das Drücken des Trockenknopfes.



Guida per l'Uso

VB-6000SE (allungato) VB-6100SR (rotondo)
VB-4000SE (allungato) VB-4100SR (rotondo)

ITALIAN

Stop

Premere il pulsante Stop se desideri fermare il funzionamento.

Asciugatura

Usare dopo la funzione di lavaggio
- Asciuga l'acqua in eccesso con carta igienica prima di utilizzare la funzione di asciugatura.

Pressione dell'Acqua, Posizione dell'Ugello

- Sono disponibili 5 livelli di pressione dell'acqua e posizione dell'ugello.

Regolazione Pressione dell'Acqua e Posizione dell'Ugello

- La pressione dell'acqua e la posizione dell'ugello possono essere impostate su 5 livelli.



Luce LED UV (Option)

- La luce ultravioletta a LED elimina germi e batteri oltre a sterilizzare la vasca.
- Quando la funzione LED UV è attivata, il LED UV si accende e si spegne automaticamente mentre si è seduti.


Pannello Laterale

Pulsante di Accensione

- Premere il pulsante per 3 secondi se desideri disattivare il bidet.
Premere il pulsante se desideri fermare il lavaggio posteriore, anteriore o l'asciugatura.

Risparmio Energetico

- Premere il pulsante STOP una volta sul pannello di controllo laterale del prodotto senza sedersi per attivare la modalità di risparmio energetico.
- Premere nuovamente il pulsante STOP senza sedersi per disattivare la modalità di risparmio energetico.

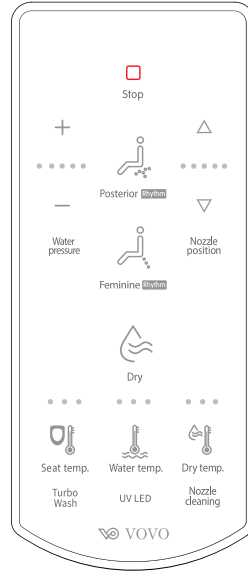

Deodorazione Automatica

(VB-4000SE, VB-4100SR)

- Per impostazione predefinita, il prodotto ha la deodorazione automatica sempre attivata. Se qualcuno si siede sul sedile (rilevato dal sensore sul sedile) si attiva la deodorazione automatica. Se una persona si alza dopo aver usato il bidet (se non viene rilevata dal sensore sul sedile), la funzione si spegnerà dopo 1 minuto di funzionamento.

※ Risparmio energetico ※

La modalità di risparmio energetico imposterà la temperatura dell'acqua/sedile a 30 °C, risparmiando energia quando non in uso. La temperatura tornerà alla modalità impostata una volta rilevato il movimento sul sensore.

※ Deodorazione Automatica on/off ※

(VB-4000SE, VB-4100SR)

Se non c'è una persona seduta sul sedile, il pannello laterale ha una funzione per accendere/spegnere la funzione di asciugatura.



Posteriore/Ritmo

- Premere il pulsante Posteriore/Ritmo, per avviare la funzione di lavaggio
- Premere il pulsante Posteriore/Ritmo di nuovo durante l'utilizzo di questa funzione.

Anteriore/Ritmo

- Premere il pulsante Anteriore/Ritmo, per avviare la funzione di lavaggio Anteriore.
- Premendo il pulsante Anteriore/Ritmo nuovamente durante l'utilizzo di questa funzione, si avvierà la funzione Ritmo (Pulsante).

Lavaggio Turbo

- Premendo il pulsante Turbo, si avvierà il lavaggio Turbo.
- All'inizio la pressione dell'acqua sarà più bassa.

Temperatura dell'Acqua, Temperatura del Sedile, Temperatura di Asciugatura

- 3 livelli di Temperatura dell'Acqua / Temperatura del Sedile / Temperatura di Asciugatura



Un'asciugatura completa richiede

Pulizia Ugello

- Si può pulire l'ugello premendo il pulsante Pulizia Ugello.

Asciugatura

Premere il pulsante per avviare le funzioni.
Il funzionamento si fermerà premendo nuovamente il pulsante.

Lavaggio Posteriore / Lavaggio Anteriore




Premere il pulsante per avviare le funzioni.
Il funzionamento si fermerà premendo nuovamente il pulsante.

Maintenance

※ Unplug the power cord when cleaning the filter.

Clean the Filter

1. Turn the water supply valve clockwise to stop water supply.
2. Release the bidet hose of the main body to separate the filter.
3. Clean the filter with toothbrush or like object.
4. Tighten the bidet hose on to the main body and turn the water supply valve counterclockwise to supply water.

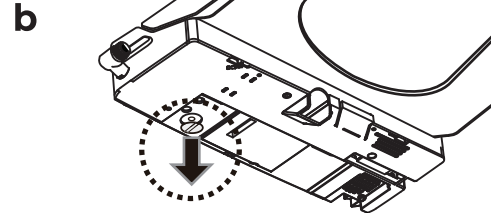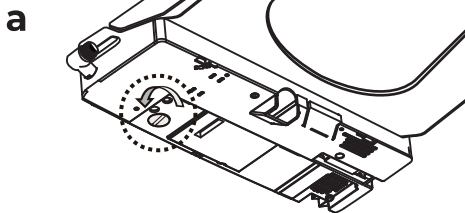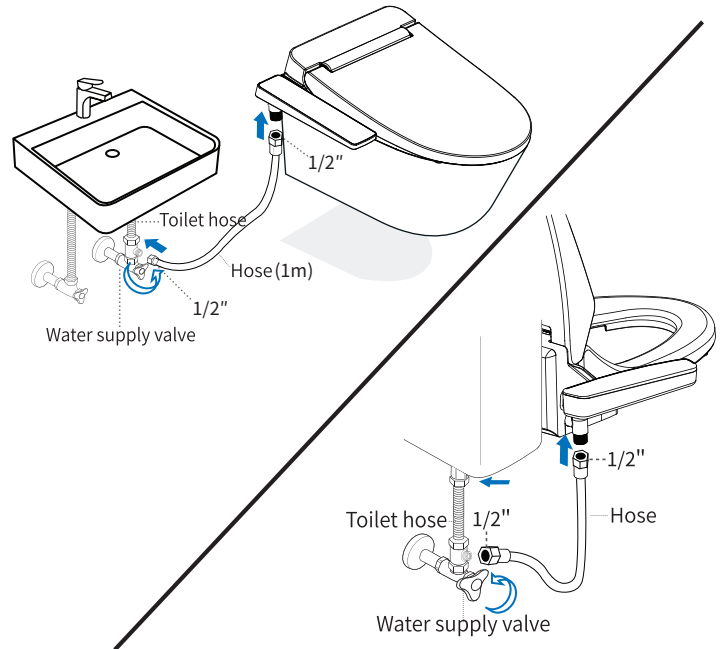

- Drain off the water from the water tank when not using the product for a long time, or when moving the product to another place.
 - It can cause water pollution and the leakage during transportation.

Clean the Nozzle.

Only the nozzle will extend out without spraying water.

– Use a soft brush or toothbrush to clean.


※ Do not pull out or push the nozzle forcibly. It may cause breakage or damage.



Troubleshooting

When you think the product is out of order, refer to the following for immediate measures.

Power Supply

| Trouble | Possible Causes | Solution |
|--------------------------|--|--|
| The unit is not working. | Is the power out or is the circuit breaker off? | Wait until the power is restored. Or turn on the circuit breaker. |
| | Is the operation lamp on the display panel of the main body off? | Turn on the power  in the control panel of the main body. |

Posterior Wash, Feminine Wash, Turbo Wash Function

| Trouble | Possible Causes | Solution |
|-------------------------------|---|---|
| Water pressure is weak, | Is the water pressure set to low level? | Adjust the water pressure to higher level. |
| | Is the strainer filter clogged? | Clean the strainer filter. |
| Water is cold. | Is the temperature set to a low level? Or is it turned off? | Adjust with Water temperature on the remote control. |
| | Is it in power saving mode? | The water temperature is set to lower level. the temperature goes up after sitting. |
| Water spray stops during use. | The washing stops 1 minute after pressing the Posterior, Feminine and Turbo button. | Press the Posterior, Feminine and Turbo button once more. |
| | Seat sensor is not sensing human body. | Check the position of seat sensor on page 6 to 7. |

Heated Seat

| Trouble | Possible causes | Solution |
|----------------------------|--|--|
| The seat does not warm up. | Is the temperature of the seat OFF or set to low level? | Control the seat temperature on the control panel. |
| | Is the bidet in Energy save mode? | The seat temperature is kept at 30°C at Energy save mode. This will automatically return to the preset temperature after seated. |
| The seat has become cold. | The heater turns off automatically 1 hour after you sit on the seat. When you stand up, the heater will turn on again. | — |

Seat Sensor

| Trouble | Possible causes | Solution |
|--|---|--|
| The posterior wash or deodorant function work without sitting on the seat. | Is the seat wet or occupied by wet towel? | Wipe off the water. Remove the wet towel. |

Power Saving

| Trouble | Possible Causes | Solution |
|------------------------------|---|---|
| Power saving is not working. | Is it unplugged? Did you change the batteries? | Reset the setting by pushing the power saving button from the control panel |

Remote Control

| Trouble | Possible Causes | Solution |
|--------------------------------|---|--|
| Remote control is not working. | Is the battery running down? | Replace old batteries with new ones. |
| | Is the polarity of battery misplaced? | Insert batteries in order. |
| | Is the transmitter, or the receiver of the remote control blocked? | Remove the objects blocking the transmitter. |
| | Is the transmitter, or the receiver of the remote control contaminated? | Wipe off the dust or water stain. |
| | Is human body out of the location of seat sensor? | Refer to the location of seat sensor on page 6 to 7. |

Additional Installation Guide

Adjustment method using gap plate between pottery(toilet) and seat

When there is a gap between the inside of the seat and pottery(toilet)



Press this button to remove the bidet



1

Place the catch plate as shown



2

Combine the seat by pushing the plate



3

Minimize the gap between the bidet and the tank, and install the seat backward

When there is a gap between the outside of the seat and pottery(toilet)



Press this button to remove the bidet



1

Place the catch plate as shown



2



Combine the seat by pushing the plate



3

Install the seat as forward as possible

Specifications

| Model No | |  VB-6000SE VB-6100SR |  VB-4000SE VB-4100SR |
|------------------------------|--|---|---|
| Item | | | |
| Rated Power Supply | AC 230V~, 50/60hz | | |
| Rated Power Consumption | 1200W | | |
| Water Supply System | Direct connection with tap water | | |
| Water Pressure | Min : 1.0kgf/cm ² (0.1Mpa, 14psi), Max : 7.5kgf/cm ² (0.75Mpa, 105psi) | | |
| Waterproof Rating | IPX4 | | |
| Power Cord Length | 1.2M (4ft) | | |
| Wash Unit | Water Heating | Tank Reservoir | |
| | Posterior Wash | Maximum 800cc | |
| | Feminine Wash | Maximum 800cc | |
| | Turbo Wash | Maximum 800cc | |
| | Water Temperature | 36°C (97°F), 38°C (100°F), 40°C (104°F) | |
| | Heater Capacity | 1100W | |
| Heated Seat | Safety Device | Thermal cutoff, Thermo Switch, Water Level Sensor | |
| | Seat Temperature | 36°C (97°F), 38°C (100°F), 40°C (104°F) | |
| | Heater Capacity | Maximum 55W | |
| Dry | Safety Device | Thermal Cutoff, Temperature Sensor, Bimetal | |
| | Warm Air Temperature | Room temperature - maximum 45°C(113°F) | |
| | Heater Capacity | Maximum 250W | |
| Deodorization | — | Automatic deodorizer | |
| Lighting | UV LED Light (Option) | | |
| Inlet Water Temperature | 5°C~35°C (41°F~95°F) | | |
| Ambient Temperature | 5°C~35°C (41°F~95°F) | | |
| Country of Origin | Made in Korea | | |
| Dimension | 535 x 390 x 130 mm (elongated) 505 x 390 x 130 mm (round) | 535 x 390 x 130 mm (elongated) 505 x 390 x 130 mm (round) | |
| Net Weight (Gross Weight) | 3.7kg 3.2kg | 3.7kg 3.2kg | |

Limited Warranty

The product is warranted for two year according to the description written in this warranty.

Please submit the below form online at www.vovoeu.com

| | | | |
|---------------------|-------|----------------------------|--|
| Model : | | Serial Number : | |
| Purchaser | | | |
| Company : | | | |
| Address : | | | |
| City : | | Country : | |
| Phone : | Fax : | E-mail : | |
| Dealer (Company) | | | |
| Address : | | | |
| Installation Date : | | Warranty period | |
| | | 2 years from purchase date | |

Complete the above warranty card when purchasing the product.
Check the information and keep it safe.

This warranty does not apply to the following

1. Defects and/or malfunctions from failure to properly install, operate and/or maintain the unit in accordance with the installation manual.
2. Damage from abuse, fire, flood, freeze, electrical surges, lightning strikes or any other acts of nature.
3. Damage resulting from unauthorized alterations, attachments and/or repairs.
4. If the product was not installed properly for residential use.
5. Damage from installing the unit in an environment with animals, mice or insects .
6. Damage caused by excess moisture or from water clogging the water closet.
7. Damage from not being installed in accordance with all applicable local codes, ordinances and good trade practices.
8. Color fading due to use in wrong environment.
9. Damage from consumable chemicals.
10. The warrant will be covered only when providing the date of purchase with original receipt.
11. Damage from misuse due to not following the installation manual.

WEEE Directive



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the and conditions of the purchase contract.
This product should not be mixed with other commercial wastes for disposal.



VOVO WARRANTY
TWO YEARS LIMITED WARRANTY
WATERJET BIDET PRODUCT

1. VOVO is proud to guarantee all our products with the longest, most complete coverage warranty in the electronic bidet world. Our policies are written in more detail below.

2. This warranty does not apply to the following items:

- a. Damage or loss sustained in through any natural or man-made caused beyond the control of VOVO including to fire, earthquake, flood, thunder, electrical storm, etc.
- b. Damage or loss resulting from any accident, unreasonable use, misuse, abuse, negligence, or improper care, cleaning, or maintenance of the Product.
- c. Damage or loss resulting from sediments or foreign matter contained in a water system.
- d. Damage or loss resulting from improper installation or from installation of the Product in a harsh and/or hazardous environment, or improper removal, repair or modification of the Product. (NOTE: Product model codes allow a maximum of 80 PSI. Check local codes or standards for requirements).
- e. Damage or loss resulting from electrical surges or lightning strikes or other acts which are not the fault of VOVO or which the Product is not specified to tolerate.
- f. Damage or loss resulting from normal and customary wear and tear, such as gloss reduction, scratching or fading over time due to cleaning practices, water or atmospheric condition, including but not limited to, the use of bleach, alkali, acid cleaners, dry (powder) cleaners or any other abrasive cleaners or the use of metal or nylon scrubbers.
- g. The use of any Product in a manner inconsistent with the Product instructions / owners manual.

3. In order for this limited warranty to be valid, proof of purchase is required. VOVO encourages warranty registration upon purchase to create a record of Product ownership at <http://www.vovoeu.com> Product registration is completely voluntary and failure to register will not diminish your limited warranty rights.

4. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE, PROVINCE TO PROVINCE OR COUNTRY TO COUNTRY.

5. To obtain warranty repair service under this warranty, you must take the Product or deliver it prepaid to a VOVO service facility together with proof of purchase (original sales receipt) and a letter stating the problem, email to support@vovoeu.com

WARNING! VOVO shall not be responsible or liable for any failure of, or damage to, this Product caused by either chloramines in the treatment of public water supply or cleaners containing chlorine (Calcium Hypochlorite).

NOTE: The use of high concentrate chlorine or chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

THIS WRITTEN WARRANTY IS THE ONLY WARRANTY MADE BY VOVO. REPAIR, REPLACEMENT OR OTHER APPROPRIATE ADJUSTMENT AS PROVIDED UNDER THIS WARRANTY SHALL BE THE EXCLUSIVE REMEDY AVAILABLE TO THE ORIGINAL PURCHASER. VOVO SHALL NOT BE RESPONSIBLE FOR LOSS OF THE PRODUCT OR FOR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OR EXPENSES INCURRED BY THE ORIGINAL PURCHASER, OR FOR LABOR OR OTHER COSTS DUE TO INSTALLATION OR REMOVAL, OR COSTS OF REPAIRS BY OTHERS, OR FOR ANY OTHER EXPENSE NOT SPECIFICALLY STATED ABOVE. IN NO EVENT WILL VOVO'S RESPONSIBILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR USE OR FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO YOU.

MEMO

MEMO



Customer Support
Support@vovoeu.com