

MEMORISM

MULTI-FUNCTIONAL GROOMING KIT

Model: GS5



USER MANUAL

Please read the instructions before use and keep for future reference.

CONTENTS

Introduction	01
Important Safety Instructions	01
Lists of Parts	03
Specifications	04
Before Use	04
Travel-Lock Function	05
How to Use	05
Cleaning, Care and Maintenance	11
Battery Removal	12
Limited Warranty	13

INTRODUCTION

Congratulations on your purchase and welcome to Memorism!

To fully benefit from the support that Memorism offers, please register your product at www.mymemorism.com/register

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance basic precautions should always be observed, including the following.

DANGER:

To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug it immediately from the power outlet.
2. Do not use while bathing or in the shower.
3. Do not place or drop into water or other liquid.
4. Do not place or store this appliance where it can fall or be pulled into a tub or sink.
5. Except when charging, always unplug this appliance from the electrical outlet immediately after use.
6. Unplug this appliance before cleaning.

WARNING:

 
 
 
To reduce the risk of burns, fire, electric shock or injury:

1. This appliance is for household use only.
2. The appliance should never be left unattended when it is powered on.
3. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

4. Children should not play with this appliance.
5. Use this appliance only for its intended use as described in this manual.
6. Keep the cord away from heated surfaces.
7. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
8. Never drop or insert any object into any of the appliance's openings.
9. Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
10. Keep the appliance dry.
11. Make sure the cord is disconnected from the groomer stand when not in use.
12. Do not use this appliance with a damaged or broken cutter unit as injury may occur. Always make sure blades are aligned properly.
13. Do not use an extension cord or a voltage converter with this appliance.
14. Do not wrap the cord around the appliance.
15. The power unit is intended to be correctly oriented in a vertical or table-mounted position.
16. If power supply unit is damaged, it should be replaced with new power supply unit available from the manufacturer. Please contact customer support for further instructions.
17. Warning: Class A equipment is intended for use in an industrial environment.

In the documentation for the user, a statement shall be included drawing attention to the fact that there may be potential difficulties in ensuring electromagnetic compatibility in other environments, due to conducted as well as radiated disturbances.

LISTS OF PARTS

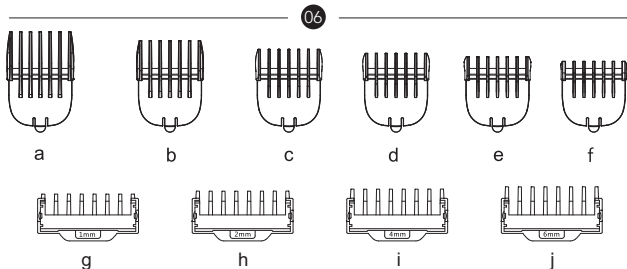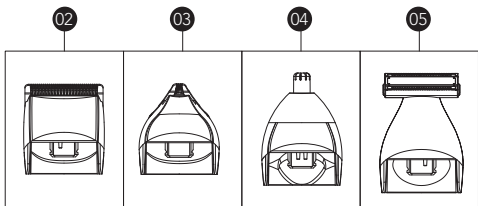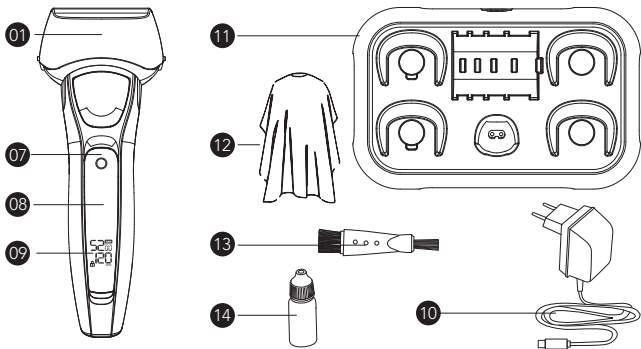

- 01 Foil shaver attachment
- 02 Full size trimmer attachment
- 03 Precision trimmer attachment
- 04 Nose & ear trimmer attachment
- 05 Body hair trimmer attachment
- 06 Six guide combs
(a-f: 12mm, 9mm, 6mm, 4.5mm, 3mm, 1.5mm)
Four body hair guards
(g-j: 1mm, 2mm, 4mm, 6mm)
- 07 ON/OFF switch
- 08 Charging indicator light
- 09 LED display
- 10 Power adapter
- 11 Charging stand base
- 12 Hairdressing Cape
- 13 Cleaning brush
- 14 Lubricating oil

SPECIFICATIONS

Product Name: Multi-Functional Grooming Kit

Product Model: GS5

Power: AC 100-240V 50/60Hz

Motor: DC 3V

Charging Time: 120 minutes

Work Time: 90 minutes

Battery Type: 600mAh Li-ion

Weight: 5 oz

Size: 7 x 1.8 x 1.5 inches

BEFORE USE

Before using your personal groomer for the first time, charge the unit for 8 hours to get better performance.

1. Connect the power adapter cord to the grooming body.
2. Plug into electrical outlet.
3. The indicator light illuminates when charging.

4. Your personal groomer cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3months), unplug it from power and store. Fully recharge your personal groomer when you would like to use it again.
5. To preserve the life of your batteries, let them run out every six months then recharge for 14-16 hours.

TRAVEL-LOCK FUNCTION

Press and hold the power button for 3 seconds to turn on the travel-lock for the clipper, the lock icon flashes to indicate the groomer locked. Press and hold again for 3 seconds to turn-off the travel-lock.

HOW TO USE

Attaching and Removing the Attachments

1. Before changing attachments, make sure the appliance is switched off.
2. Grab the sides of the attachment and align the position of A and B, pull out to remove and press in to attach. (Figure 1-5)

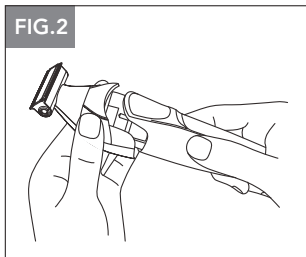 
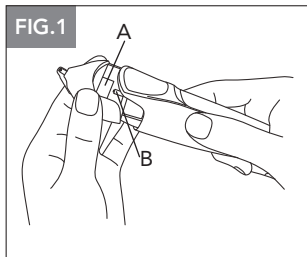 


FIG.3

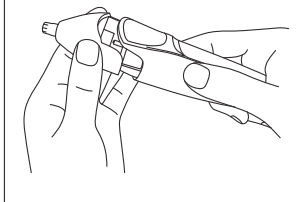 


FIG.4

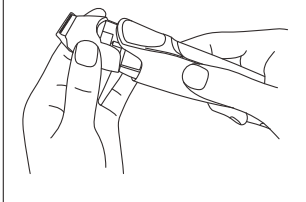 


FIG.5


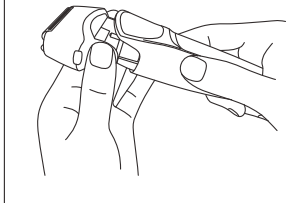 


FIG.6

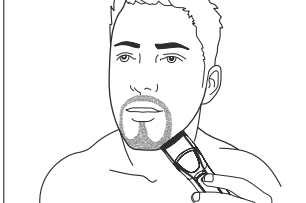 


To Define the Beard / Moustache Line (Figure 6)

1. Attach the full-size trimmer.
2. Hold the personal groomer with the full-size trimmer blade facing you.
3. Start with edge of beard /moustache line and gently lower the trimmer blade onto your skin. Use motions toward the edge of the beard/moustache line to trim to desired locations in facial area and away from beard in neck area.



To Cut Hair (Figure 7)

 1. Attach the full-size trimmer.
2. Attach a guide comb to the full-size trimmer. If you are trimming for the first time, start with the maximum trim length setting.
3. Turn the unit on.
4. Place the flat top of the trimmer comb against the skin.
5. Slowly slide the personal groomer through the hair. Repeat from different directions as necessary.
6. If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush/rinse off.

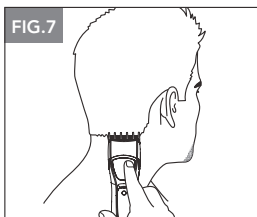

Attaching and Removing the Guide Combs

 
 
1. When changing combs, put the head in place first then snap the comb into place. (Figure 8-9)

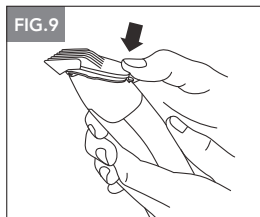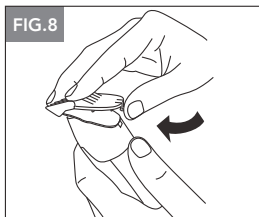

2. There are 6 guide combs with 6 lengths as below:

Number	Length (mm)
a	12
b	9
c	6
d	4.5
e	3
f	1.5

  3. Remove the guide comb from back as pictured below. (Figure 10)

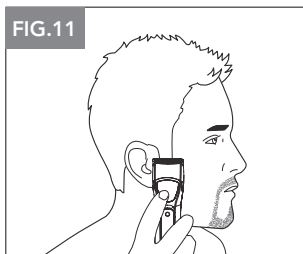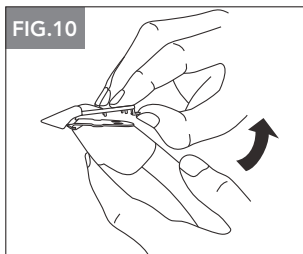

To Trim Sideburns (Figure 11)

1. Attach the full-size trimmer.
2. Hold the personal groomer with full size trimmer blade facing you.
3. Start with edge of sideburn, and with the trimmer blades resting lightly against your skin, use motions towards edge of side burn line to trim to desired locations in facial area.

To Remove Hair from Nose and Ear (Figure 12)

1. Attach nose and ear trimmer.
2. Insert the personal groomer gently into nostril or ear.
3. Gently move the groomer in and out of the nostril or ear and at the same time rotate.
4. Avoid inserting the cutting unit more than $\frac{1}{4}$ inch into your nostril or ear to prevent injury.




To Shave Beard (Figure 13)

1. Attach the foil shaver trimmer.
2. Hold the groomer so the micro shaver gently touches your face at a 45-degree angle.
3. Use short well-controlled movements to shave around your beard / moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

NOTE: The foil shaver was designed to shave the detail areas around your beard/moustache/sideburns, it was not designed to shave your entire face for a close comfortable shave.


To Remove Hair from Eyebrows (Figure 14)

 1. Attach the precision trimmer.
2. Gently guide the cutting unit to remove stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.

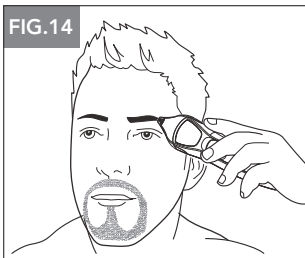



To Trim Styling Hair (Figure 15)

 1. Attach the precision trimmer.
2. To trim the hair in the efficient way, remove what shape you want.

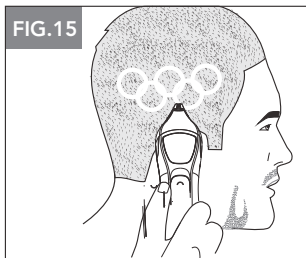

To Trim Body Hair (Figure 16-17)

  1. Attach the body trimmer.
2. You can attach the body hair guards of desired length to trim body hair. Grab the sides of guard and align the position of one side then press another side to the position until it clicks. Pull out from one side first to remove it.
3. Remove hair as the picture below shows.

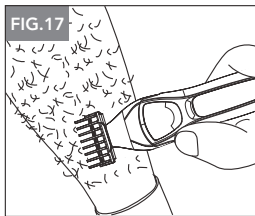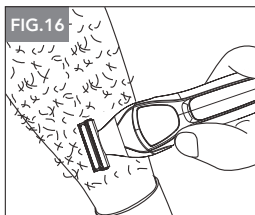

Tips for Best Results

Beard, moustache and sideburn hairs should be dry before trimming.

 
Avoid using lotions before using your personal groomer. Comb your hair in the direction that it grows naturally.

Remove guide combs if you are defining hairline edges, such as sideburns, or you are trimming the nape of your neck and beard line on the front of the neck.

CLEANING, CARE AND MAINTENANCE

1. Always clean grooming attachments regularly to ensure maximum performance and longer operating life.
2. When cleaning the appliance separate the appliance as shown in the image below. Use the cleaning brush to clear dust or hair in inside parts. (figure 18)
3. Only the guide comb attachment, body hair guard attachment and trimmer blade may be removed from the product for cleaning.

4. Cleaning should only be done with a soft brush, such as the brush supplied with the product.
5. Only use the light grade oil supplied or sewing machine oil on the blades.
6. Do not use harsh or corrosive cleaning materials on the units or their blades.
7. Do not submerge in water as damage will occur.
8. Always store this appliance and cord in a moisture free area. Do not store it in temperatures exceeding 140°F (60°C).
9. Do not wrap the cord of the charging adaptor around the appliance.

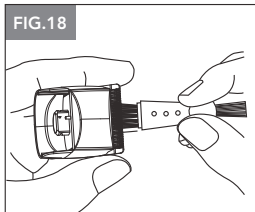


BATTERY REMOVAL

The battery must be removed from the appliance before it is scrapped or thrown away. The battery is to be disposed of safely according to local laws and regulations.

NOTE: Lift the battery out of the housing by using a scissor to cut down the connection between the body and the power line. Twist the connecting wires until they break. (figure 19)

 1. Unplug groomer from the outlet to avoid risk of electrical shock.
2. Remove rear groomer cover by first prying the rubber panel from the product with a flat head screwdriver.
3. Next, pry the back panel from the product with a flat head screwdriver. This will expose the batteries.

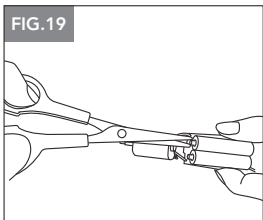

4. With wire cutters, clip the wires leading to the batteries.
5. Remove the batteries from the product. Contact your local authorities for proper disposal.
6. Do not burn or mutilate the batteries as they may burst or release toxic materials. Do not short-circuit the battery as this may cause burns.

LIMITED WARRANTY

Memorism warrants Men's Grooming Set GS5 for 1 year from the date of purchase. For more information, please visit

www.mymemorism.com/warranty.

What's covered?

Defects due to faulty materials and/or workmanship of the product.

What's not covered?

1. Damage caused by the owner when attempting to fix or altering the product by himself or herself.
2. Damage caused by misuse, abuse, neglect, alterations or unauthorized repair.
3. Natural depreciation.

Warranty Period

Warranty becomes effective from the date of original purchase and will last for 1 year.

Who's covered?

This limited warranty is only effective for the original purchaser. It is non-transferable.

How to request warranty services?

To obtain the benefit of this warranty, please email support.mymemorism.com. Our customer service team will address your issue as soon as possible!

MEMORISM



www.mymemorism.com
support@mymemorism.com

6945 Speedway Blvd Ste, H102 Las Vegas, NV 89115