

WB Pouch
User Manual v1.2

W O M B A T

WB Pouch User Interface


Click any keys here will prompt out a “Macro Dialog”, for example, “**W**”

The image shows the WB Pouch Macro Dialog interface and a keyboard. The interface includes a logo for WOMBAT Pouch, a Macro keyboard icon, and a grid of keys. A red box highlights the QWERTY keyboard layout, with a blue arrow pointing to the 'W' key. Below the keyboard layout are four function keys: PU, Ins, PD, and Del. To the right of the keyboard layout are three icons: Open, Save, and DownloadAll. A red arrow points from the 'W' key in the keyboard layout to the 'W' key in the Macro Dialog. The Macro Dialog is a window titled 'Macro Dialog' with a sidebar containing options: W, Default, Macro, Multimedia, Shortcut, Emoji, and Disabled. The 'W' option is selected. The 'Default' option is highlighted in green. The 'Cancel' and 'OK' buttons are at the bottom of the dialog.

Macros

1. By clicking “ **Default** ”, the “ **W** ” key will be set as the initial key value , that is, the letter “ **W** ”
2. Click on the “ **macro** ”, the software will change into Macro Recording, as shown below
 - ① Press the **Red circle** “ **record** ”, the button will turn into a **Gray square** “ **stop** ”, indicating that the software has now started to record the keys pressed on the keyboard
 - ② At this point, if you press any key on the keyboard , the interface will display the key you just pressed.
 - ③ Pressing a key is composed of two actions: “ **↓ press** ” and “ **↑ release** ” , so you can see the result shown in the figure below.
 - ④ When you finish recording the actions on the keyboard , press the **Gray square** “ **Stop** ” to stop recording
 - ⑤ Then press OK at the bottom to complete the keyboard macro recording

❖ **Remember !** Recorded in the software / action has not been downloaded to the keyboard , you must click “ **Download** ” on the right side of the interface , the software will download the recorded macro to the keyboard for execution , otherwise, once you switch to other editing functions , the recorded macro will be Macros may be lost and need to be redone!!

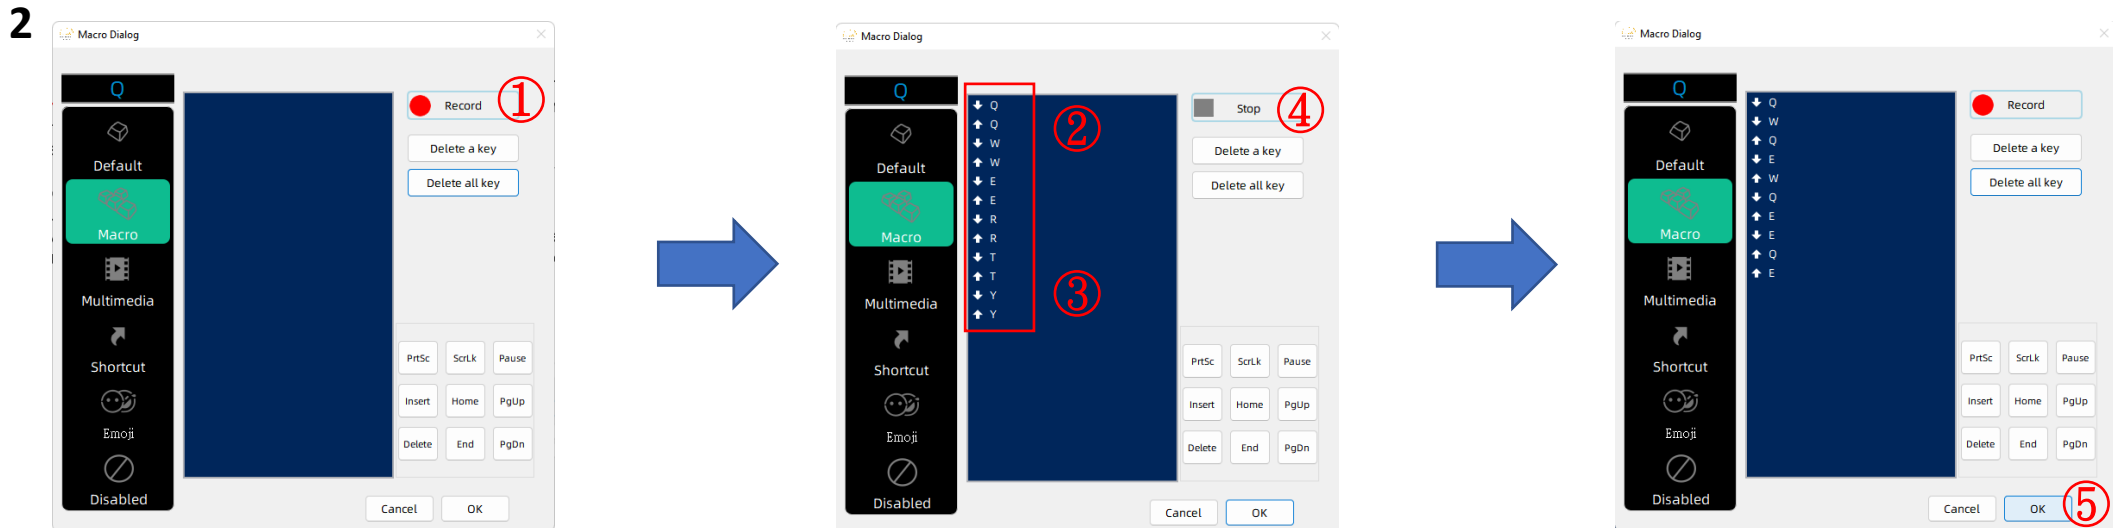

Macros

3. " **Multimedia** " and " **Shortcut keys** " are some commonly used system operation hotkeys . This software has included some commonly used operation hotkeys for selection.

4. " **Disable** " is to clear the key value. After successful setting, the key will become no code sent.

❖ After clicking the desired function, press " **OK** " below , then return to the main screen and press the " **Download** " button on the right to download it to the keyboard to take effect

5. To call the edited macro on the keyboard , now just press **Fn + the edited key**, such as Fn + " **W** " in this example.

