
# WILLOW WF102i

User Manual v1.0





# Patented 102-Key US Special Layout

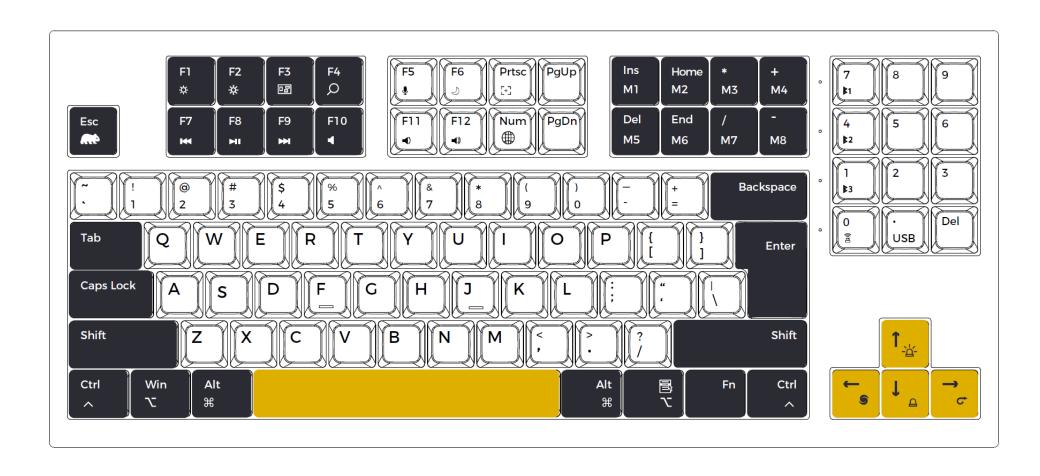


# Numpad

( <u>numeric keys can be customized</u> )

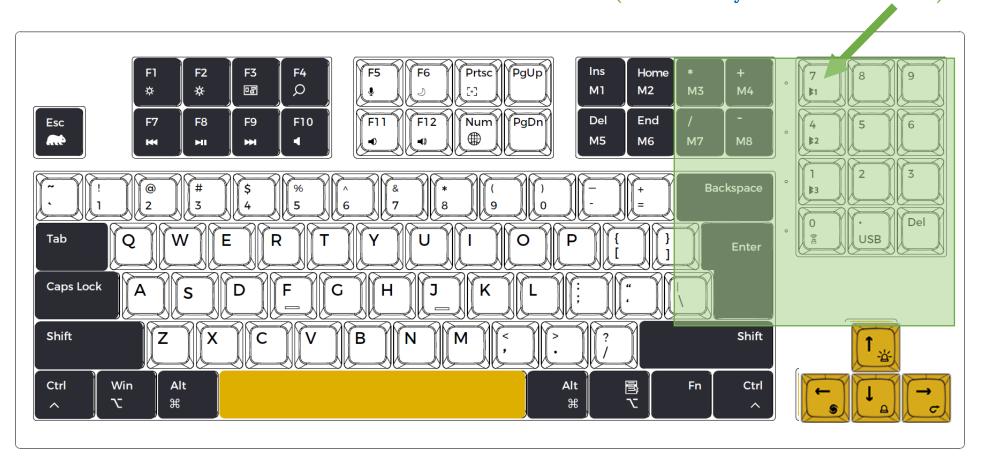

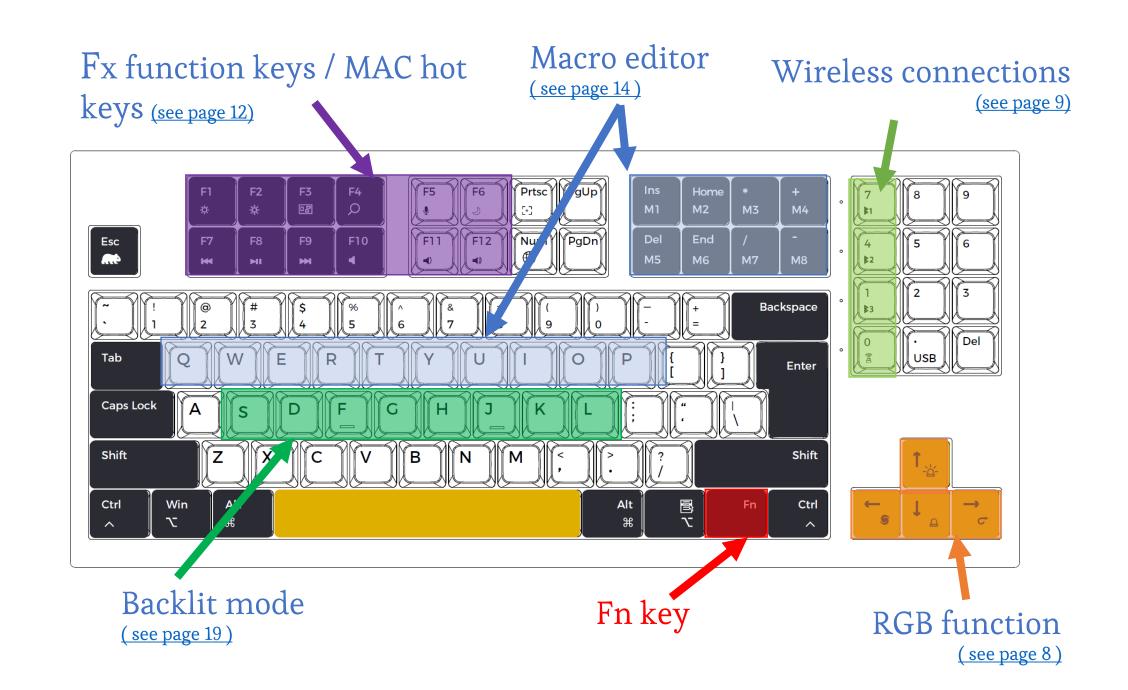


# How to switch MAC / WINDOWS layout?

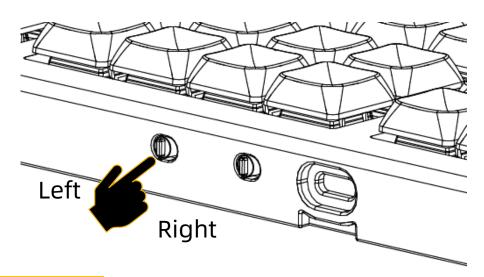

Model	odel Switch Indicator Color		Result
Wireless / Wired	Slide the rear switch to the right	No.1 LED and No.2 LED blink	Switch to macOS layout
Wireless / Wired	Slide the rear switch to the left	No.2 LED and No.3 LED blink	Switch to Windows layout


# Where's the power switch?

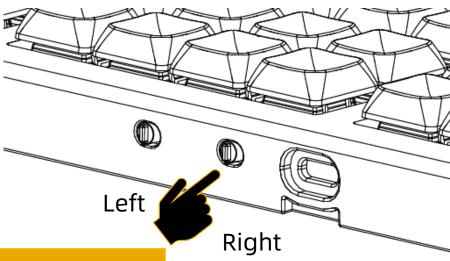

Model	Switch Indicator Color		Result
Wireless	Slide the rear switch to the right	The indicator LED is based on current wireless connection status LED on	Start keyboard
Wireless	Slide the rear switch to the left	No indicator LED	Close keyboard power supply ( Can be powered by USB to operate the keyboard )

## How to read the indicator LED?

Keys		LED	Definition
	<b>B</b> 1	No.1 LED with White LED is flashing.	WF102i Bluetooth #1
F	<b>\$2</b>	No.2 LED with White LED is flashing.	WF102i Bluetooth #2
Fn +	<b>\\\\</b> 3	No.3 LED with White LED is flashing.	WF102i Bluetooth #3
	â	No.1&2&3 LED with White LED is flashing.	RF 2.4GHz online
Press N	umlock	No.1 LED with White LED is ON.	Numpad lock
		No.1 LED is OFF. M7-M18 activate	
Press C	apslock	No.2 LED with White LED is ON.	Capslock
	ne back itch	No.1&2, 2&3 LED with White LED is flashing. Pls refer to Page 4	MAC/WINDOWS
Charging status		No.4 LED with White LED is ON.	Detected USB cable connected to the computer. Keyboard is currently charging.
		Charging status No4LED is OFF.	
		LED No. 1 and No. 3 blink alternately with LED No. 2.	Charging unsuccessful. The switch is not turned on.

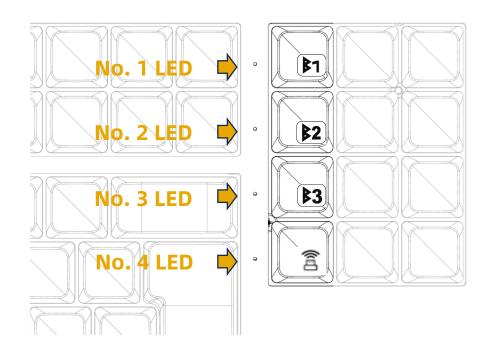


# How to check the power of the built-in rechargeable battery?

When you need to check the battery and charging status of the keyboard, please connect the WF102i to the PC with a USB cable . While the keyboard is connected to a charger or a USB communication port on the PC with a USB cable, the No. 4 LED will express the charging status as follows:


- The keyboard is charging normally and is charging, and the No. 4 LED is always on.
- The keyboard cannot be charged and the No. 4 LED blink rapidly.
- When the keyboard is fully charged, the No. 4 LED will turn from steady on to off.

After connecting the USB cable, press Fn + " Number 0" on the WF102i, and then you can see the LED No. 1-3 will express the following status:


- Battery level 0~33%: LED No. 1 LED blink
- Battery level 33~66%: LED No. 1 and No. 2 blink
- Battery level 66~99%: LED No. 1, 2 and 3 blink
- Fully charged 100%: LED No. 1, 2 and 3 are always on
- Charging failed: LED No. 1 and No. 3 blink alternately with LED No. 2.

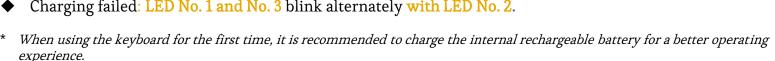


- The time required to fully charge the built-in rechargeable battery will not exceed 5 hours. It is recommended to charge the rechargeable battery at least once a month for at least 2 hours each time.
- When WF102i is connected to the PC host with a USB cable, the keyboard will automatically switch to USB mode.
- To save keyboard battery power, all LEDs will be turned off in wireless mode, and users can turn on the backlit by themselves.
- Users can press and hold Fn keys at any time to view the status of all current functions of the keyboard.

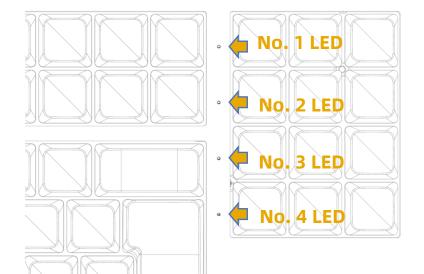

# How to switch the RGB Backlit effect?

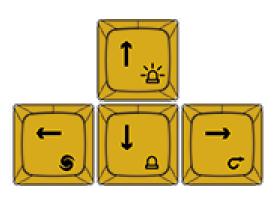

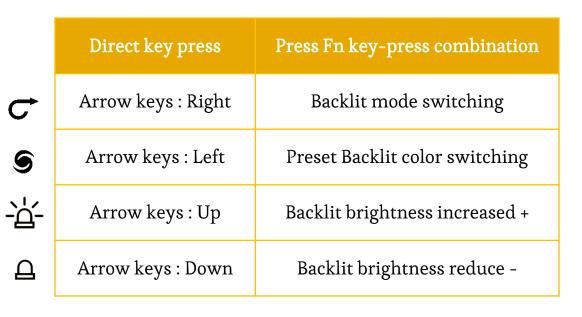

## Wireless communication 1

#### How to pair the keyboard?

Key		Step 1: Press the buttons on the left with Fn key for 3 seconds	Indicator LED (blink尸)	Step 2:	Indicator LED
	<b>7</b>	Keyboard is searching Bluetooth Host #1 for pairing	White LED	Bluetooth settings on your calculator> Search WF102i #1 in the list and click "Match"	Pairing successful  LED No.1  blink for one second
	<b>4</b> \$2	Keyboard is searching Bluetooth Host #2 for pairing	White LED	Bluetooth settings on your calculator> Search WF102i #2 in the list and click "Match"	Pairing successful  LED No.2  blink for one second
Fn+	<b>1</b> \$3	Keyboard is searching Bluetooth Host #3 for pairing	White LED	Bluetooth settings on your calculator> Search WF102i #3 in the list and click "Match"	Pairing successful  LED No.3  blink for one second
		Keyboard is searching DS102i receiver for pairing	White LED	MAC/PC, Just wait for the indicator LED to stop blinking and steadily LED on, pairing completed	Pairing successful LED No.1,2 and 3 blink for one second
	U5B	When detecting that the USB cable is connected , the keyboard switches to USB wired mode	/	No setup, plug and play	


### Wireless communication 2

#### How to pair the keyboard?

#### MAC Bluetooth settings





#### WINDOWS Bluetooth settings

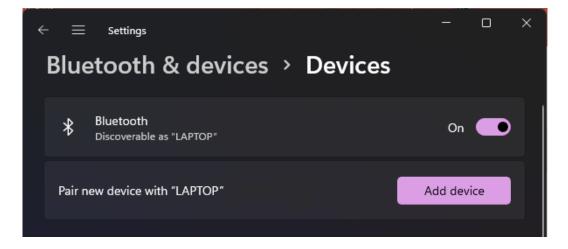

### Wireless communication 3

#### How to pair the keyboard?

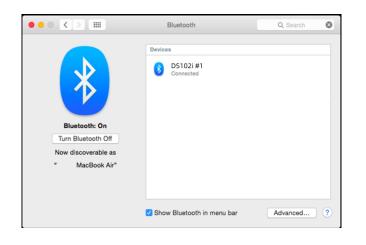

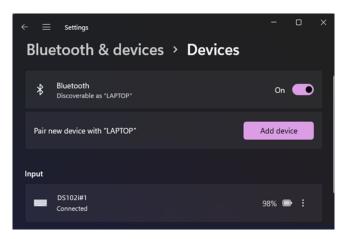

Key	Step 1 : press the buttons on the left with Fn key for 1 second	Indicator LED
<b>7</b>	Searching Paired Bluetooth Host #1	<b>LED No.1</b> blink for one second
<b>4 \$</b> 2	Searching Paired Bluetooth Host #2	LED No.2 blink for one second
<b>1</b> \$3	Searching Paired Bluetooth Host #3	LED No.3 blink for one second
(a)	Searching Paired RF Adapter	LED No.1,2 and 3 blink for one second
U5B	USB cable connection is detected Switch to USB wired mode	/

# How to switch Fx function keys and WINDOWS system hot keys?



Ì	Press Directly	Fn Key Combination
	ESC	WIN Menu / Start





Press Directly	Fn Key Combination		
F1	Screen brightness -		
F2	Screen brightness +		
F3	Launch Pad		
F4	Search		
F5	Dictation		
F6	Lock Screen		
F7	Previous track		
F8	Play / Pause	7	
F9	The next track	7	
F10	) Mute		
F11	Volume -		
F12	Volume +		





Press directly	Fn Key Combinatio n
Screen brightness -	F1
Screen brightness +	F2
Launch Pad	F3
Search	F4
Dictation	F5
Lock Screen	F6
Previous track	F7
Play / Pause	F8
The next track	F9
Mute	F10
Volume -	F11
Volume +	F12

# How to switch Fx function keys and MAC hot keys?



Press Directly	Fn Key Combination
ESC	Apple Menu





Press Directly	Fn Key Combination		
F1	Screen brightness -		
F2	Screen brightness +		
F3	Launch Pad		
F4	Search		
F5	Dictation		
F6	Do not Disturb		
F7	Previous track		
F8	Play / Pause		
F9	The next track		
F10	Mute		
F11	Volume -		
F12	Volume +		





Press directly		Fn Key Combinatio n
Screen brightness -		F1
Screen brightness +		F2
Launch Pad		F3
Search		F4
Dictation		F5
Do not Disturb		F6
Previous track		F7
Play / Pause		F8
The next track		F9
Mute		F10
Volume -		F11
Volume +		F12

## How to edit macros?

Available software " DS Commander " Come to the six keys M1-M6,



and 12 keys on the numeric pad to edit macro





Press Directly (Factory Default)	Fn Key + Combination Function Example (After Programming with DS Commander)
Del	Press Fn key and the key as shown in the M1 icon For example > Retrieve
End	Press Fn key and the key as shown in the M2 icon For example > 10 smiley faces in a row
Page Down	Press Fn key and the key as shown in the M3 icon For example > Open email
Ins	Press Fn key and the key as shown in the M4 icon For example > Enter personal EMAIL
Home	Press Fn key and the key as shown in the M5 icon For example > Enter personal mobile number
Page UP	Press Fn key and the key as shown in the M6 icon For example > Press enter 5 times in succession
Numpad 1/2/3 	Press the number lock key to unlock , then press the number key directly For example > Refresh

## How to use "WB Pouch "?

Hover the mouse cursor over the button icon at the top of the interface, and a new dialog box will automatically appear to display the default key value if it has not been edited or the previously edited key value.

as shown in the following image.

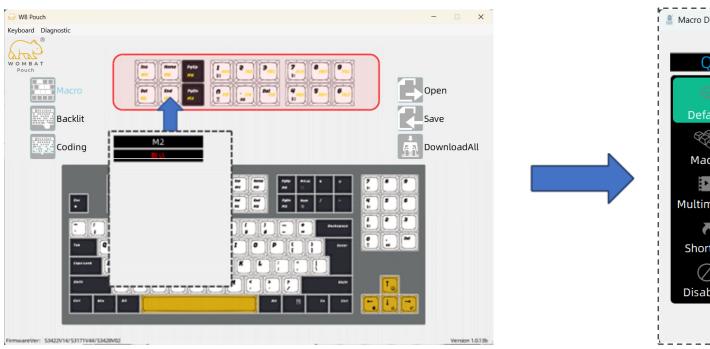


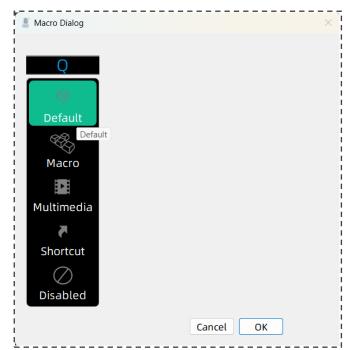

## How to use "WB Pouch "?


Taking "M2" as an example this time, there are a total of 5 options available for selection.


- ① Clicking on "Default," the "M2" key will be set to its initial key value, which is the "End" function.
- ② Clicking on "Macro," the software will switch to macro recording mode, as shown in the image on the right.
  - A. Press the red dot to start "recording," and the button will change to a gray square labeled "Stop." This indicates that the software is now recording the keystrokes on the keyboard.
  - B. At this point, if you press any key on the keyboard, the interface will display the key you just pressed.
  - C. A keystroke action consists of two actions: "↓ Press" and "↑ Release," which is why you can see the result as shown in the image below.
  - D. Once you have finished recording the keyboard actions, click on the gray square labeled "Stop" to stop the recording.
  - E. Finally, click on the "OK" button at the bottom to complete the keyboard macro recording.
  - ❖ Important note! The macros/actions recorded in the software are not yet downloaded onto the keyboard. You must click on "Download" on the right side of the interface for the software to transfer the recorded macros to the keyboard for execution. Otherwise, if you switch to other editing functions without downloading, the recorded macros will be lost and you will need to redo them.

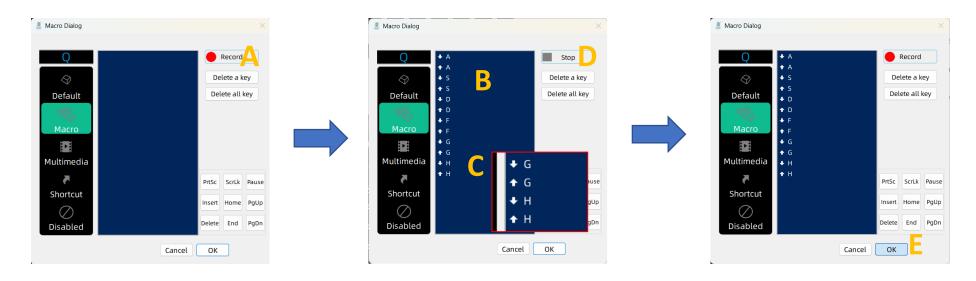

## How to use "WB Pouch "?


- ③ "Multimedia" and "Shortcut Keys" are some commonly used system operation hotkeys. This software includes a selection of commonly used hotkeys for various operations. You can click on the software's graphical icons to learn more details. It also includes hotkeys for video conferencing software.
- ③ "Disable" clears the key value. Once successfully set, pressing the key will result in no key code being sent, meaning it will behave as an empty key with no action when pressed.
- Click on the desired function, then click "Confirm" below. After that, return to the main interface and click the "Download" button on the right side to apply the changes and download them onto the keyboard.

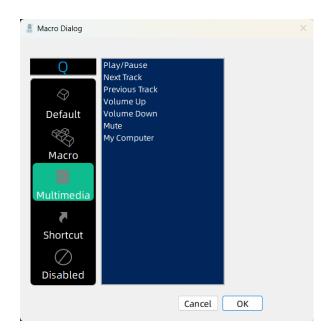

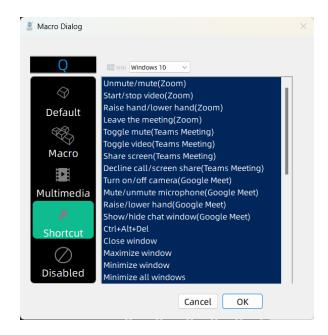



## How to use "WB Pouch"?

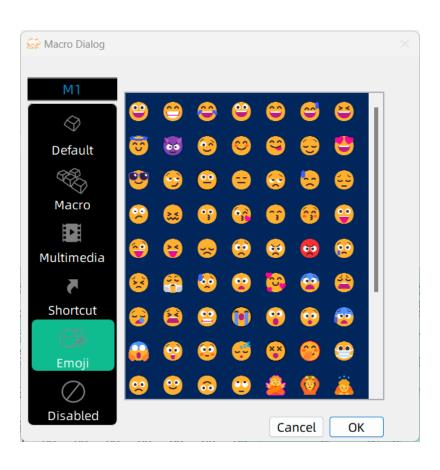

- ⑤ It is possible to program emojis into macro keys. For example, you can edit the keys on the number pad to represent different emojis. By assigning a macro to each key, you can trigger the corresponding emoji with a single key press. This allows for quick and convenient access to your favorite emoji without having to manually input them each time.
- ❖ This option will only appear when "WB Pouch" detects the corresponding model, such as WF102i this time.