HOW TO ASSEMBLE MOTOR



STEP1.


Take out filter cover and air diffuser. And open the wire cover.



STEP 3.


Screw the bolts into motor mount holes.

STEP 4. CONNECT WIRES

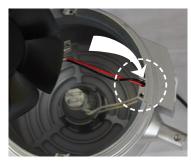

STEP 2.

Mount new motor by inserting red and black wires through the wire hole first.

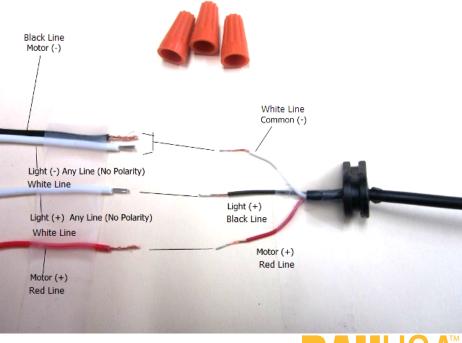

RAIIISA^m

11 AMITY ST., PATERSON, NJ 07522 973-904-3200 www.bauusa.com