










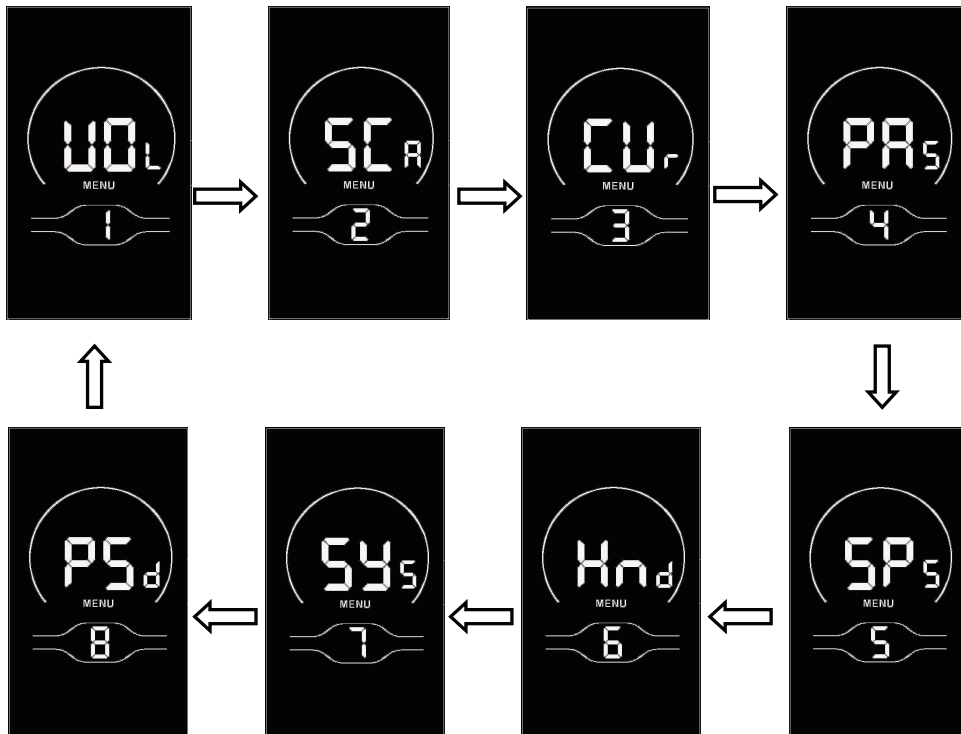

# Personalized Setting

Press and hold on + and - to enter setting mode, then press and hold + and - again to enter Personalized Setting.



Select the settings via + / - and press i to enter the corresponding setup windows.

Number	Set up the item	Specific	The screen appears
1	Battery voltage setting	Do not change	
2	Pedal assist setting	The default mode is 0-3	
3	Current limit setting	Do not change	
4	Power assist sensor setup	1. Direction of assisted rotation, F mean forward.	
		2. Power sensor sensitivity, 2 means most sensitive.	
		3. The number of magnets, do not change.	

5	Speed sensor settings	Do not change	
6	Throttle function settings	1. Walking mode setting, Y means Yes.	
		2. Throttle speed limited (do not change)	
7	System settings	Do not change	
8	Start-on password	Not unavailable	