

BERKSHIRE  
BLANKET & HOME CO<sup>®</sup>

# HEATED BLANKET

*with Hand-Held Controller*



# IMPORTANT INSTRUCTIONS DO NOT DESTROY

## **READ INSTRUCTIONS CAREFULLY**

*Be sure to read carefully the accompanying instruction booklet before using this product.*

- Do not use on infants, or people who have medical conditions or disabilities which leave them insensitive to heat.
- Do not tuck in the wired area of this product.
- Do not use if wet.
- Do not route electrical cords between the mattress and box spring.
- Do not allow the cords to be pinched.
- Keep the controller away from drafty areas that may become damp or wet such as an open window.
- Do not use pins – they may damage the electric wiring.
- Be sure that this product is used on an alternating-current supply circuit at the proper voltage.
- Turn off or unplug when not in use.
- Excessive heating may result from folding when in use.
- If product becomes damaged, discontinue use immediately and consult the manufacturer or the dealer regarding repairs.
- Do not use with rocking chairs, recliners, chairs with casters or wheels, or other furniture subject to movement.

- Do not tuck the product or supply cord in a sofa or other furniture. All portions of the product or controller should be visible at all times.
- Wrapping the cord around the controller may damage the cord. Loop loosely when storing.
- Do not use dry-cleaning fluid on this bedding, cleaning solvents may have a deteriorating effect on the insulation of the heating element.
- Do not dry clean.

## **NOTE OF PLUG**

This appliance has a polarized plug (one blade is wider than the other) as a safety feature.

This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

 


## **WASHING INSTRUCTIONS**

Wash by hand or machine wash using Delicate Cycle:

- If using a top loading washing machine, first fill with warm water.
- Add minimum amount of all-purpose detergent, agitate to dissolve, measure bedding before washing.
- Add bedding and soak five minutes. Agitate two minutes. Spin. Fill for cool rinse, agitate one minute then spin.
- Dry in automatic dryer on low heat, five minutes only, or line dry.
- Gently reshape to original size and hang on clothesline to air dry.
- Do not iron.

# CONTROLLER FEATURES

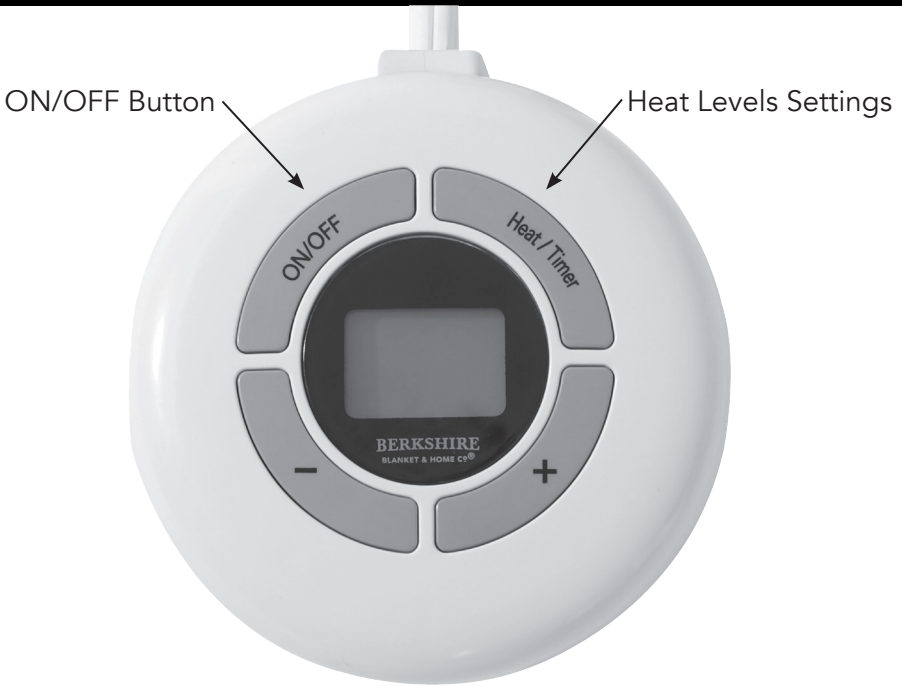

## HEAT MODE

There are 10 Heat Setting Levels, with 1 being the lowest heat and 10 the highest heat. The temperature goes up from 1 to 10 each time the + or - buttons are pressed.

## AUTO SHUT-OFF FEATURE

Controllers will automatically shut off 8 hours after being turned on. This is designed to provide added safety and conserve energy. To reactivate the heating feature simply press the ON/OFF button.

 
To restart after a power outage simply press the ON/OFF button.

# SET-UP PROCEDURE

## CAUTION

- Make sure all cords are tangle-free and not pinched in any way, including but not limited to between mattress and box spring, against wall, chairs, or other furniture.
- Do not wrap the controller in the product while in use.
- Do not use with a power generator.

## PARTS OF HEATED PRODUCT

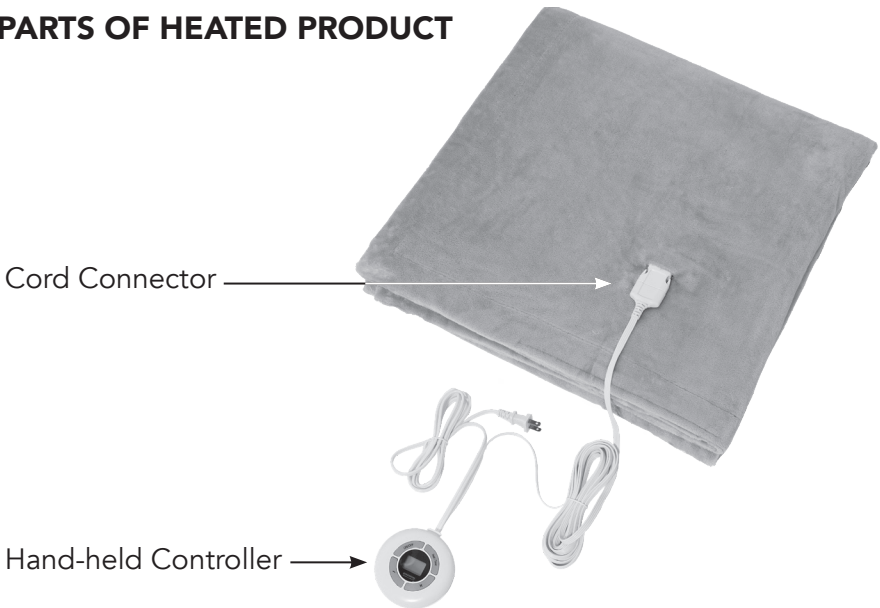


# SET-UP PROCEDURE (continued)

## STEP 1

Place blanket on the bed with controllers positioned near the head of the bed. Run the cord from the controller under bed and connect to the end of the blanket at the foot of the bed.
 
## STEP 2

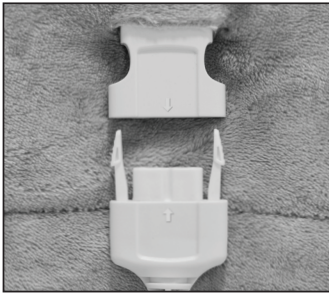

Locate cord connector on the product.

**NOTE: PLUG CONTROLLER CORD TO PRODUCT FIRST!** *Do not plug controller into the wall outlet until you have connected the controller cord to the product.*


## STEP 3



 To plug controller cord into the connector, align arrows on the connector and cord and push until they lock.

**CAUTION: CORD MUST BE COMPLETELY CONNECTED. THERE IS A RISK FOR FIRE WITH A LOOSE CONNECTION.**

## STEP 4

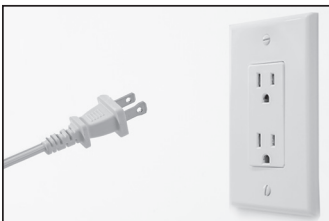

Plug the power cord into a 120V wall outlet.

## STEP 5



Turn on using ON/OFF button.

Controller will default to the lowest temperature setting.

## STEP 6



Press the HEAT/TIMER Button to switch between Heat and Timer Modes.

### In Heat Mode:

There are 10 Heating Settings with 1 being the lowest heat and 10 being the highest heat.

Temperature goes up as you move from 1 to 10 in Heat Mode using the + and - buttons.

### In Timer Mode:

There is a timer mode from 1 to 12 hours. Use the + and - buttons to increase/decrease time.

If you set **1**, product will automatically shut off in one hour. Each number up to **12** indicates the number of hours product will be on until it automatically shuts off.

## STEP 7



To disconnect the controller, first turn off using the ON/OFF button. Then, unplug the cord from the outlet, pinch sides of the connector and pull apart.

# CARE INSTRUCTIONS

## CLEANING AND MAINTENANCE

Please follow the cleaning procedures as below.

Note: before cleaning electric heated products, please disconnect the controller from the product. **DO NOT get the controller wet and do not wash with the controller attached.**

### SPOT CLEANING

- Clean the stained area with a sponge or soft cloth dipped in gentle detergent.
- Repeat using clean water and then dry with an absorbent towel.

### HAND WASH

- Add mild detergent to clean water and soak the product.
- After 5 minutes of soaking, take out and lightly squeeze out excess liquid. Do not twist or wring.
- Rinse with lukewarm water. Lightly squeeze out excess liquid. Do not twist or wring.

### MACHINE WASH

- This product can be washed in a non-commercial washing machine only.
- Use Delicate Cycle with all-purpose laundry detergent.
- Water temperature should be kept under 86°F/30°C.
- Do not rinse on high speed.
- Do not wash the controller.



## LINE DRYING

- Reshape and hang the product on clothes line evenly to dry naturally.
- Do not use clothes pins.



- Do not dry clean or iron.
- Warning: do not twist or wring.
- Warning: disconnect and remove the controller from the product before washing.
- Warning: do not soak the controller in any liquid.
- Warning: do not use the product when it is not fully dried.

## STORAGE

- Disconnect the controller from product prior to storage.
- Allow this product to cool before folding and storing it, as you would any other bedding.
- When not in use, please place the product back into the original package and store in a cool, dry place.
- Avoid storing near sharp objects and avoid placing heavy objects on top.



Please attach the cord to this product **before** plugging the cord into the electrical outlet.

## **My product doesn't work? What could be possible causes?**

- Controller is not properly connected or is loose: Check whether the controller is properly connected.
- Wall plug is loose: Check if the plug is properly plugged in all the way.
- Product shut off by timer: Turn on using ON/OFF Button.
- Product is damaged: Unplug and contact Customer Service.

## **My heated product isn't warming up enough / inadequate heating. What can I do?**

Perhaps the heating mode/temperature is not high enough, adjust setting to a higher level.

## **My remote is not working. How can I get a replacement?**

If your remote is not working, you can follow our Quality Claims Procedure. We will request photographic proof of the issue you are experiencing, and we will either have you send it back at no charge so we can inspect the item or ask you to dispose of it. We will then have a replacement remote shipped to you free of charge.

## **I want a longer cord for my heated product. Can I purchase a longer one?**

We do not currently carry remotes with cord lengths that vary.

## **What does a blinking "F" on my remote's LCD screen mean?**

Try unplugging, disconnect from the heated product, then reconnect and plug the remote back in to the wall. If this doesn't work, please register for our replacement warranty, follow our Quality Claims Procedure, and we will either send you a new remote or provide a coupon code for you to purchase a new heated product on our website free of charge.



**DO NOT RETURN THIS PRODUCT TO PLACE OF PURCHASE!**

## **TO REGISTER PRODUCT**

For more information or to register your heated product, please visit [berkshireblanket.com/heated](http://berkshireblanket.com/heated).

## **WARRANTY**

This product comes with a 5-Year Limited Warranty.

Berkshire Blanket & Home Co. warrants its heated products (featuring Intellisense™, PerfectHeat™ and other technologies) will be free from defects in materials and workmanship for five years from the original date of purchase. This warranty covers the controller, wiring and the product itself. This warranty does not cover abuse, accident or damage resulting from failure to follow included care and use instructions and manuals, use of improper voltage/current, or modifications/repairs to the product not performed by the manufacturer. Any attempts to repair or adjust any electrical or mechanical functions on this product will void this warranty.

Keep the original sales receipt or order confirmation. Proof of purchase is required to begin a warranty action and to issue a Return Merchandise Authorization (RMA). Berkshire Blanket & Home Co., at its discretion, will repair or replace this product or any component of the product found to be defective during the warranty period. Berkshire Blanket & Home Co. may choose to issue a credit adequate to repurchase of the same or similar valued product.

To the extent permitted by law: (a) this warranty is in lieu of all warranties, express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose; and (b) all other implied warranties and any liability not based upon contract are hereby disclaimed and excluded.

To the extent permitted by law, in no event shall Berkshire Blanket & Home Co. be liable for any indirect, punitive, incidental or consequential damages, or special damages, regardless of whether a claim for such damages is based on warranty, contract, negligence or otherwise. To the extent permitted by law: Berkshire Blanket & Home Co.'s liability is limited to the heated product itself and in no event shall Berkshire Blanket & Home Co.'s liability to the purchaser for damages hereunder exceed the purchase price of the products in respect of which damages are claimed.

To request action under this warranty, to request an RMA, or if your product arrives damaged or has any other quality-related issue, please contact us right away at [berkshireblanket.com/heated](http://berkshireblanket.com/heated), email [customer care@berkshireblanket.com](mailto:customer care@berkshireblanket.com) or call Customer Service at 1-800-372-2018 between the hours of 8AM-5PM Eastern Time, Monday through Friday.

# PRODUCT SPECIFICATIONS

## HEATED BLANKET WITH HAND-HELD CONTROLLER

<b>Size</b>	Twin	Full
<b>Item Name</b>	Heated Blanket	Heated Blanket
<b>Model Number</b>	LMBL-T-25	LMBL-F-25
<b>Product Dimensions</b>	62in x 84 in (157cm x 213cm)	72in x 84in (183cm x 213cm)
<b>Input Voltage</b>	AC 120V/60Hz	AC 120V/60Hz
<b>Rated Power</b>	110W	110W
<b>Timer Setting</b>	1-12 hours	1-12 hours
<b>Auto Shut-Off</b>	8 hours	8 hours
<b>Controller Model Number</b>	LMBL-T-25	LMBL-F-25
<b>Heat Settings</b>	10 Settings	10 Settings
<b>Material</b>	100% Polyester	100% Polyester

### Included in the Box:

1x Heated Blanket

Twin & Full: 1x LCD controller

Queen or Full/Queen & King: 2x LCD controllers that operate independantly

1x User Manual



**CAUTION:** This product should be only used in conjunction with the specified controller.

Queen or Full/Queen	King
Heated Blanket	Heated Blanket
LMBL-Q-25	LMBL-K-25
84in x 90in (213cm x 229cm)	100in x 90in (254cm x 229cm)
AC 120V/60Hz	AC 120V/60Hz
130W x2	110W x2
1-12 hours	1-12 hours
8 hours	8 hours
LMBL-Q-25	LMBL-K-25
10 Settings	10 Settings
100% Polyester	100% Polyester
Independently	

Prior to use, please make sure this product is free from damage. If you have any doubt, DO NOT use and contact Customer Service at:

berkshireblanket.com/heated  
email [customercare@berkshireblanket.com](mailto:customercare@berkshireblanket.com)  
or call 1-800-372-2018 between the hours of 8AM-5PM  
Eastern Time, Monday through Friday.

# FCC CERTIFIED

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or televisions reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



**Made in China**



# BERKSHIRE

BLANKET & HOME CO<sup>®</sup>

**Designed in New England**

©Berkshire Blanket & Home Co. | 44 East Main Street, Ware, MA 01082  
[berkshireblanket.com/questions](http://berkshireblanket.com/questions) | MAN1010SX