

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

FOR INDOOR OR OUTDOOR USE

- Do not use an extension cord.
- Do not install or use within 10 feet of water source (pool, bathtub, sink, etc.)
- Warning: Risk of Electric Shock, Mount higher than one foot from the ground surface.
- The product and its adaptor are intended for indoor and outdoor use. When product is used in outdoor applications, connect the adaptor belongs to the product to a Ground Fault Circuit Interrupter (GFCI) outlet available at your hardware store. If you desire a more permanent solution, please contact a qualified electrician for proper installation. This seasonal use product is not intended for permanent year round installation or use.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- **CAUTION:** This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Keep this product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use.
- Do not use with a voltage converter. Use only with adaptor plug provided.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire or light string.
- Do not close doors or windows on the products or extension cords as this may damage the wire insulation.
- Never operate this product if the power cord or plug is damaged.
- In case the external flexible cable or cord of the adaptor is damaged:
DO NOT USE THAT DAMAGED ADAPTOR, DO NOT OPEN TO REWIRE! THROW ADAPTOR AWAY.
- Use of product in extreme weather conditions if not recommended.

USE AND CARE INSTRUCTIONS

- Before using or reusing, inspect product carefully. Discard any product having cut, damaged or frayed wire insulation or cords, or exposed copper wire.
- When not in use, store neatly in a cool, dry location protected from sunlight.

This product is constructed with non-replaceable light bulbs.

Retain carton and packing material for storage purposes.

Power Cord Attachment

Plug the power cord into the back side base. Twist cap to secure connection. Plug adaptor into other end of power cord. Twist cap to secure connection. Plug adaptor into a power supply.

OPERATION (Figure 1)

Controls are located on the side of the product.

Power/Volume Dial: Turning to ON (I) position will illuminate lights and begin music playing. Music includes eight holiday songs that play in a loop until dial is turned to OFF position (O). This dial also controls volume, adjust as desired.

Timer Dial: Turning button to ON (I) position will set the timer to illuminate lights and play music for a period of six hours followed by 18 hours of lights and music off. To stop timed operation, turn dial to OFF position (O). Timed sequence will continually repeat until timer is turned to OFF position (O).



Figure 1

SET CLOCK (Figure 2)

1. Plug product into a power supply. Digital numbers flash indicating Standby mode.
2. To set Day, press **A** button, then press **B** button to increase number or **C** button to decrease number as necessary.
3. Press **A** button to move to Hour setting.
4. To set Hour, press **A** button, then press **B** button to increase number or **C** button to decrease number as necessary.
5. Repeat this procedure to set the Minutes and Seconds time.
6. Press **A** button to complete clock set.
7. Press **C** button to begin countdown.



Figure 2

COUNTDOWN CLOCK OPERATION MANUAL



← A Button = Day / Time Set Button

← B Button = Day / Time Increase Button


← C Button = Day/ Time Decrease Button



1. Once Power plug-in, red lights flash, that is, boot into standby when long press A button



2. Press B or C to set up the day. You can press B button to increase days. but press C button to decrease days.

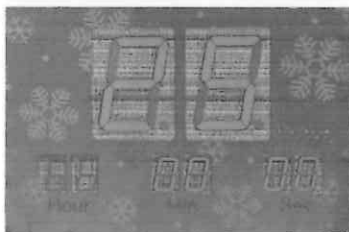


3. After DAY set-up, press A button to get into next step for Hour Set-up by pressing B button or C button to add or reduce Hour figure.



4. Once HOUR set-up, re-press A key to get into Minute Set-up by pressing B or C button to add or decrease Minute figure.



5. Repeat above steps to set up Second figure.

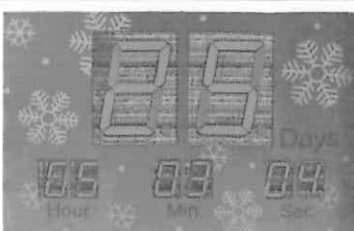

6. And then to press A button after you set up days/time again to finish all set-up steps and finally, please press C button to start countdown clock work.