 




# Quick Installation Guide

 
Cloud AP Controller




WI-AC500

www.wireless-tek.com


## Package Contents



WI-AC500 \*1

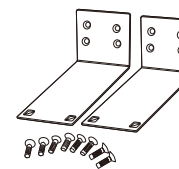 

Mounting Brackets\*2  
Screws \* 8

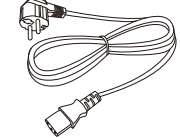 


Power Cord\*1




Installation Guide\*1

## Appearance Overview
 
### • Front Panel

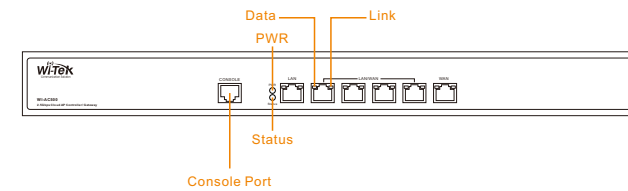

### • Rear Panel

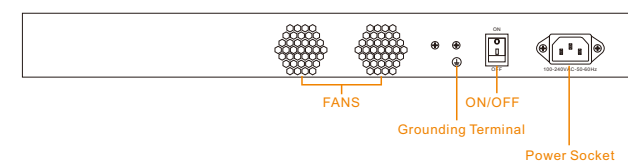 


LED	Description
PWR	On: The device is powered on. Off: The device is powered off or power supply is abnormal.
Status	Flashing or On: Disk is working.
Data (Left side of port)	Flashing: Transmitting or receiving data. On or Off: Data transmission exception.
Link (Right side of port)	On: There are devices linked to the corresponding ports. Off: No device is linked to the corresponding port.

Port/Interface	Description
LAN	10/100/1000/2500M auto-negotiation RJ45 ports for connecting to Ethernet devices.
WAN	10/100/1000/2500M auto-negotiation RJ45 ports for connecting to ISP.
Console	Reset the device via the console port.
100-240V 50/60Hz	AC power interface for connecting to the included power cord for power supply.


## Installation
 
### • Rack Installation

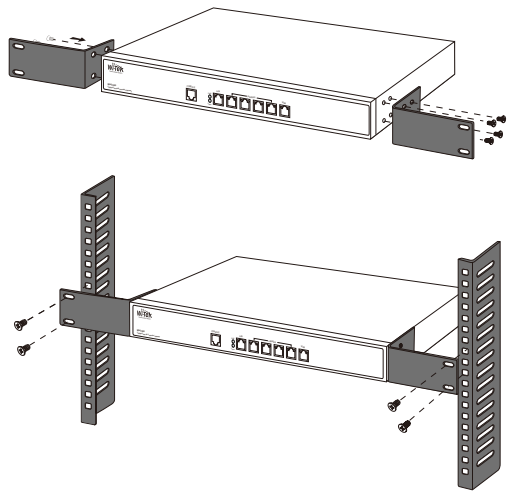


## Configuration

 
First, the device is powered on, the Internet is connected to the WAN port of the AC, the other one LAN port of the AP controller is connected to the PoE Switch, then the PC is connected to the switch. Ensure that the PC and the AC are in the same subnet.

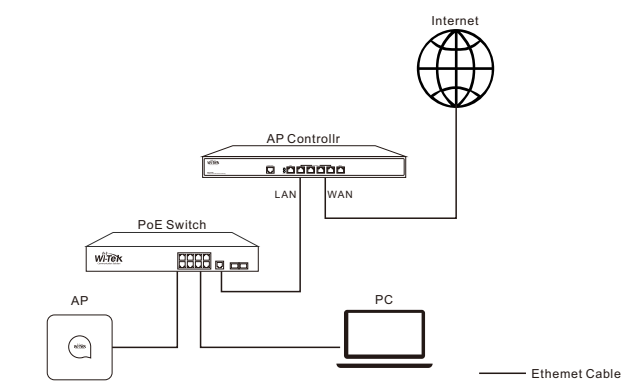

 
**Step1:** Launch a web browser and type **192.168.10.1** in the address bar, then press Enter (Windows) or Return (Mac).

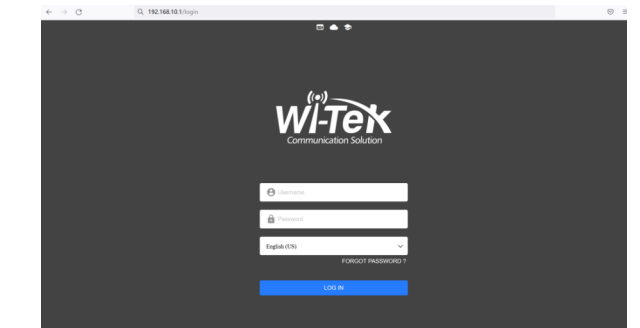

 **Step2:** Go to the web login page of the device. Enter the user name **admin** and password **admin**, and click Login.

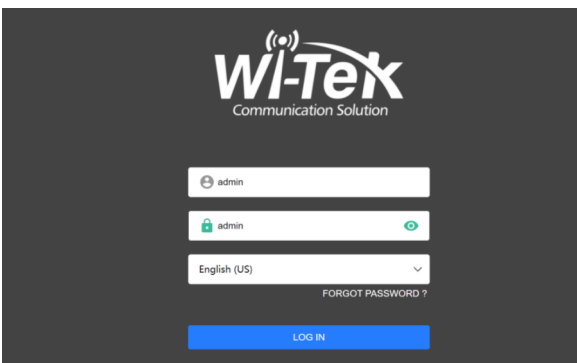

 **Step3:** Go to the **AP List** tab and devices which have been discovered by the AC are displayed. Follow the following procedure to bind AP.

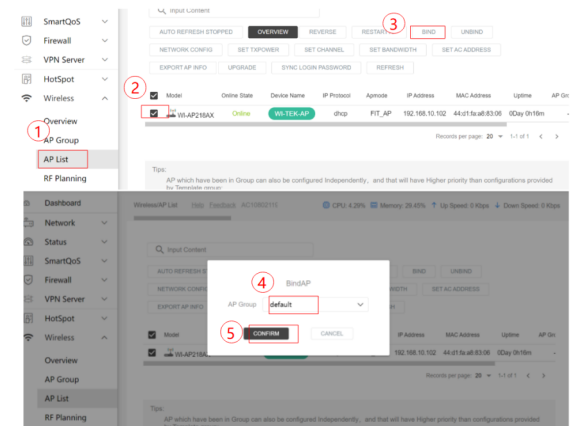

More information about AP controller configuration document, you can check from <http://support.wireless-tek.com>

## Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within three months after purchase, we will provide you a new product of the same model.
- If the product defects within the three-year warranty period, we will provide the professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disaster, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.



Wireless-Tek Technology Limited  
 Address: Biaofang Technology Building 402, Bao'an street,  
 Baoan District, Shenzhen City, Guangdong, China  
 Website: www.wireless-tek.com  
 Tel: 86-0755-32811290  
 Email: sales@wireless-tek.com  
 Technical Support: tech@wireless-tek.com

